

PARTS LIST

MST-3000VD - TIER4 RUBBER CRAWLER CARRIER

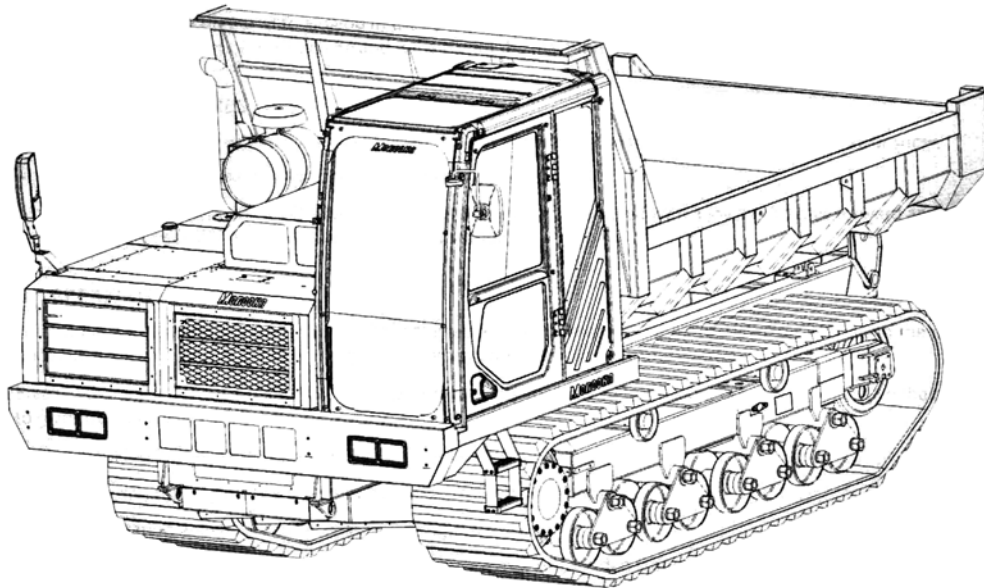

A-03625-850 - LIGHT BAR

MOROOKA

Serial No. A3003001 and Up

LIST OF FIGURES

Figure	Title	Page
01-01	ENGINE MODULE, MOROOKA QSL9 T4F CUMMINS.	01-2
01-02	HEATER HOSE	01-4
01-03	DEF TANK ASSEMBLY	01-6
01-04	DEF AND EXHAUST SYSTEM	01-8
01-05	FUEL HOSES	01-10
01-06	AIR INTAKE ASSEMBLY	01-12
02-01	FRAME AND PLATFORM	02-2
02-02	ENGINE SHROUD ASSEMBLY	02-6
02-03	MIRROR, GRILLE, AND OIL COOLER COVER	02-8
02-04	BATTERY HOOD	02-10
02-05	FUEL TANK	02-12
02-06	HYDRAULIC TANK, AIR FILTER BRACKET, AND EXHAUST MOUNTS	02-14
02-07	ENGINE COVER ASSEMBLY	02-18
02-08	CAB STEP	02-20
03-01	MOUNTING GP-PLATFORM. PO 332-4978	03-2
03-02	SUPPORT GP-SEAT. PO 305-0449	03-4
03-03	SEAT BELT GP-SEAT. PO 440-9256	03-6
03-04	SEAT AND MOUNTING GP	03-8
03-05	SEAT GP-SUSPENSION. PO316-8881	03-10
03-06	SEAT GP-HIGH BACK PO 316-8882	03-12
03-07	SUSPENSION GP-SEAT-MECHANICAL	03-14
03-08	DUCT GP-CAB AIR	03-16
03-09	FRAME GP-AIR FILTER-CAB	03-18
03-10	RADIO GP-AM/FM.	03-20
03-11	PANEL GP-SWITCH-ENGINE SPEED, START	03-22
03-12	PANEL GP-SWITCH-ENGINE START	03-24
03-13	SWITCH GP-START	03-26
03-14	WIPER GP-WINDOW-UPPER	03-28
03-15	WIRING GP-CAB-ROOF	03-30
03-16	WIRING GP-CONVERTER	03-34
03-17	PLATFORM GP-OPERATOR	03-36
03-18	HATCH GP-ROOF	03-38
03-19	HATCH GP-ROOF	03-40
03-20	MOUNTING GP-ROPS	03-42
03-21	LINES GP-WINDOW WASHER	03-44
03-22	LINES GP-WINDOW WASHER	03-46

LIST OF FIGURES (Continued)

Figure	Title	Page
03-23	CAB GP	03-48
03-24	COVER GP-CAB	03-50
03-25	CAB GP	03-52
03-26	BRACKET GP-MOUNTING	03-54
03-27	CAB GP-INTERIOR	03-56
03-28	COVER GP-CAB-REAR	03-58
03-29	COVER GP-CONSOLE-WIPER MOTOR	03-60
03-30	COVER GP-CAB-RH	03-62
03-31	DOOR GP-CAB-PARTIAL	03-64
03-32	SPACER-RUBBER	03-68
03-33	LATCH GP-WINDOW	03-70
03-34	CAB GP-EXTERIOR (SHEET 1 OF 2)	03-73
03-34	CAB GP-EXTERIOR (SHEET 2 OF 2)	03-74
03-35	MIRROR GP-REAR VIEW	03-78
03-36	LEVER GP-CAB DOOR	03-80
03-37	LEVER GP-CAB DOOR	03-82
03-38	COVER GP-CAB-EXTERIOR	03-84
03-39	BRACKET GP-MOUNTING-MIRROR	03-86
03-40	COVER GP-CAB	03-88
03-41	DOOR GP-CAB-PARTIAL	03-90
03-42	WINDOW GP-DOOR	03-94
03-44	WINDOW GP-CAB-FRONT, UPPER	03-98
03-45	WINDOW GP-CAB-FRONT, UPPER	03-100
03-46	STRIKER GP-LATCH-WINDOW	03-102
03-47	WINDOW GP-CAB-FRONT, REAR, SIDE	03-104
03-48	AIR CONDITIONER & MOUNTING GP	03-106
03-49	AIR CONDITIONER GP (SHEET 1 OF 2)	03-109
03-49	AIR CONDITIONER GP (SHEET 2 OF 2)	03-110
03-50	FOOTREST GP	03-114
03-51	CONSOLE GP - OPR	03-116
03-52	CONSOLE GP-OPERATOR-RH	03-118
03-53	ARMREST GP-RH	03-120
03-54	ARMREST GP	03-122
03-55	WIRE COVER AND WASHER TANK, CAB	03-124
04-01	A/C SYSTEM	04-2
05-01	TENSIONER ASSEMBLY	05-2


LIST OF FIGURES (Continued)

Figure	Title	Page
05-02	ROLLERS AND PLANETARY GEAR	05-4
05-03	SKID PLATE	05-6
05-04	CHASSIS STEP	05-8
06-01	PUMP, HYDRAULIC	06-2
06-02	TRAVEL MOTOR AND HYDRAULIC LINES	06-4
06-03	FILTERED HYDRAULIC LINES	06-6
06-04	OIL COOLER AND HYDRAULIC LINES	06-10
06-05	OIL TANK AND HYDRAULIC LINES	06-14
07-01	DUMP BED	07-2
08-01	ELECTRICAL 01	08-2
08-02	ELECTRICAL 02	08-4
08-03	ELECTRICAL 03	08-6
08-04	ELECTRICAL 04	08-8
08-05	BATTERY AND BATTERY CABLES	08-10
08-06	BACK-UP ALARM, HORN, AND HEADLIGHTS	08-14
09-01	DECALS	09-2
	NUMERICAL INDEX	Index-1

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 01-01 ENGINE MODULE, MOROOKA QSL9 T4F CUMMINS

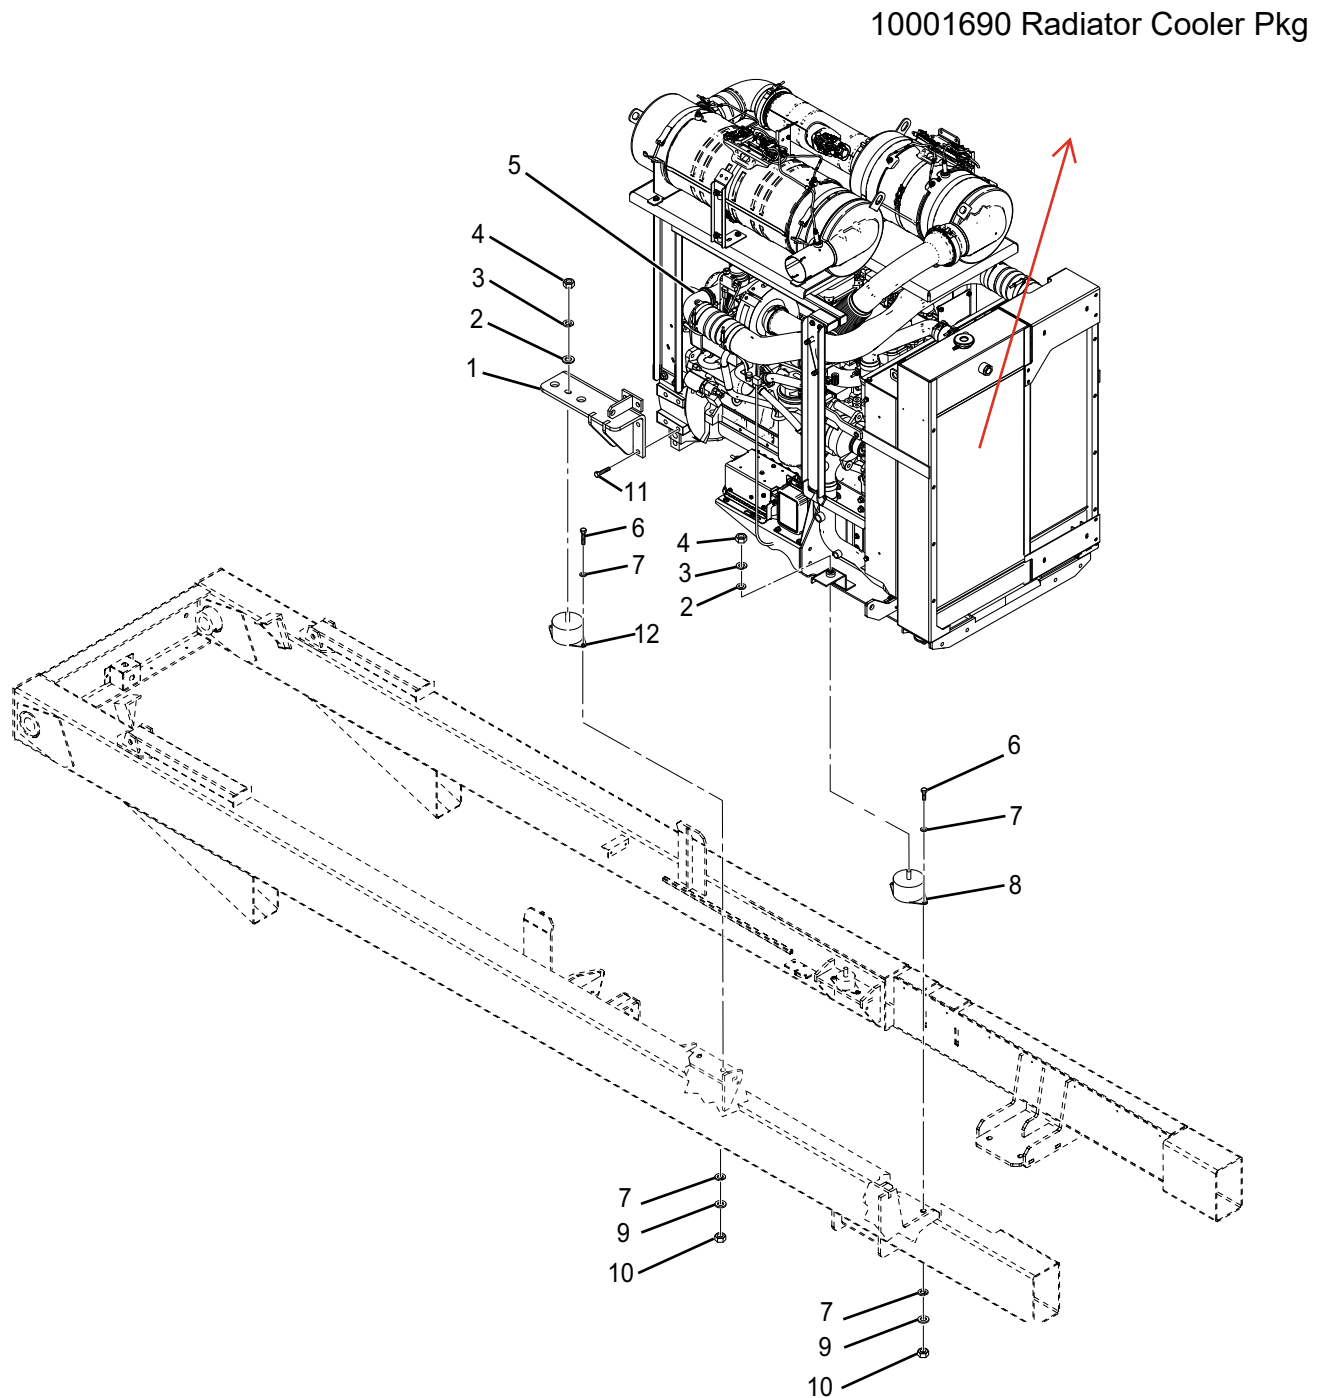

01-01

Refer to Cummins manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08011-102	RIGHT REAR CUSHION BRACKET	1	
	A-08011-101	LEFT REAR CUSHION BRACKET	1	
2	0-1140-31645	M16 WASHER	4	
3	0-1100-31640	M16 LOCK WASHER	4	
4	0-1200-31613	M16 NUT	4	
5	A-08011-700	ENGINE MODULE, MOROOKA QSL9 T4F CUMMINS	1	
6	0-1000-31240	M12 X 40 HEX BOLT	8	
7	0-1140-31232	M12 WASHER	16	
8	1-39110-1210	CUSHION FRONT	2	
9	0-1100-31230	M12 LOCK WASHER, HARDENED	8	
10	0-1200-31210	M12 NUT	8	
11	0-1050-01640	M16 X 40 FLANGE BOLT	8	
12	1-18110-1110	CUSHION REAR	2	


S/N A3003069 - ENGINE S/N 74287524 QSL9

EGR Cooler - 5566895

ENGINE FAN BELT - 3289279 changed to 5690201 (Napa Part# 25-080702HD)

Belt Tensioner - 3973819

FIGURE 01-02 HEATER HOSE

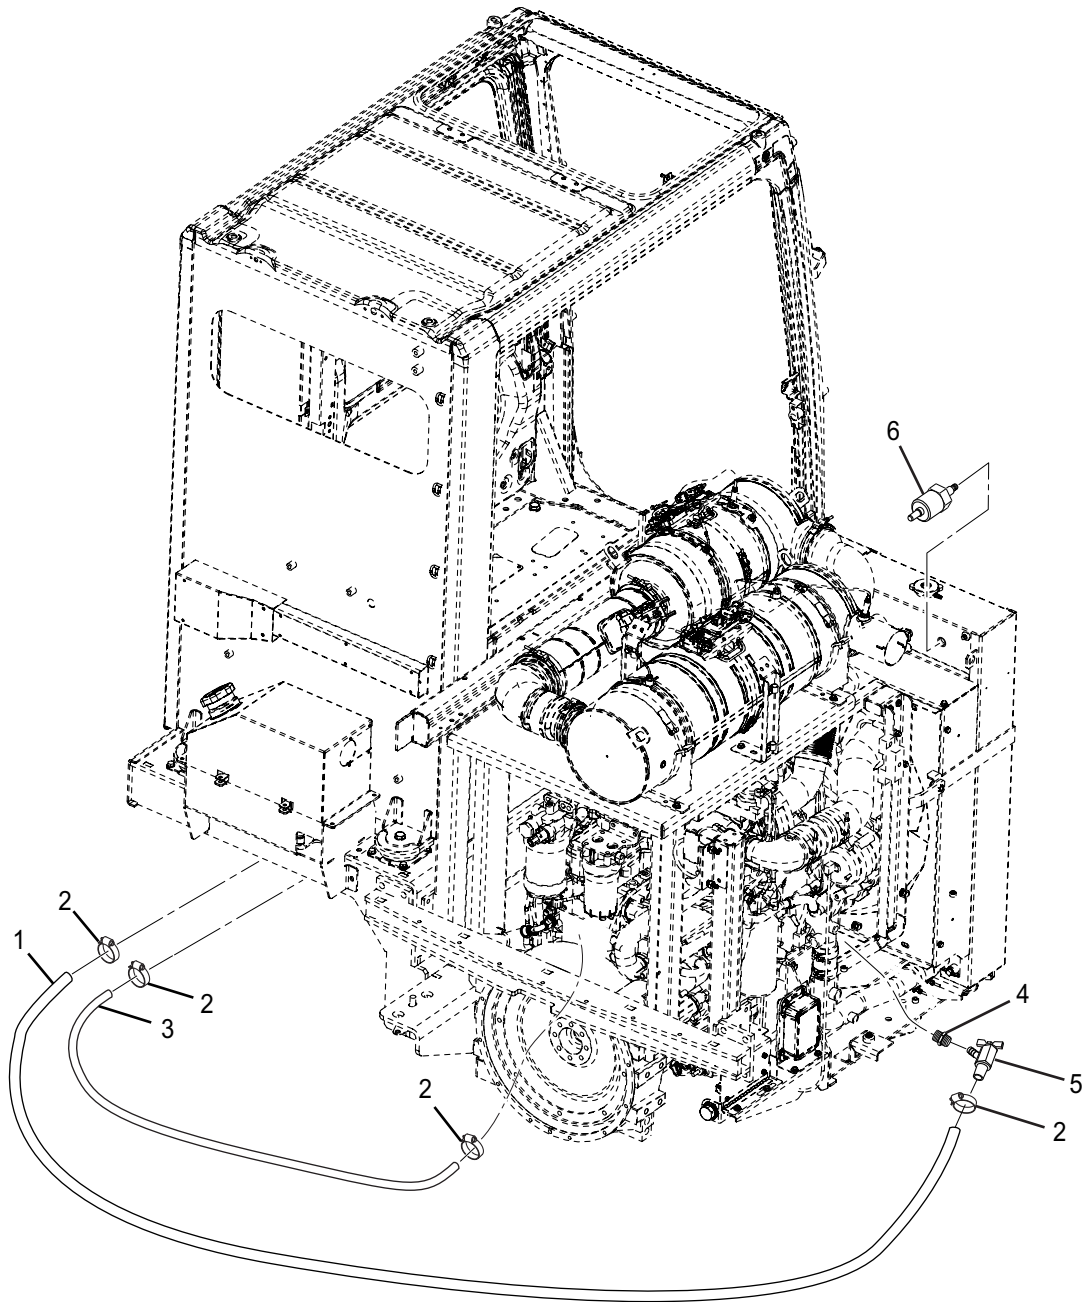


01-02

Refer to Cummins manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08091-760	HEATER HOSE	1	
2	A-04291-704	CLAMP (SAE12)	4	
3	A-08091-761	HEATER HOSE	1	
4	5406-08-06	FITTING, MALE PIPE TO MALE	1	
5	211280A	#10 ID HOSE BARB X #6 MP DRAIN COCK	1	
6	430-9449	WATER LEVEL SENSOR	1	

FIGURE 01-03 DEF TANK ASSEMBLY

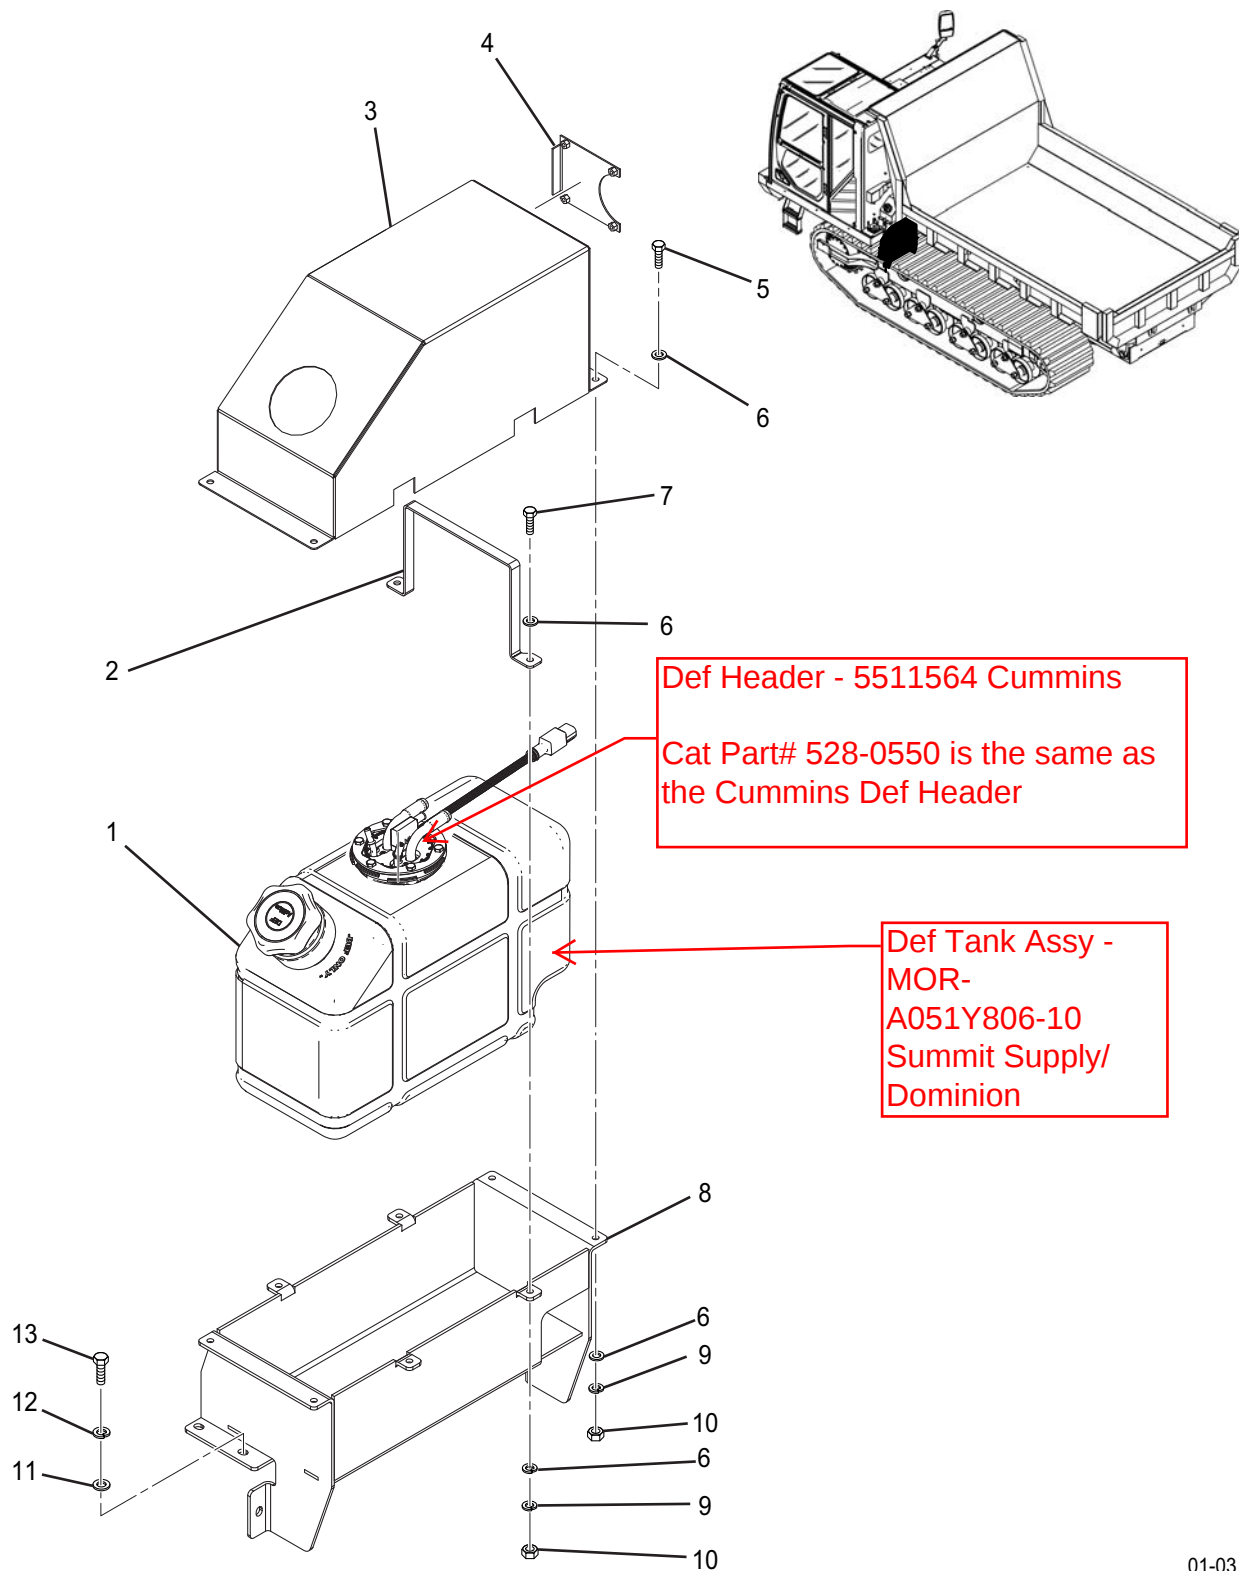


01-03

Refer to Cummins manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08017-700	DEF TANK, 5 GAL	1	
2	A-08017-208	DEF TANK STRAP	2	
3	A-08017-205	DEF TANK UPPER COVER	1	
4	A-08017-206	DEF TANK ACCESS PANEL	1	
5	0-1000-00820	M8 X 20 HEX BOLT	4	
6	0-1120-00816	M8 WASHER	14	
7	0-1000-00835	M8 X 35 HEX BOLT	4	
8	A-08017-112	DEF TANK LOWER HOUSING	1	
9	0-1100-00820	M8 LOCK WASHER	8	
10	0-1200-00806	M8 NUT	8	
11	0-1120-01020	M10 WASHER	6	
12	0-1100-01025	M10 LOCK WASHER	6	
13	0-1000-01030	M10 X 30 HEX BOLT, HIGH TENSION	6	

FIGURE 01-04 DEF AND EXHAUST SYSTEM

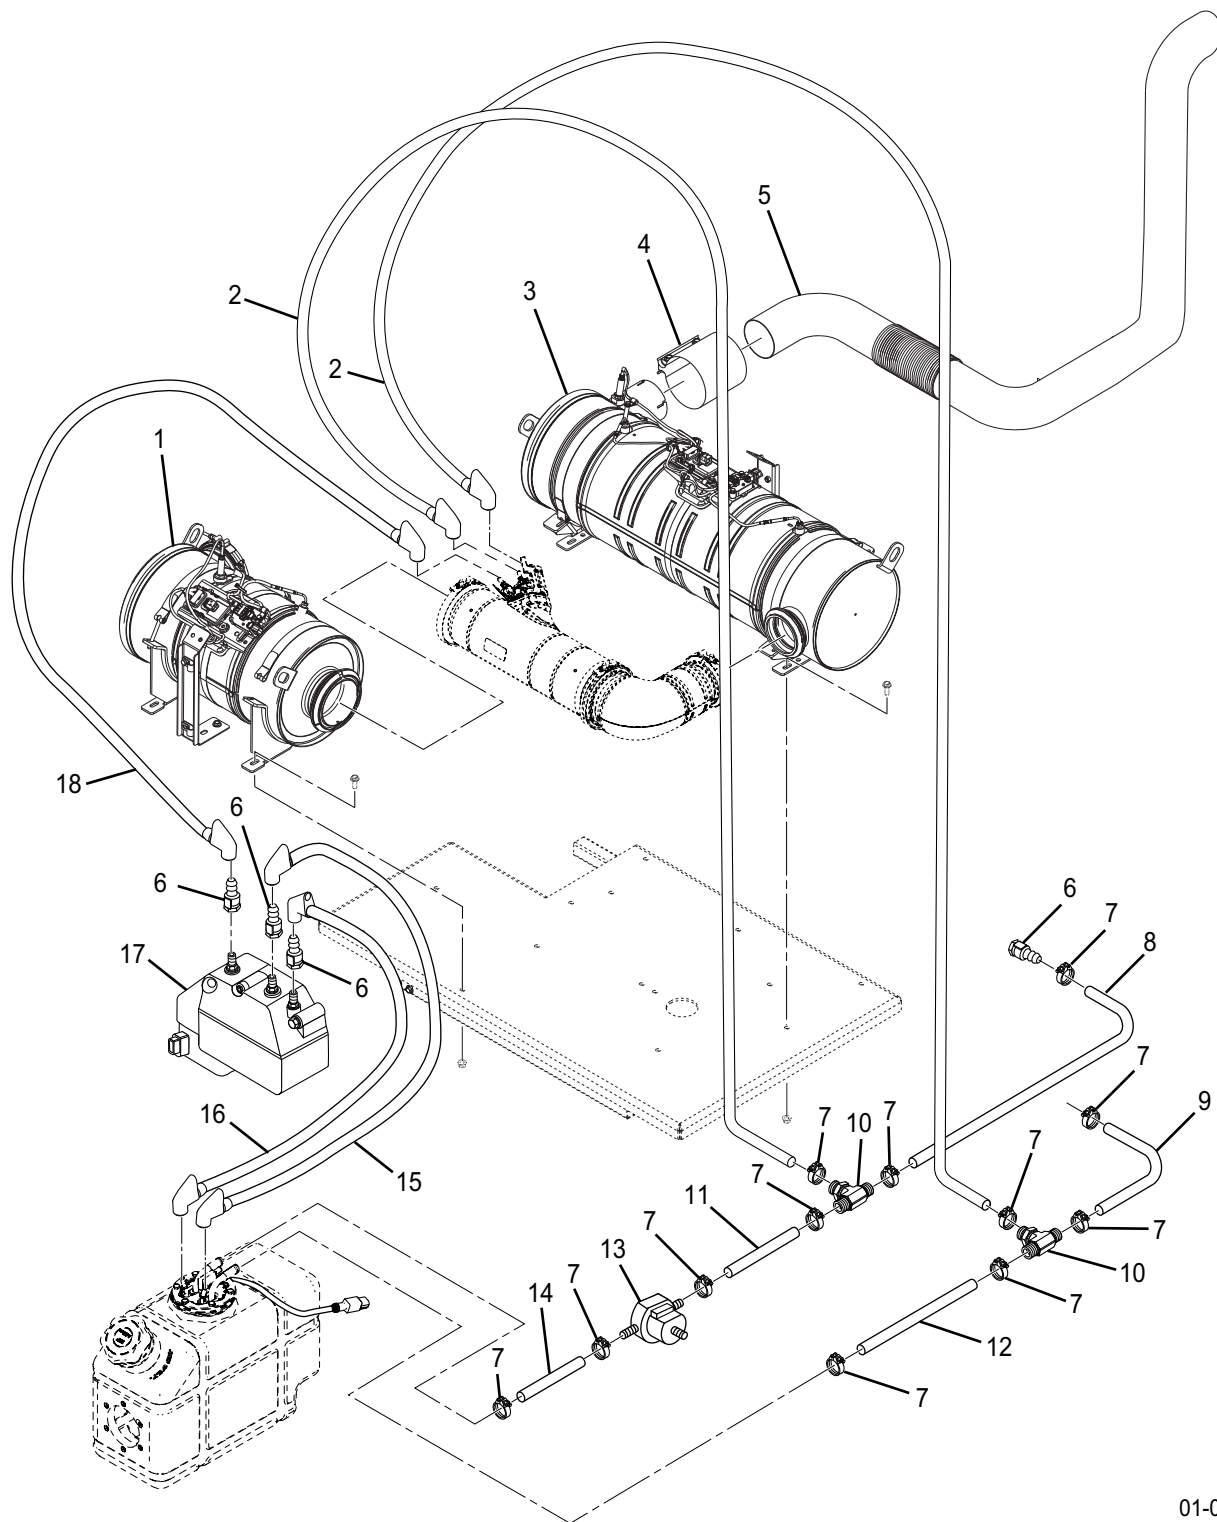


01-04

Refer to Cummins manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	10001734	DOC AFTERTREATMENT 24V, DEF	1	
2	50001930	HOSE (COOLANT LINE)	2	
3	10001736	SCR AFTERTREATMENT 24V, DEF	1	
4	A-08013-701	CLAMP 4	1	
5	A-08013-121	EXHAUST PIPE	1	
6	4404-10-12	ADAPTER	1	
7	A-04215-706	CLAMP	12	
8	A-08017-755	HOSE (COOLANT LINE)	1	
9	A-08017-756	HOSE (COOLANT LINE)	1	
10	80001395	TEE	1	
11	A-08017-757	HOSE (COOLANT LINE)	1	
12	A-08017-758	HOSE (COOLANT LINE)	1	
13	80001516	COOLANT CONTROL VALVE	1	
14	A-08017-759	HOSE (COOLANT LINE)	1	
15	50002161	DEF HOSE RETURN	1	
16	50002163	DEF HOSE SUCTION	1	
17	11001397	DEF SUPPLY MODULE	1	
18	50002162	DEF HOSE PRESSURE	1	

FIGURE 01-05 FUEL HOSES

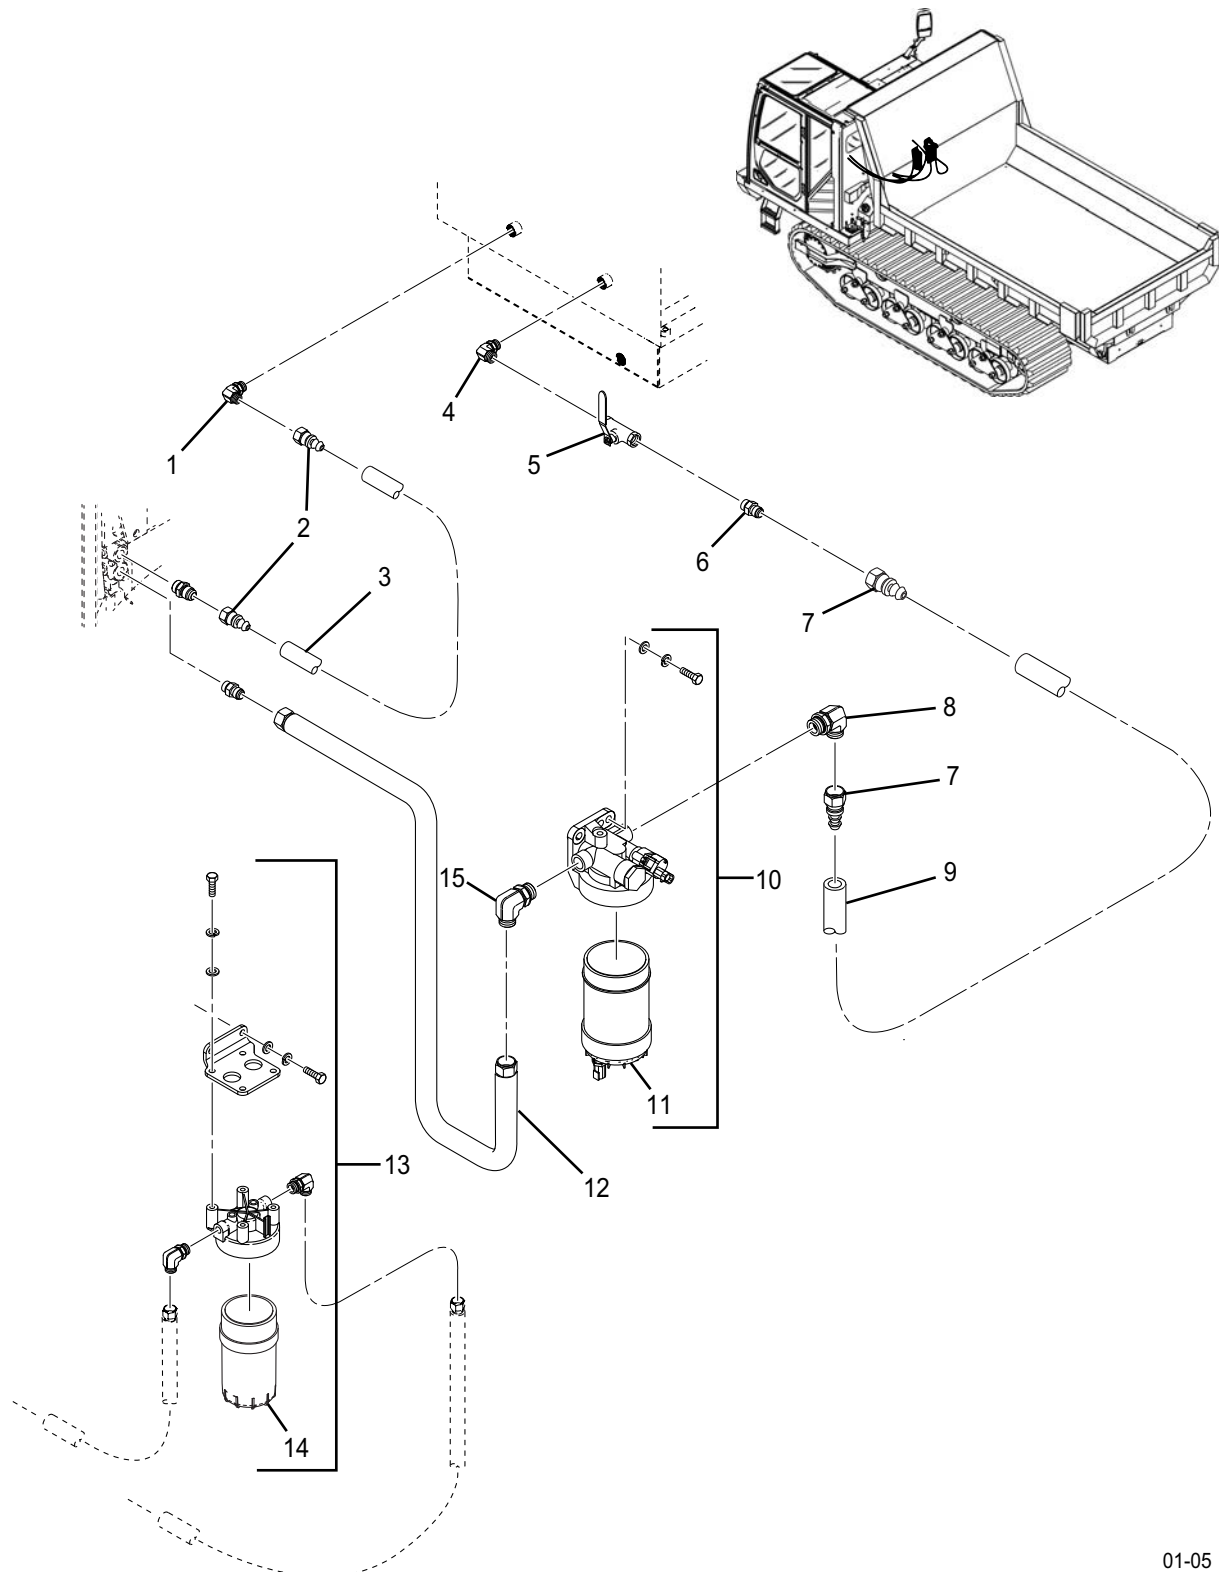


Refer to Cummins manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-05:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	2501-08-06	FITTING, ELBOW, MALE JIC TO MALE PIPE	1	
2	10008B-608	FITTING #08 FIC SWIVEL PUSH - ON	3	
3	A-08015-751	HOSE	1	
4	5500-08-08	FITTING, ELBOW, MALE PIPE TO MALE PIPE	1	
5	2BVL2008F	VALVE, FEED, SHUT OFF	1	
6	2404-10-08	FITTING	1	
7	10010B-610	FITTING, VALVE	4	
8	80001751	FITTING, ELBOW, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	2	
9	A-08015-752	HOSE	1	
10	FS90136-01	F/W SEPARATOR ASSEMBLY	1	
11	FS1098	•FUEL WATER SEPERATOR ELEMENT	1	
12	50002049	HOSE	1	
13	F90388-05	FUEL FILTER ASSEMBLY	1	
14	FF63009	•FUEL FILTER	1	
15	80001496	ELBOW (CUMMINS PART)	1	

FIGURE 01-06 AIR INTAKE ASSEMBLY

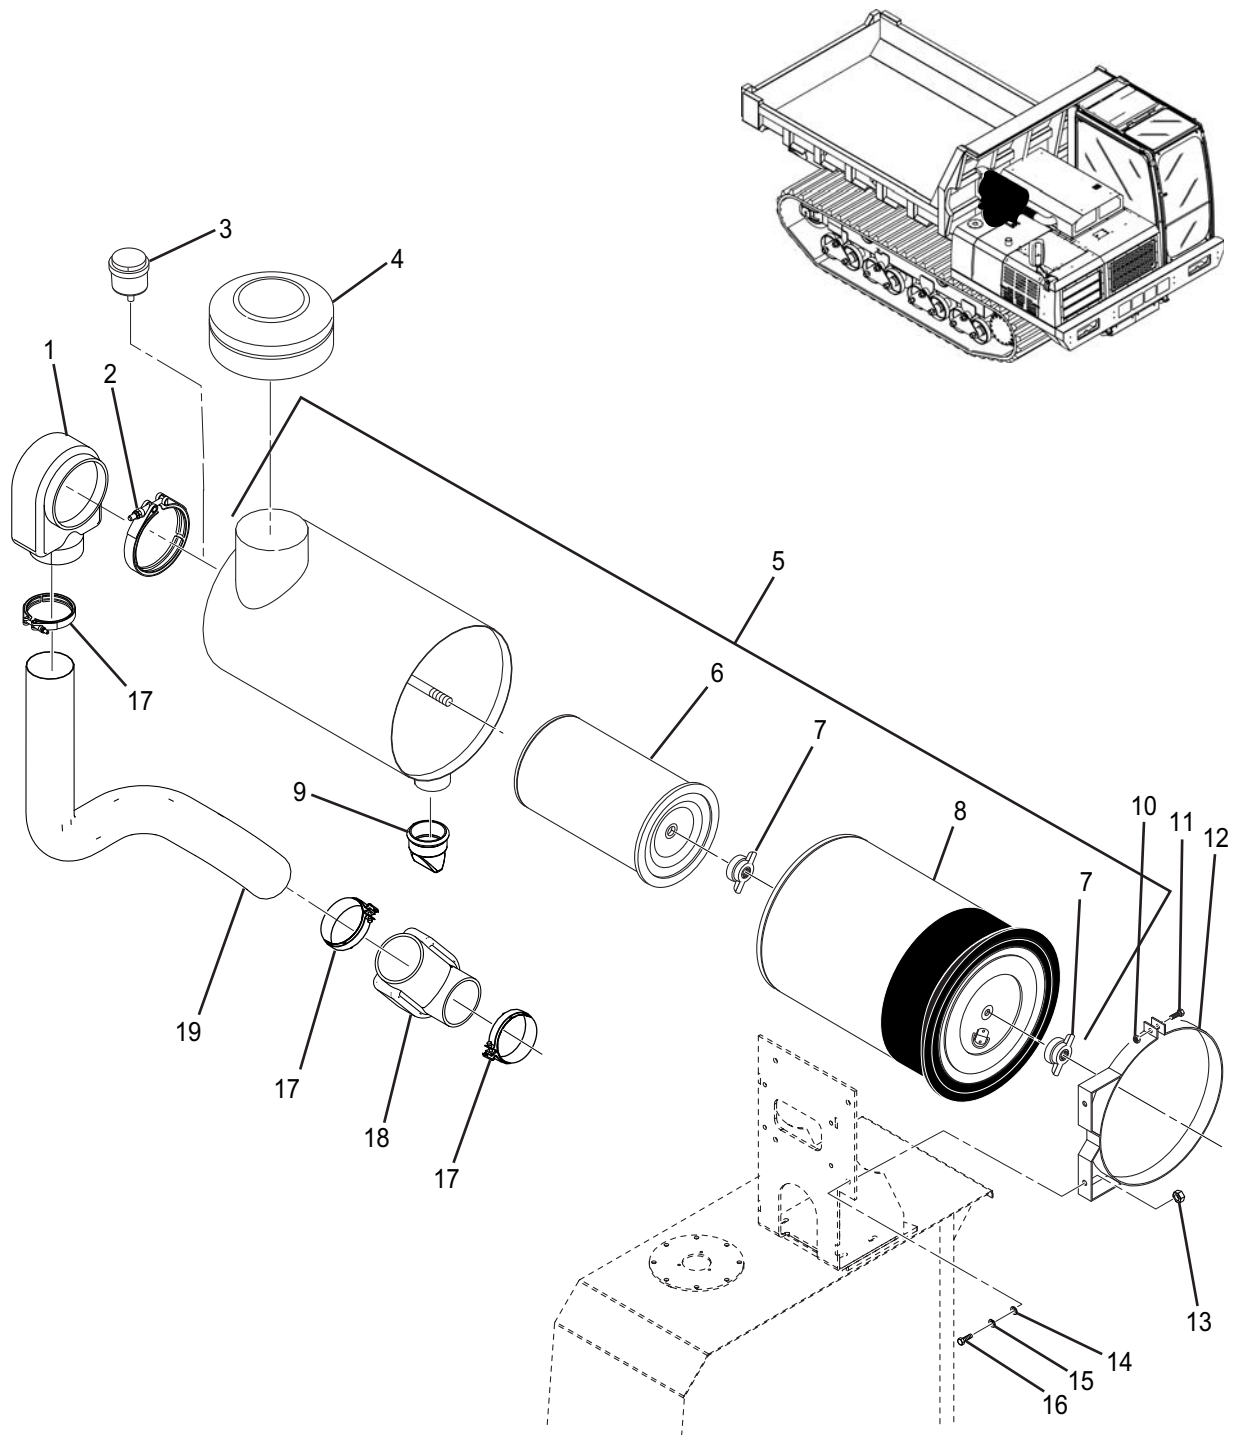

01-06

Refer to Cummins manuals for engine and DEF breakdown information.


TABLE FOR FIGURE 01-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08012-700	COBRA ELBOW 4 x 6	1	
2	A-08012-703	INTAKE PIPE CLAMP 6	1	
3	3946326S	DUST INDICATOR	1	
4	3918206S	CAP	1	
5	AH19259	AIR CLEANER ASSEMBLY	1	
6	AF1894M	•INNER FILTER ELEMENT	1	
7	3954490S	•WING NUT WITH O-RING Q56855-20	2	
8	AF1828	•OUTER FILTER ELEMENT	1	
9	3947069S	•DUCK BILL	1	
10	0-1200-31008	M10 NUT	1	
11	0-1000-01065	M10 X 65 HEX BOLT	1	
12	3918234S	CLAMP	2	
13	0-1200-31008	M10 NUT	4	
14	0-1120-01020	M10 WASHER	4	
15	0-1100-01025	M10 LOCK WASHER	4	
16	0-1000-01030	M10 X 30 HEX BOLT, HIGH TENSION	4	
17	A-08012-702	INTAKE PIPE CLAMP 4	3	
18	A-08012-701	COBRA ELBOW 4 x 4	1	
19	A-08012-125	INTAKE PIPE	1	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 02-01 FRAME AND PLATFORM

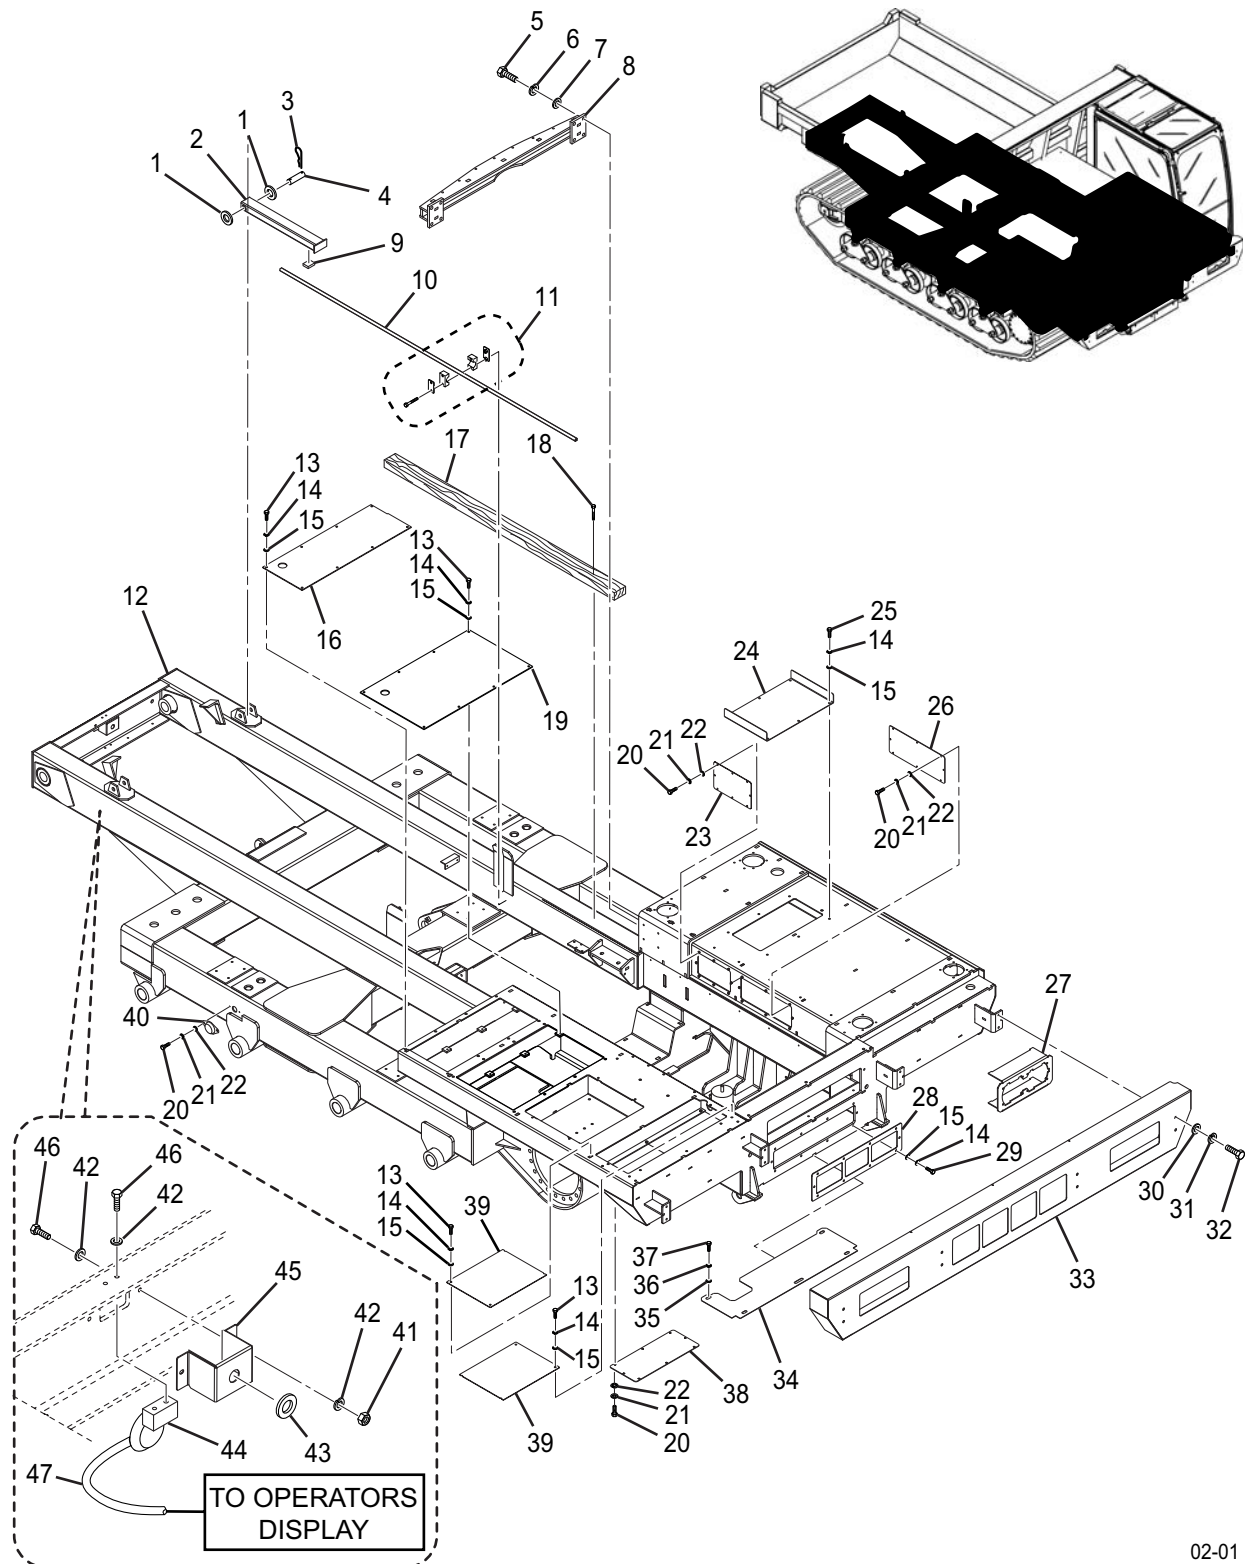

02-01

TABLE FOR FIGURE 02-01:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	0-1120-02032	M20 WASHER	8	
2	A-04271-111	SAFETY BAR	2	
3	0-3220-00532	COTTER PIN 5X32	4	
4	1-32710-1630	SAFETY BAR RETENTION PIN	2	
5	0-1000-01640	M16 X 40 HEX BOLT	8	
6	0-1100-01640	M16 LOCK WASHER	8	
7	0-1120-31645	M16 WASHER	8	
8	A-08051-101	FENDER BRACE	1	
9	1-32710-1650	RUBBER CUSHION	2	
10	A-04252-219	WIRE TUBE	1	
11	A-04252-707	CLAMP	5	
12	A-08051-100	FRAME	1	
13	0-1000-00816	M8 X 16 HEX BOLT	16	
14	0-1100-00820	M8 LOCK WASHER	32	
15	0-1120-00816	M8 WASHER	32	
16	A-04251-265	PLATE, ACCESS	1	
17	1-32510-1310	DUMP BED SUPPORT BLOCK	2	
18	0-1311-01000	M10 X 100 ALLEN PAN HEAD SCREW	4	
19	A-04251-264	PLATE, ACCESS	1	
20	0-1000-00620	M6 X 20 HEX BOLT	24	
21	0-1100-00615	M6 LOCK WASHER	24	
22	0-1120-00616	M6 WASHER	24	
23	A-04251-274	PLATE, ACCESS	1	
24	A-04251-275	PLATE, AC ACCESS	1	
25	0-1000-00820	M8 X 20 HEX BOLT	6	
26	A-04251-273	PLATE, ACCESS	1	
27	A-04251-339	HEADLIGHT BRACKET	2	

TABLE FOR FIGURE 02-01: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
28	A-04251-114	LOWER FRAME GRILLE	1	
29	0-1000-00825	M8 X 25 HEX BOLT	10	
30	0-1120-01223	M12 WASHER	8	
31	0-1100-01230	M12 LOCK WASHER	8	
32	0-1000-01230	M12 X 30 HEX BOLT	8	
33	A-08051-113	FRONT BUMPER	1	
34	A-04251-346	PLATE, ACCESS	1	
35	0-1120-01020	M10 WASHER	5	
36	0-1100-01025	M10 LOCK WASHER	5	
37	0-1000-01025	M10 X 25 HEX BOLT	5	
38	A-04251-263	PLATE, ACCESS	1	
39	A-04251-262	PLATE, ACCESS	2	
40	1-11510-1210	CAP	2	
41	0-1200-00605	M6 NUT	2	
42	0-1120-00616	M6 WASHER	4	
43	A-04252-708	GROMMET	1	
44	A-04225-710	BACK UP CAMERA	1	
45	A-04252-234	CAMERA ENCLOSURE	1	
46	0-1000-00616	M6 X 16 HEX BOLT	4	
47	A-04225-815	HARNESS, CAMERA	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 02-02 ENGINE SHROUD ASSEMBLY

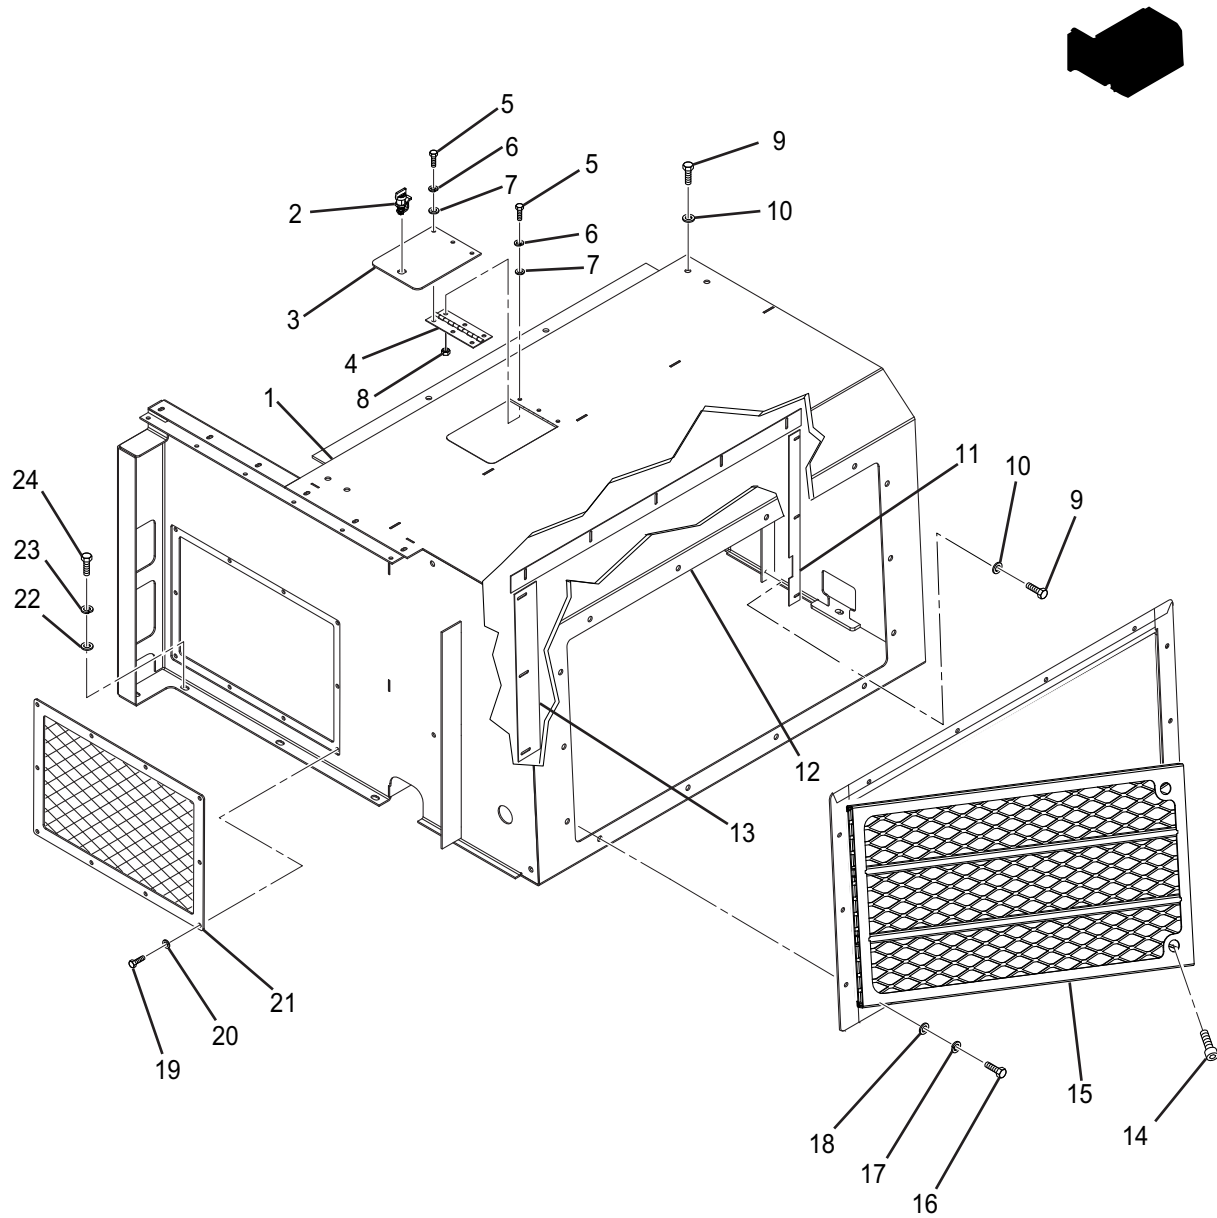


02-02

TABLE FOR FIGURE 02-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08052-102	ENGINE SHROUD	1	
2	A-04252-754	ACCESS LATCH	1	
3	A-04252-209	ACC. COVER PLATE	1	
4	A-04252-753	HINGE	1	
5	0-1000-00616	M6 X 16 HEX BOLT	6	
6	0-1100-00615	M6 LOCK WASHER	6	
7	0-1120-00616	M6 WASHER	6	
8	0-1200-00605	M6 NUT	6	
9	0-1000-00825	M8 X 25 HEX BOLT	15	
10	0-1120-00816	M8 WASHER	15	
11	A-08052-213	RADIATOR SEAL COVER LEFT	1	
12	A-08052-212	RADIATOR SEAL COVER TOP	1	
13	A-08052-211	RADIATOR COVER RIGHT	1	
14	A-04252-703	STAINLESS ALLEN SCREW	2	
15	A-04252-115	RADIATOR GRILLE DOOR	1	
16	0-1000-00820	M8 X 20 HEX BOLT	14	
17	0-1100-00820	M8 LOCK WASHER	14	
18	0-1120-00816	M8 WASHER	14	
19	0-1000-00620	M6 X 20 HEX BOLT	10	
20	0-1120-00616	M6 WASHER	10	
21	A-08052-170	ACC. COVER PANEL	1	
22	0-1120-01020	M10 WASHER	10	
23	0-1100-01025	M10 LOCK WASHER	10	
24	0-1000-01020	M10 X 20 HEX BOLT	10	

FIGURE 02-03 MIRROR, GRILLE, AND OIL COOLER COVER

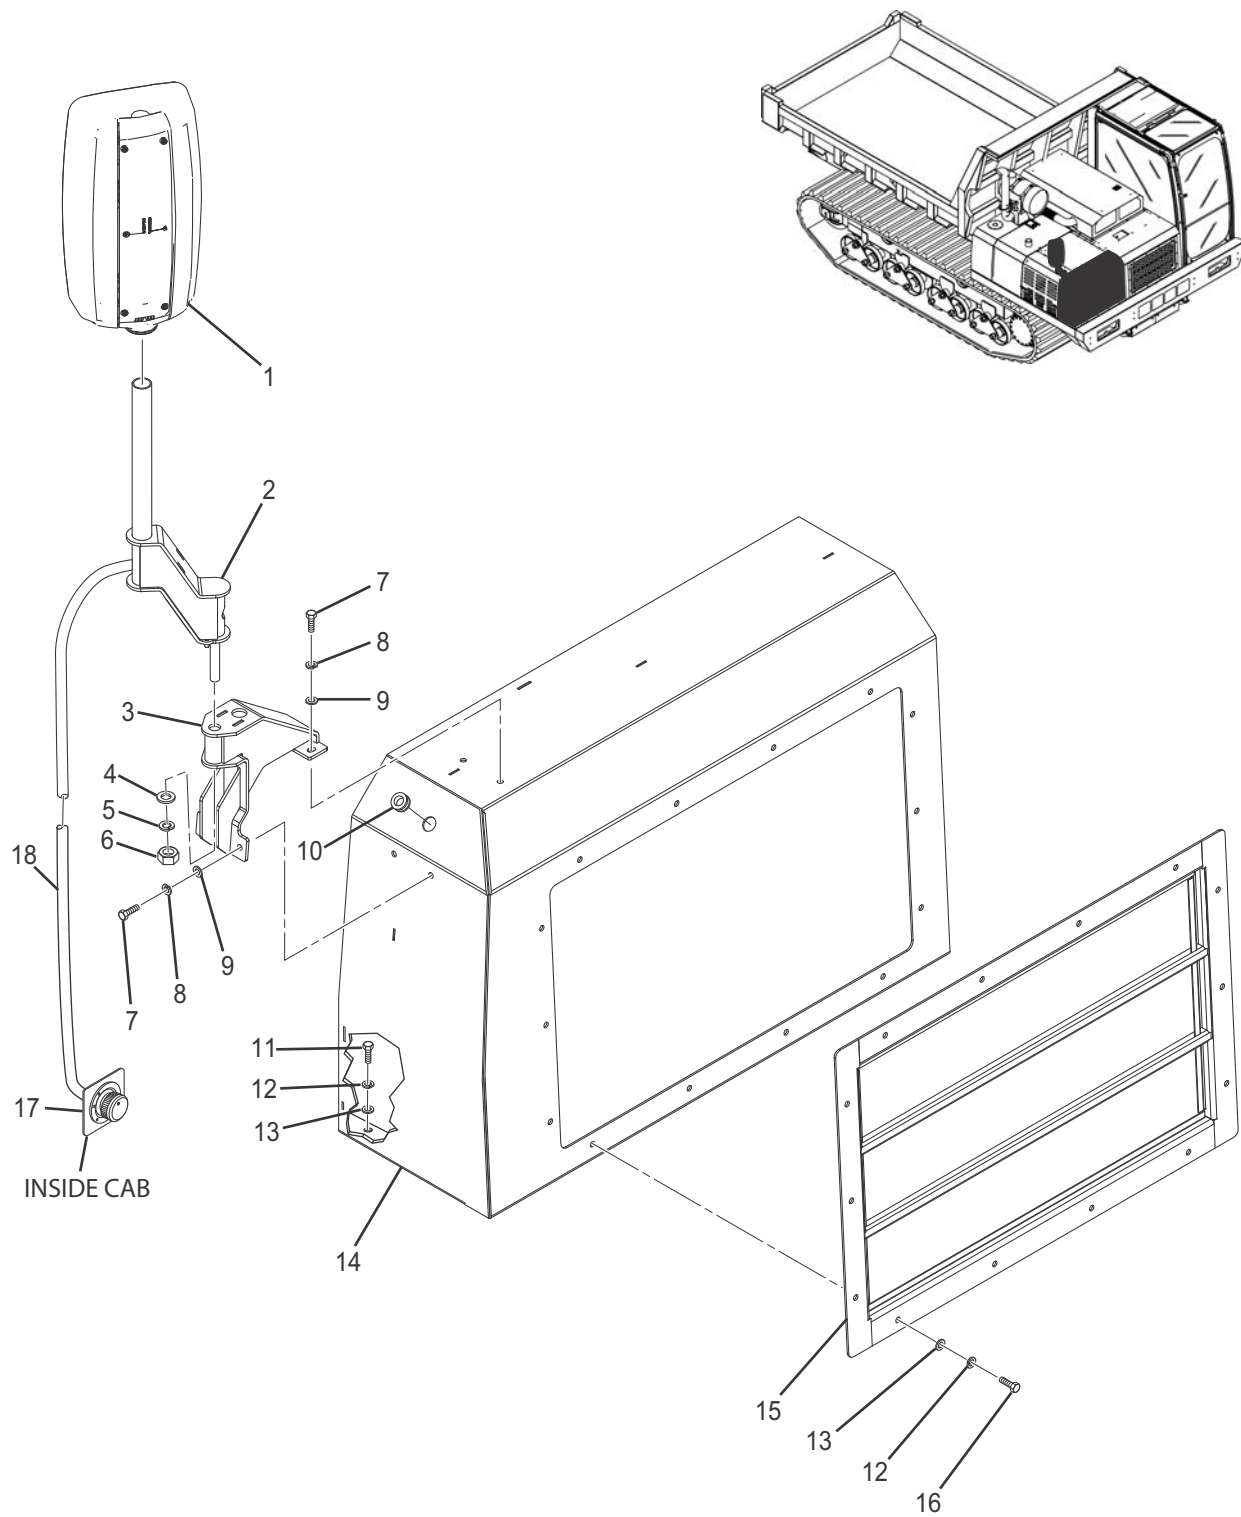


02-03

TABLE FOR FIGURE 02-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04225-700	MIRROR	1	
2	A-04252-162	MIRROR BRACKET UPPER	1	
3	A-04252-118	MIRROR BRACKET LOWER	1	
4	0-1140-31645	M16 WASHER	1	
5	0-1100-31640	M16 LOCK WASHER	1	
6	0-1200-31613	M16 NUT	1	
7	0-1000-00820	M8 X 20 HEX BOLT	4	
8	0-1100-00820	M8 LOCK WASHER	4	
9	0-1120-00816	M8 WASHER	4	
10	A-04252-701	GROMMET	1	
11	0-1000-00825	M8 X 25 HEX BOLT	4	
12	0-1100-00816	M8 LOCK WASHER	18	
13	0-1120-00820	M8 WASHER	18	
14	A-04269-104	OIL COOLER COVER	1	
15	A-04269-116	GRILLE	1	
16	0-1000-00820	M8 X 20 HEX BOLT	14	
17	A-04225-701	MIRROR REMOTE SWITCH	1	
18	A-04225-702	HARNESS MIRROR	1	

FIGURE 02-04 BATTERY HOOD

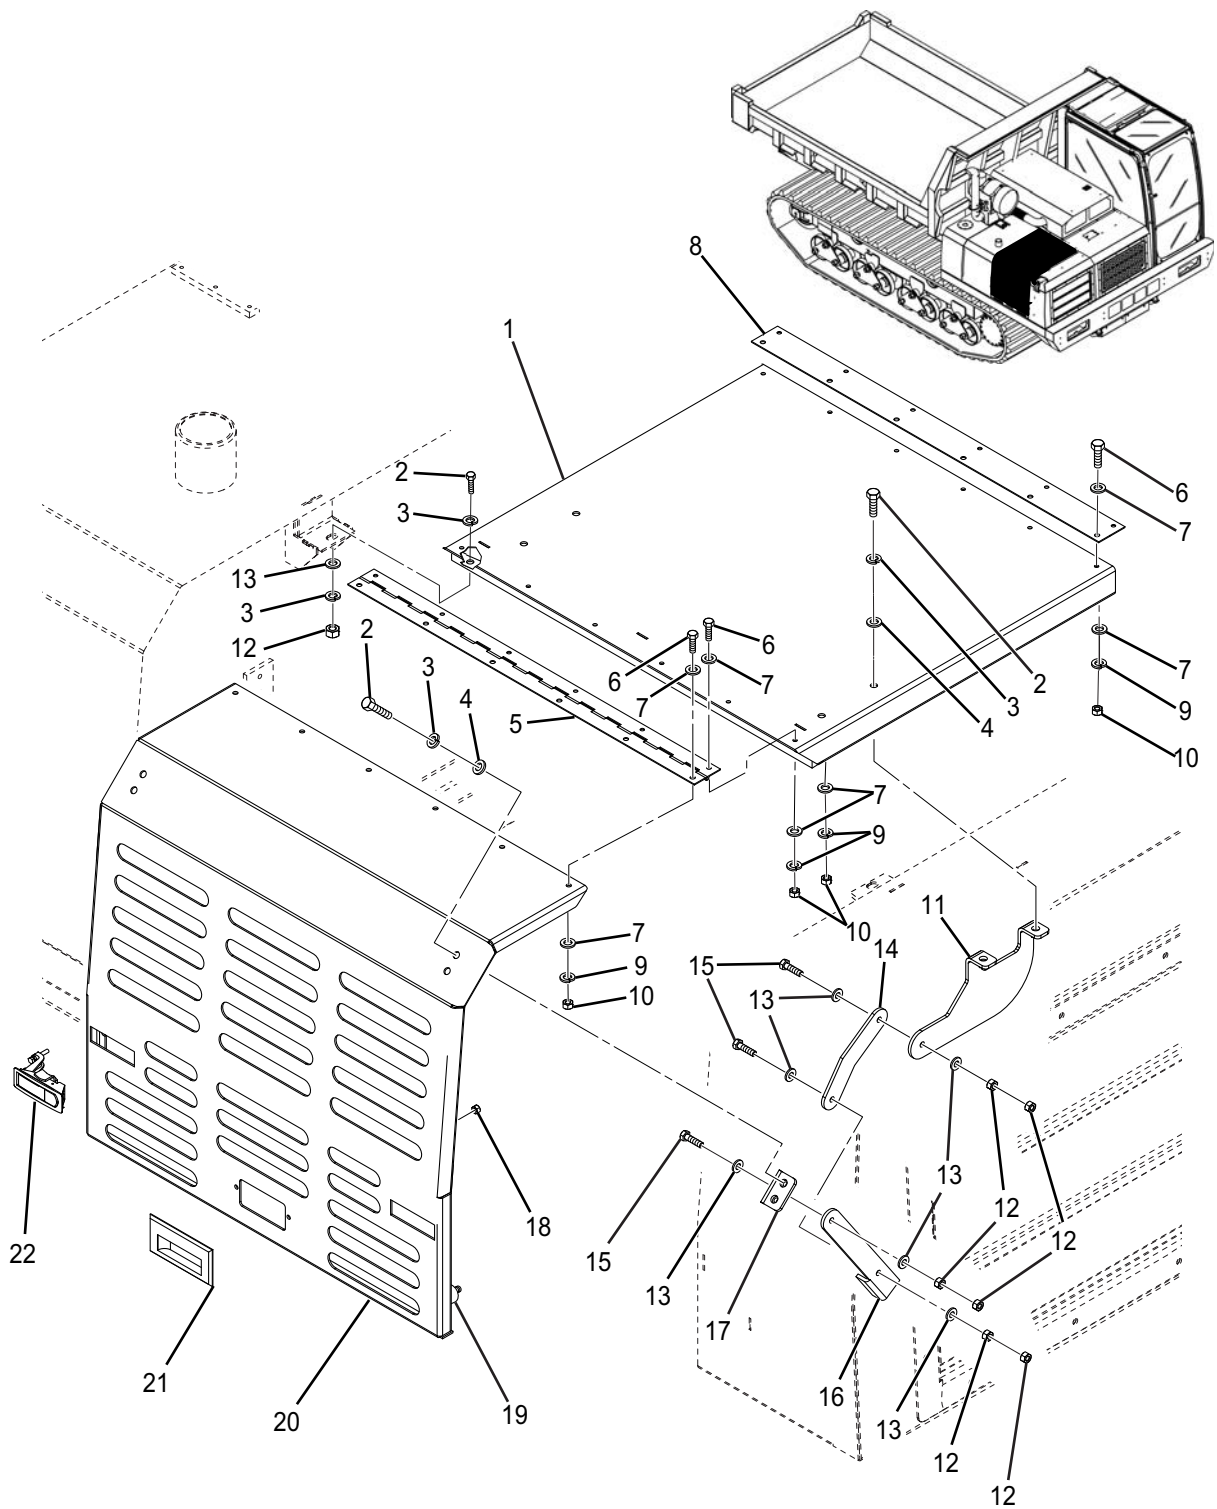


02-04

TABLE FOR FIGURE 02-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04252-108	BATTERY HOOD	1	
2	0-1000-00825	M8 X 25 HEX BOLT	8	
3	0-1100-00820	M8 LOCK WASHER	8	
4	0-1120-00816	M8 WASHER	8	
5	A-04252-225	PIANO HINGE	1	
6	0-1000-00610	M6 X 10 HEX BOLT	24	
7	0-1120-00616	M6 WASHER	48	
8	A-04252-212	STRAP	1	
9	0-1100-00615	M6 LOCK WASHER	24	
10	0-1200-00605	M6 NUT	24	
11	A-04252-228	BATTERY COVER LID PROP - UPPER MOUNT RIGHT	1	
	A-04252-223	BATTERY COVER LID PROP - UPPER MOUNT LEFT	1	
12	0-1200-00806	M8 NUT	12	
13	0-1120-00816	M8 WASHER	12	
14	A-04252-226	BATTERY LOWER ARM	2	
15	0-1000-00830	M8 X 30 HEX BOLT	6	
16	A-04252-227	PROP- UPPER ARM	2	
17	A-04252-229	PROP	2	
18	0-1200-00504	M5 NYLON LOCK NUT	2	
19	A-04252-710	THREADED BUMPER	4	
20	A-04252-224	BATTERY BOX DOOR	1	
21	A-04252-705	PULL HANDLE	1	
22	A-04252-702	LATCH	2	

FIGURE 02-05 FUEL TANK

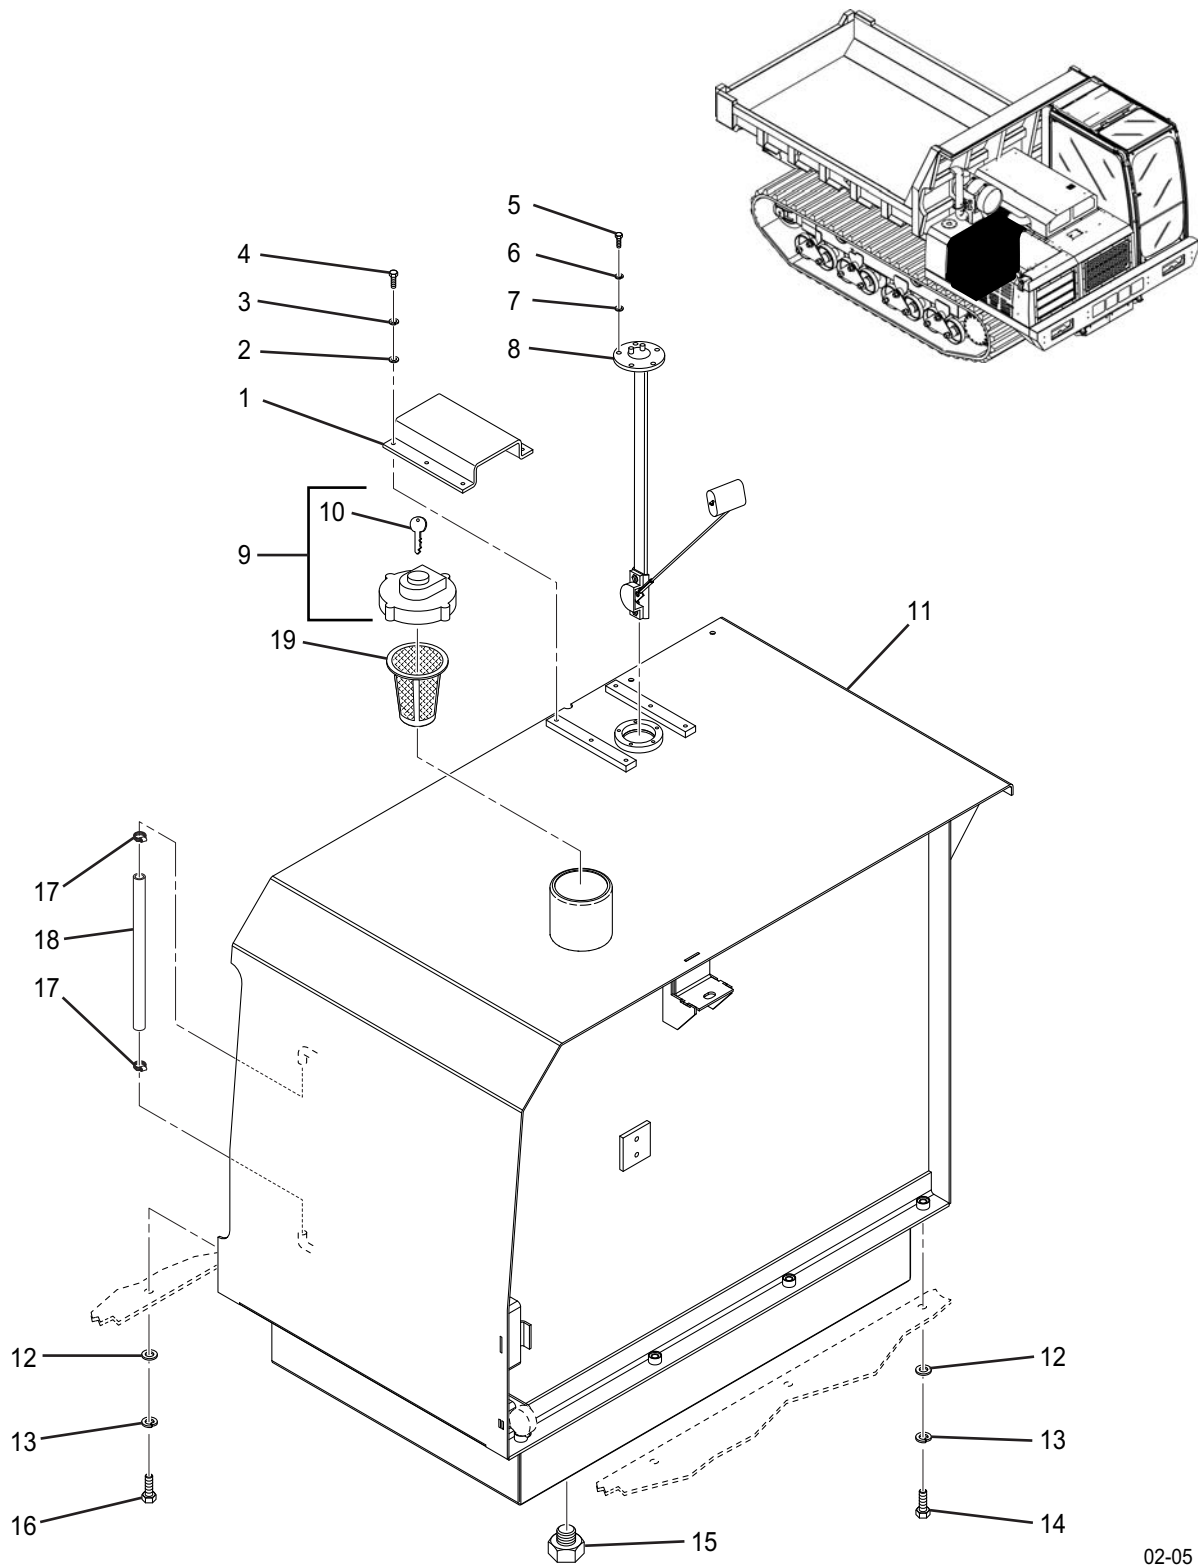


02-05

TABLE FOR FIGURE 02-05:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04215-220	COVER	1	
2	0-1120-00616	M6 WASHER	6	
3	0-1100-00615	M6 LOCK WASHER	6	
4	0-1000-00610	M6 X 1.0 HEX BOLT	6	
5	0-1000-00512	M5 X 12 HEX BOLT	6	
6	0-1100-00513	M5 LOCK WASHER	6	
7	0-1120-00510	M5 WASHER	8	
8	A-08015-850	FUEL LEVEL SENDER	1	
9	1-51150-1140	CAP & KEY	1	
10	1-51150-1180	•KEY	1	
11	A-08015-107	FUEL TANK	1	
12	0-1120-01020	M10 WASHER	8	
13	0-1100-01025	M10 LOCK WASHER	8	
14	0-1000-01025	M10 X 25 HEX BOLT	8	
15	A-04267-808	DRAIN PLUG #08	1	
16	0-1000-01020	M10 X 20 HEX BOLT	8	
17	A-04215-706	CLAMP	2	
18	A-04215-705	FUEL LEVEL TUBE	1	
19	1-51150-1130	FUEL FILL STRAINER	1	

FIGURE 02-06 HYDRAULIC TANK, AIR FILTER BRACKET, AND EXHAUST MOUNTS

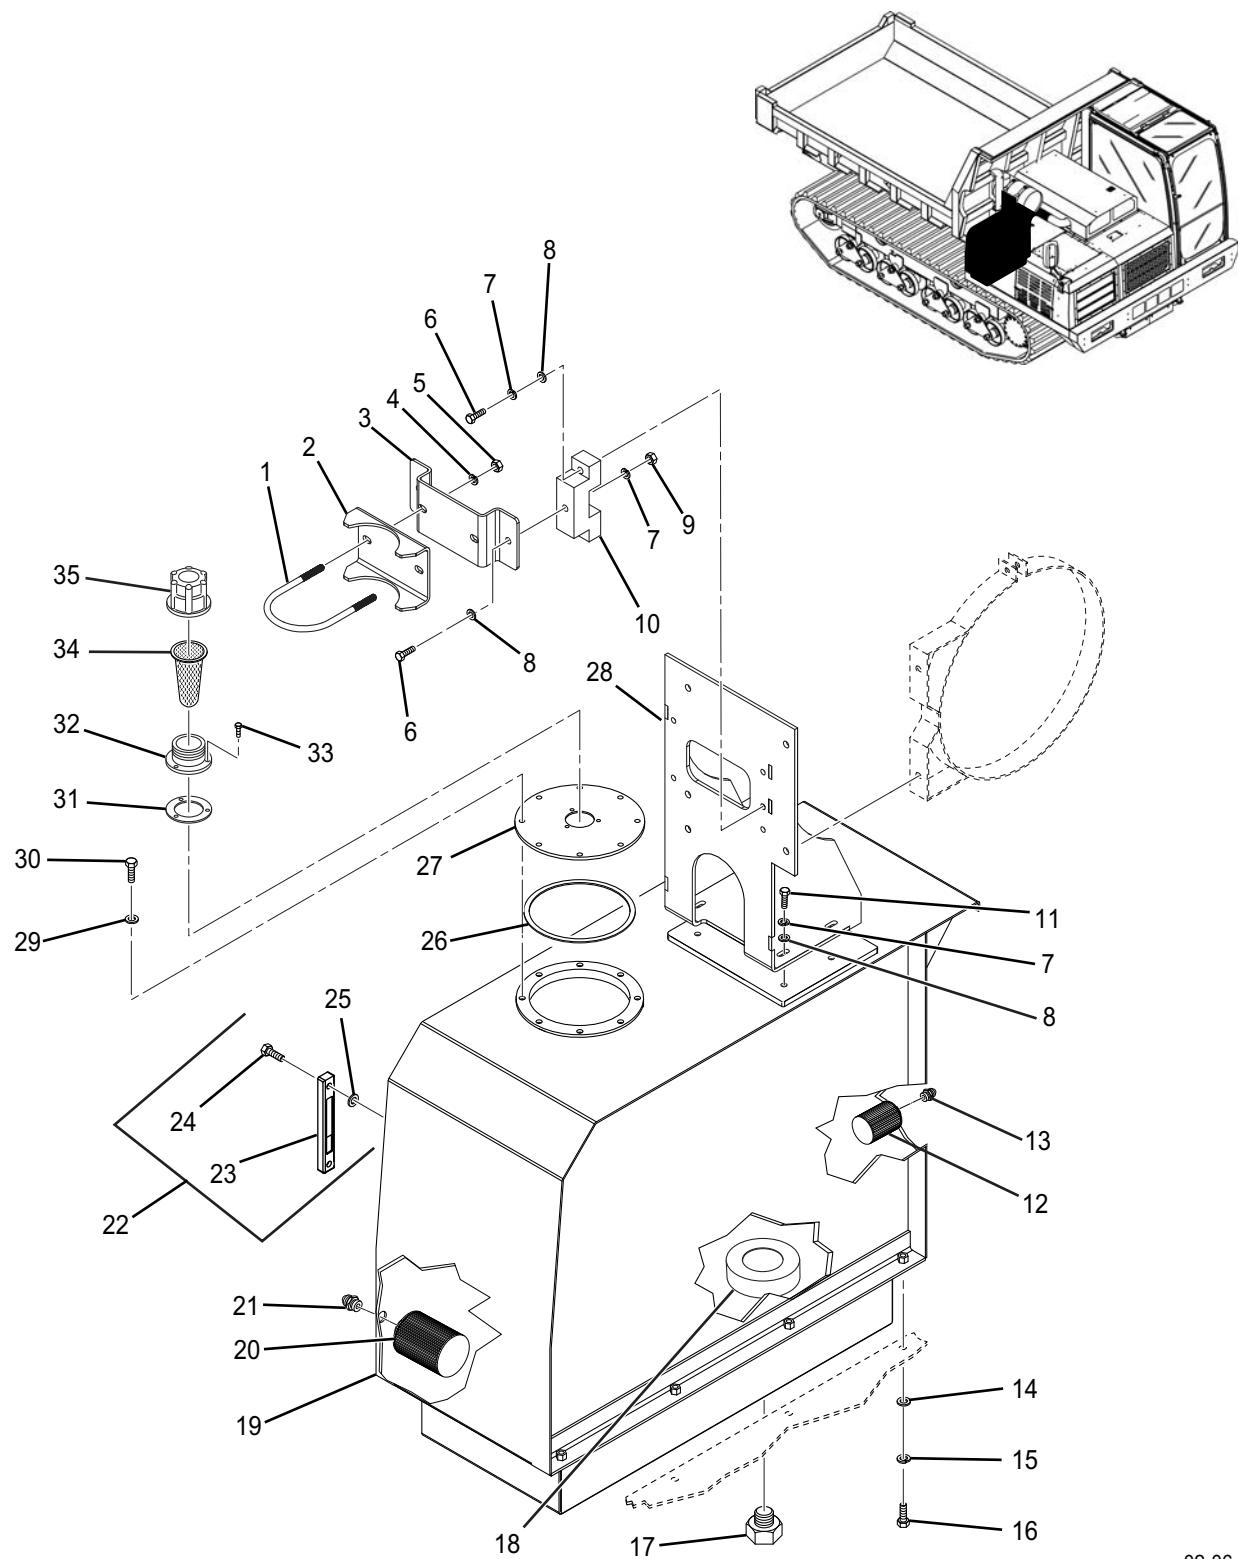

02-06

TABLE FOR FIGURE 02-06:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08013-702	U-BOLT	1	
2	A-08013-202	U BOLT BRACKET 1	1	
3	A-08013-203	U BOLT BRACKET 2	1	
4	0-1100-01025	M10 LOCK WASHER	2	
5	A-08013-703	3/8-16 NUT	2	
6	0-1000-00825	M8 X 25 HEX BOLT	6	
7	0-1100-00820	M8 LOCK WASHER	8	
8	0-1120-00816	M8 WASHER	8	
9	0-1200-00806	M8 NUT	2	
10	1-33130-1180	RUBBER PAD	2	
11	0-1000-00816	M8 X 16 HEX BOLT	4	
12	1-11660-1231	SUCTION FILTER SMALL	1	
13	A-04267-751	PIPE NIPPLE SMALL	1	
14	0-1120-01020	M10 WASHER	11	
15	0-1100-01025	M10 LOCK WASHER	11	
16	0-1000-01030	M10 X 30 HEX BOLT, HIGH TENSION	11	
17	5406-P-08	1/2 PIPE PLUG	1	
18	A-04266-705	MAGNET	1	
19	A-08066-106	HYDRAULIC TANK	1	
20	1-19660-1231	SUCTION FILTER LARGE	3	
21	A-04267-750	PIPE NIPPLE LARGE	3	
22	A-04266-700	OIL LEVEL GAUGE ASSEMBLY	1	
23	A-04266-720	•OIL LEVEL GAUGE	1	
24	A-04266-721	•BANJO BOLT	2	
25	A-04266-723	•RUBBER GASKET	2	
26	A-04266-707	O-RING	1	
27	A-04266-200	COVER	1	

TABLE FOR FIGURE 02-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
28	A-08012-111	AIR CLEANER BRACKET	1	
29	0-1120-00816	M8 WASHER	8	
30	0-1000-00820	M8 X 20 HEX BOLT	8	
31	1-11660-1150	GASKET	1	
32	1-11660-1140	BREATHER	1	
33	1-11660-1220	M6-1.0 X 16 ALLEN HEAD BOLT	3	
34	1-11660-1170	STRAINER	1	
35	1-11660-1160	FLUID CAP	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 02-07 ENGINE COVER ASSEMBLY

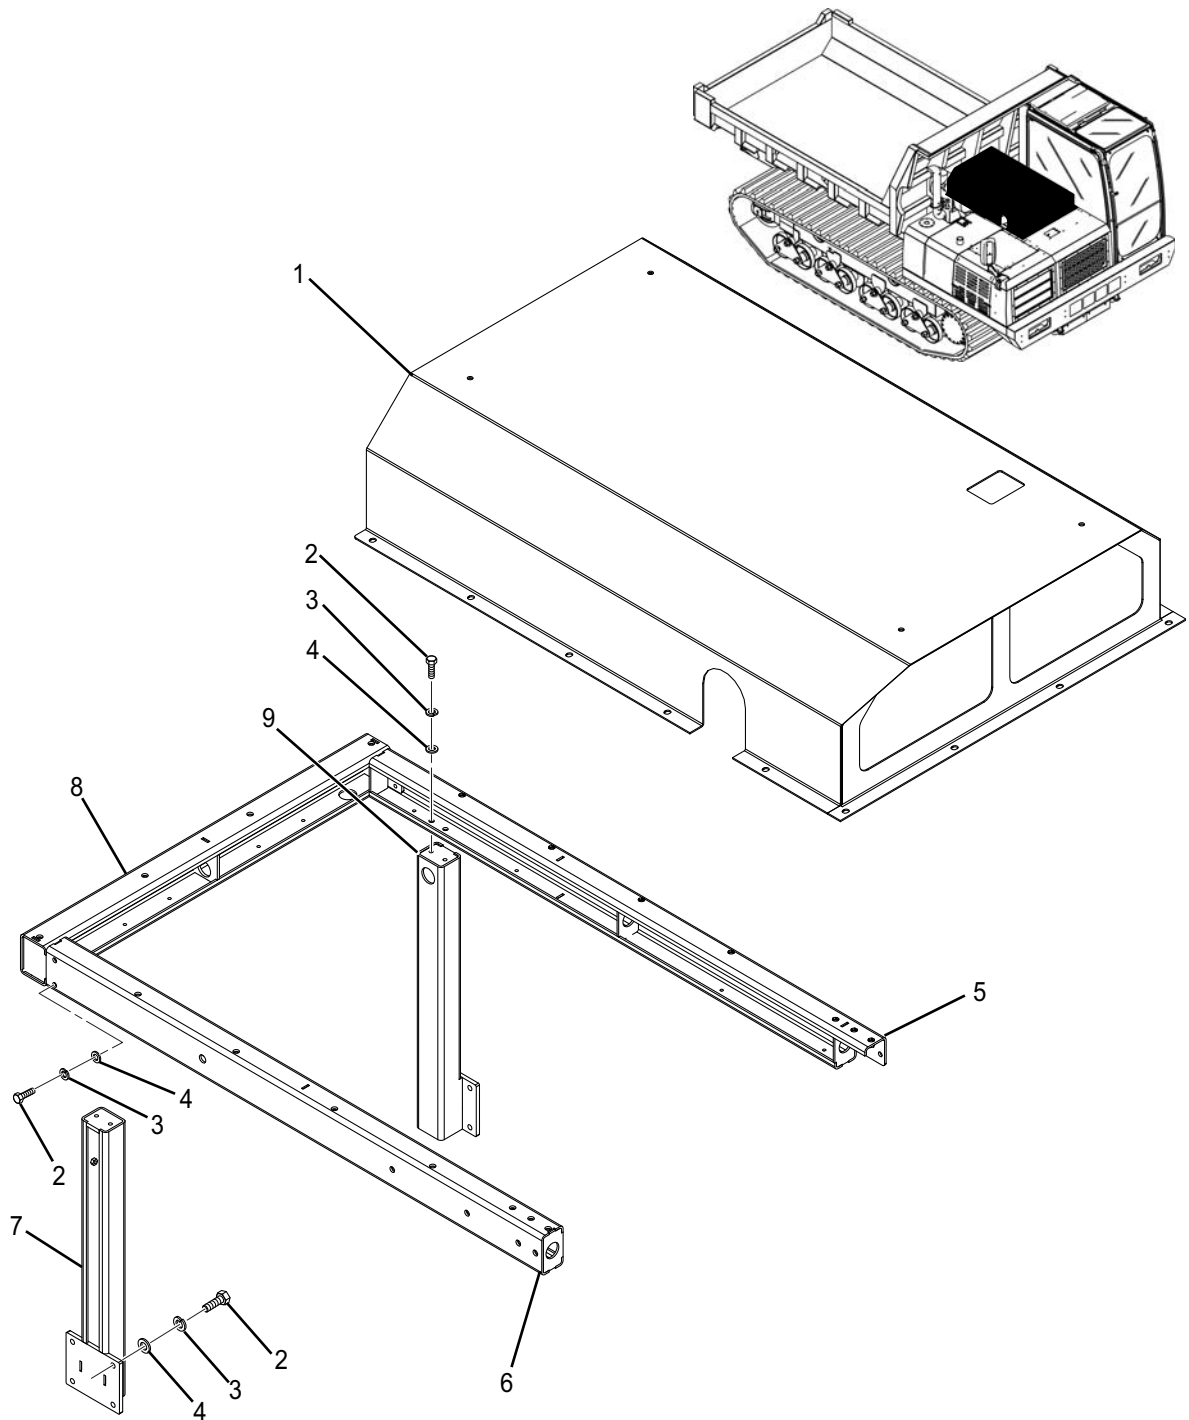

02-07

TABLE FOR FIGURE 02-07:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08052-117	ENGINE COVER	1	
2	0-1000-01025	M10 X 25 HEX BOLT	30	
3	0-1100-01025	M10 LOCK WASHER	30	
4	0-1120-01020	M10 WASHER	30	
5	A-08052-159	FRONT LEFT SUPPORT	1	
6	A-08052-158	FRONT RIGHT SUPPORT	1	
7	A-08052-155	UPRIGHT SUPPORT RIGHT	1	
8	A-08052-157	REAR TOP SUPPORT	1	
9	A-08052-156	UPRIGHT SUPPORT LEFT	1	

FIGURE 02-08 CAB STEP

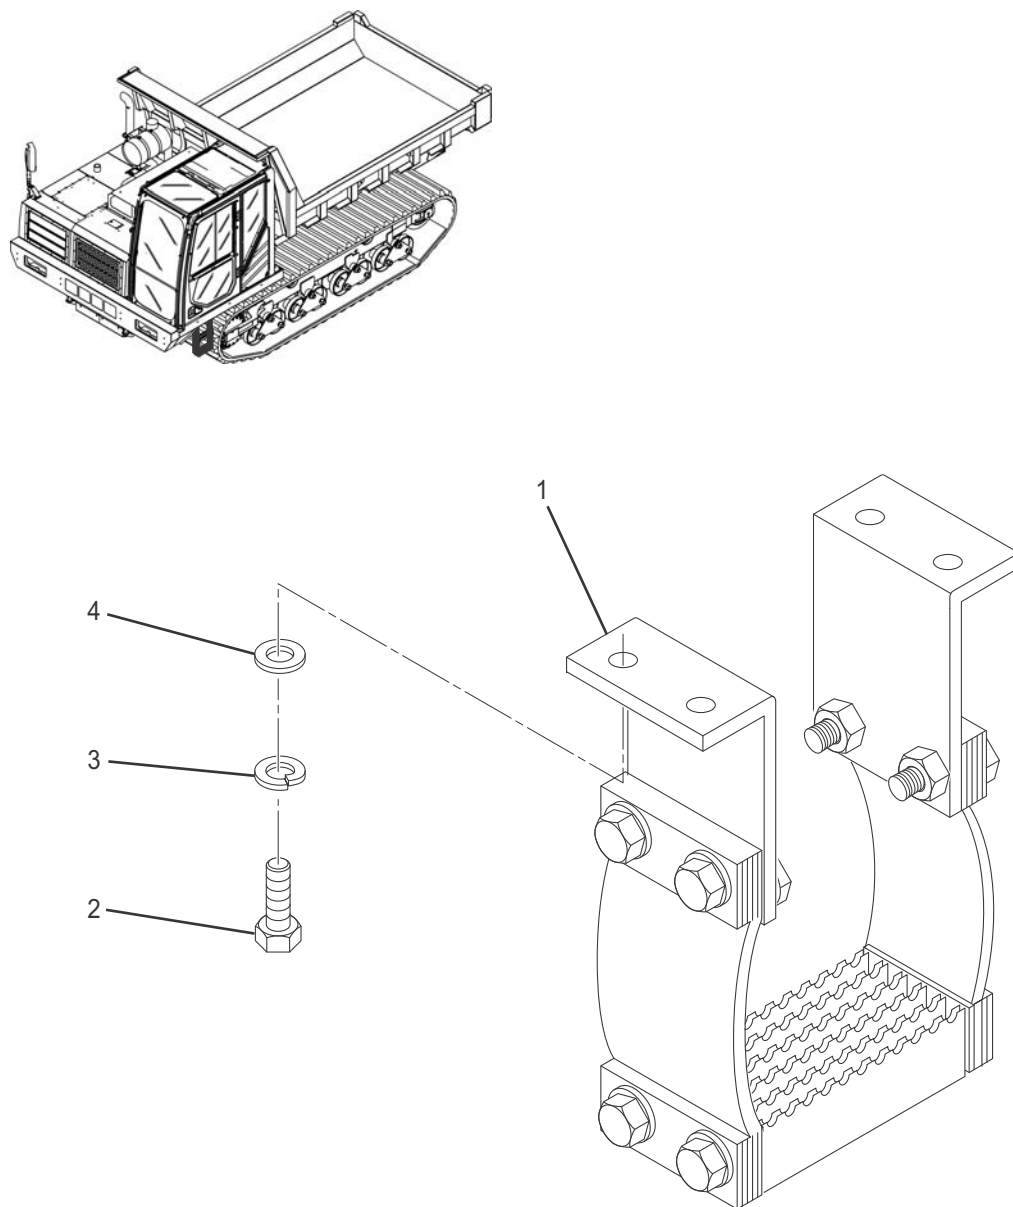



TABLE FOR FIGURE 02-08:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04252-142	STEP ASSEMBLY A-04352-141	1	
2	0-1000-31225	M12 X 25 HEX BOLT	10	
3	0-1100-01230	M12 LOCK WASHER	10	
4	0-1120-01223	M12 WASHER	10	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-01 MOUNTING GP-PLATFORM. PO 332-4978

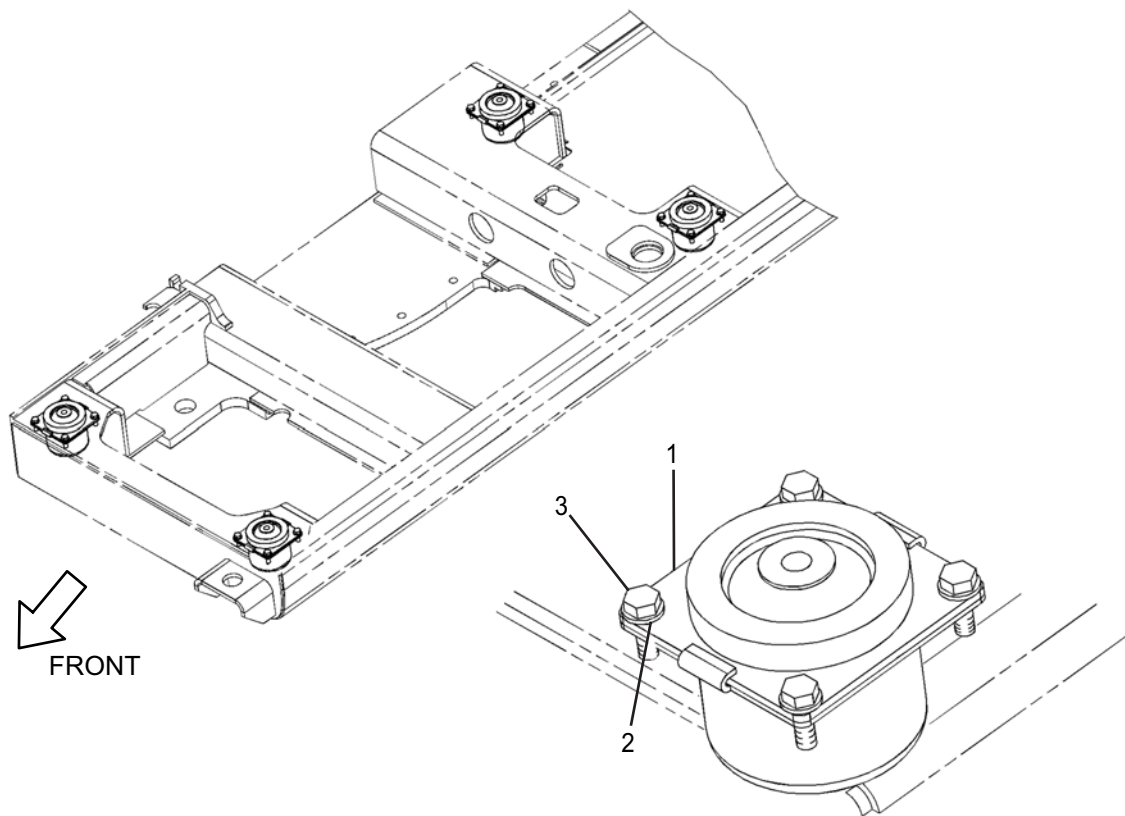


03-01

TABLE FOR FIGURE 03-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8922	MOUNT AS	4	
2	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	16	
3	8T-4195	BOLT (M10X1.5X30-MM)	16	

FIGURE 03-02 SUPPORT GP-SEAT. PO 305-0449

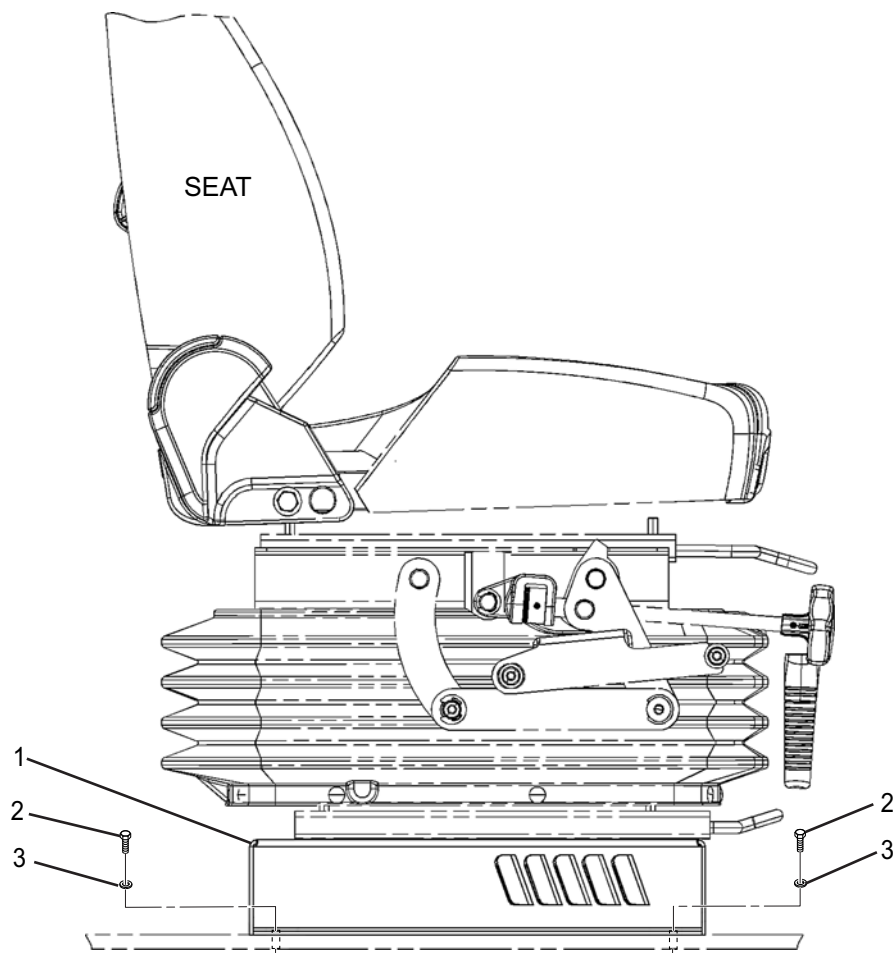


RIGHT SIDE VIEW

TABLE FOR FIGURE 03-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8968	SUPPORT AS-SEAT	1	
2	8T-4191	BOLT (M10X1.5X16-MM)	4	
3	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	4	

FIGURE 03-03 SEAT BELT GP-SEAT. PO 440-9256

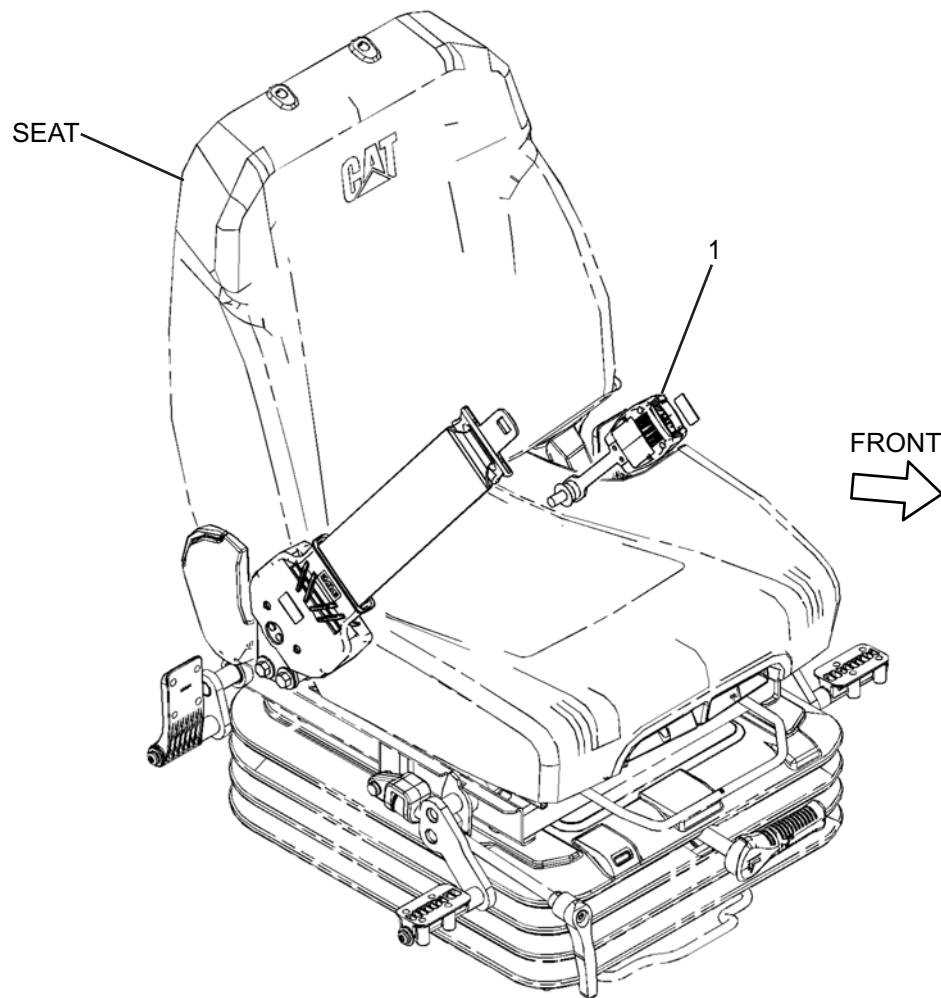


03-03

TABLE FOR FIGURE 03-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6540	SEAT BELT GP (RETRACTABLE, 76-MM (3-IN))	1	

FIGURE 03-04 SEAT AND MOUNTING GP

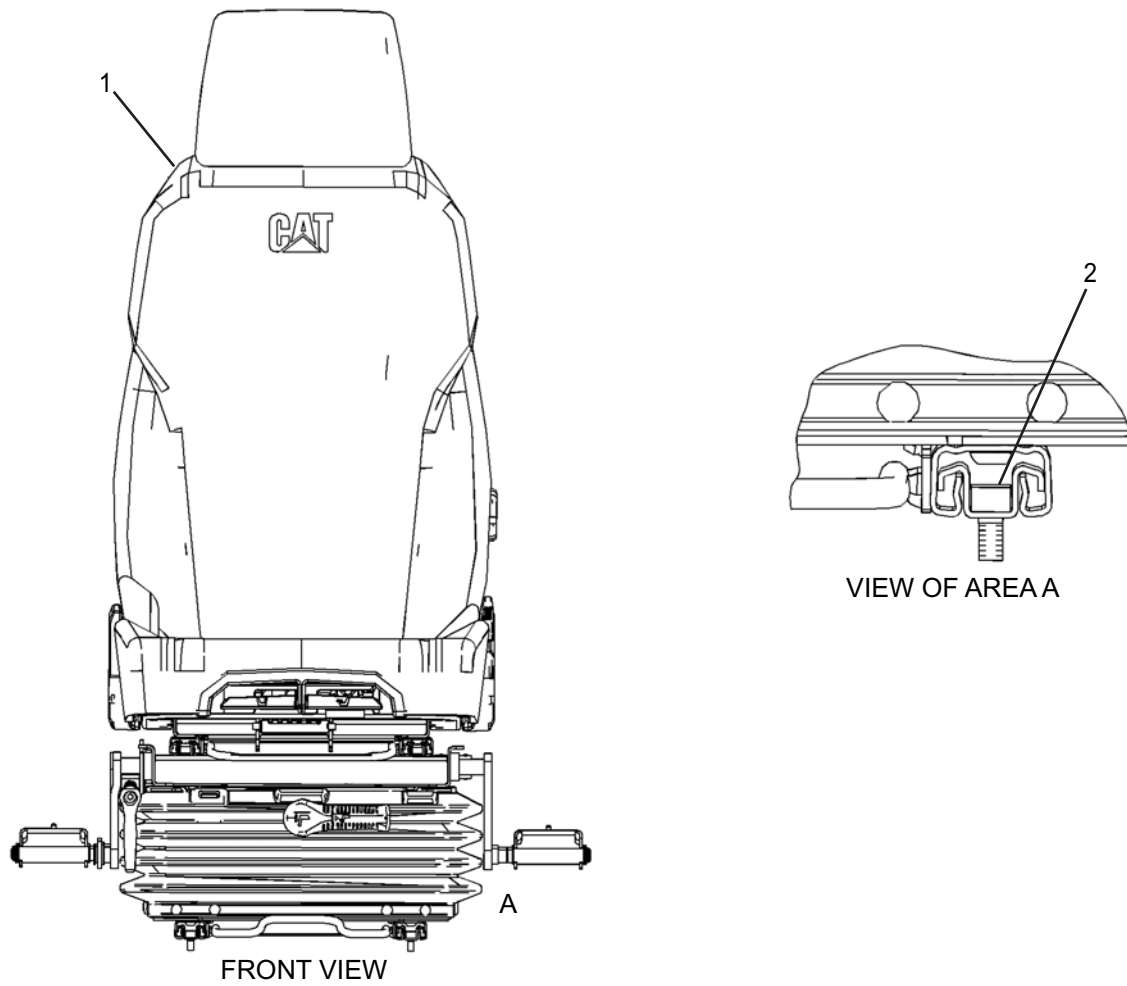

03-04

TABLE FOR FIGURE 03-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8882	SEAT GP-SUSPENSION (HIGH BACK, CLOTH)	1	
2	6V-8202	BOLT-SOCKET HEAD (M8X1.25X16-MM)	4	

FIGURE 03-05 SEAT GP-SUSPENSION. PO316-8881


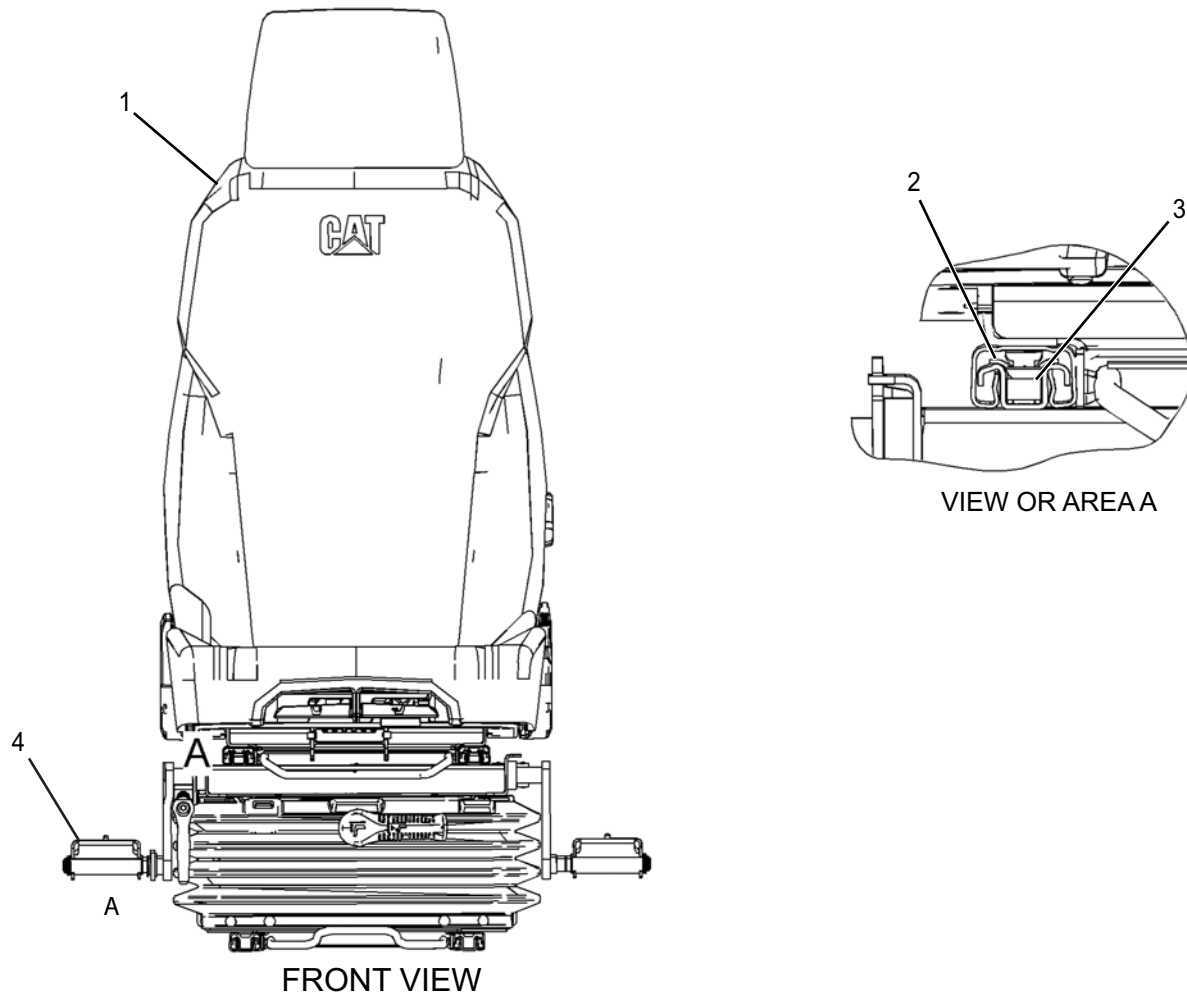


TABLE FOR FIGURE 03-05:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8889	SEAT GP (HIGH BACK, CLOTH)	1	
2	316-8987	BRACKET	2	
3	5A-3604	BOLT-SOCKET HEAD (M8X1.25X25-MM)	4	
4	316-8894	SUSPENSION GP-SEAT (MECHANICAL)	1	

FIGURE 03-06 SEAT GP-HIGH BACK PO 316-8882

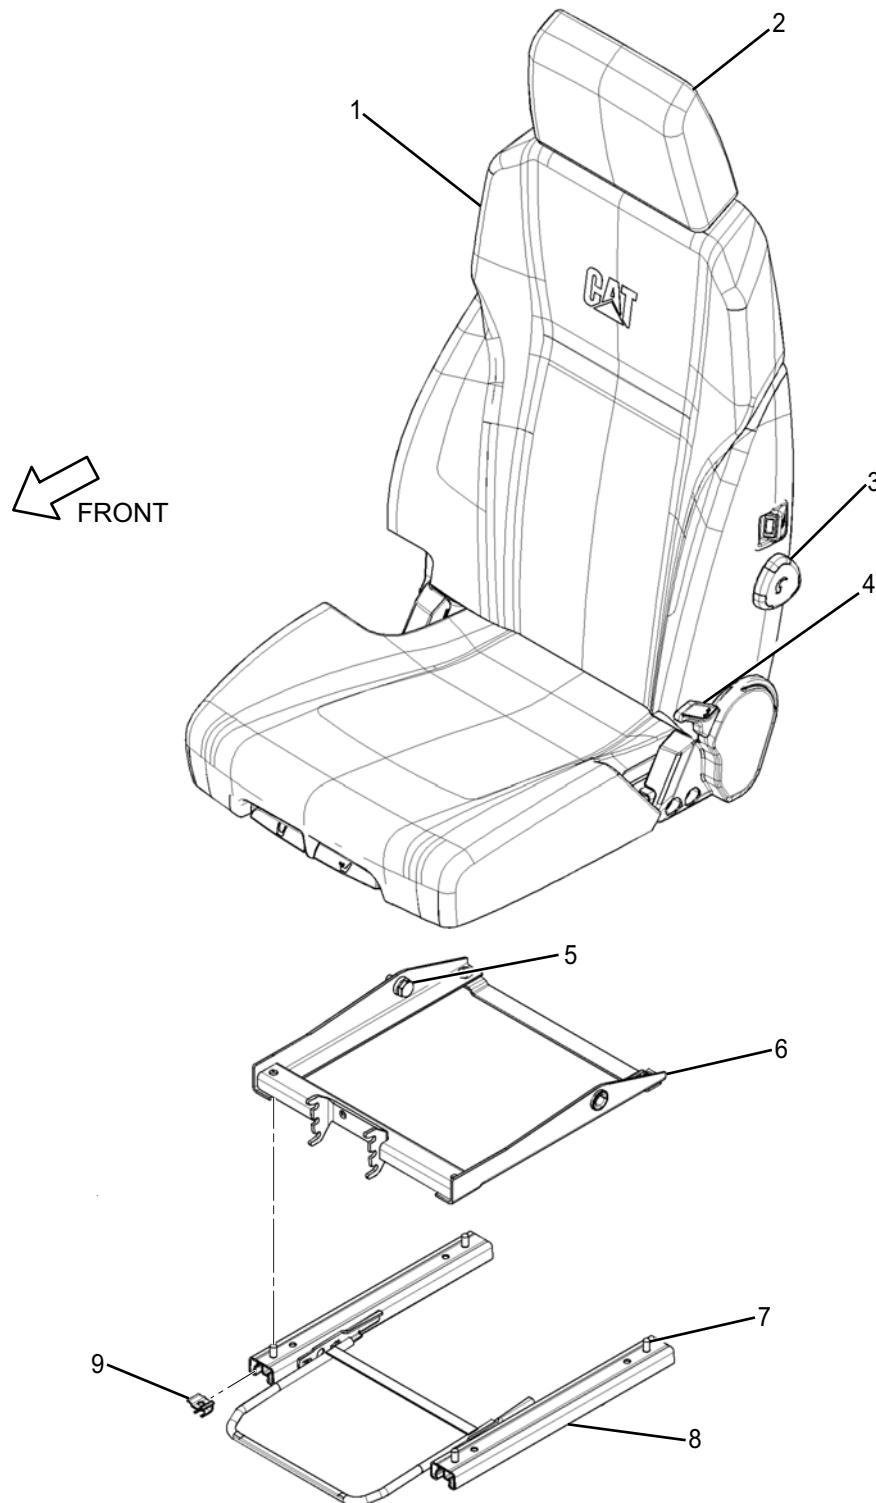


03-06

TABLE FOR FIGURE 03-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	336-1132	KIT-SEAT	1	
2	316-8892	HEADREST AS-SEAT	1	
3	178-5659	HANDLE (LUMBAR SUPPORT ADJUSTER)	1	
4	327-6640	KIT-HANDLE (RECLINER)	1	
5	333-4179	BOLT-SPECIAL	2	
6	327-6642	KIT-SEAT TILT	1	
7	9X-2616	SCREW-SOCKET (M8X1.25X16-MM)	4	
8	327-6643	KIT-ADJUSTER (CUSHION POSITIONING)	1	
9	316-8987	BRACKET	2	

FIGURE 03-07 SUSPENSION GP-SEAT-MECHANICAL

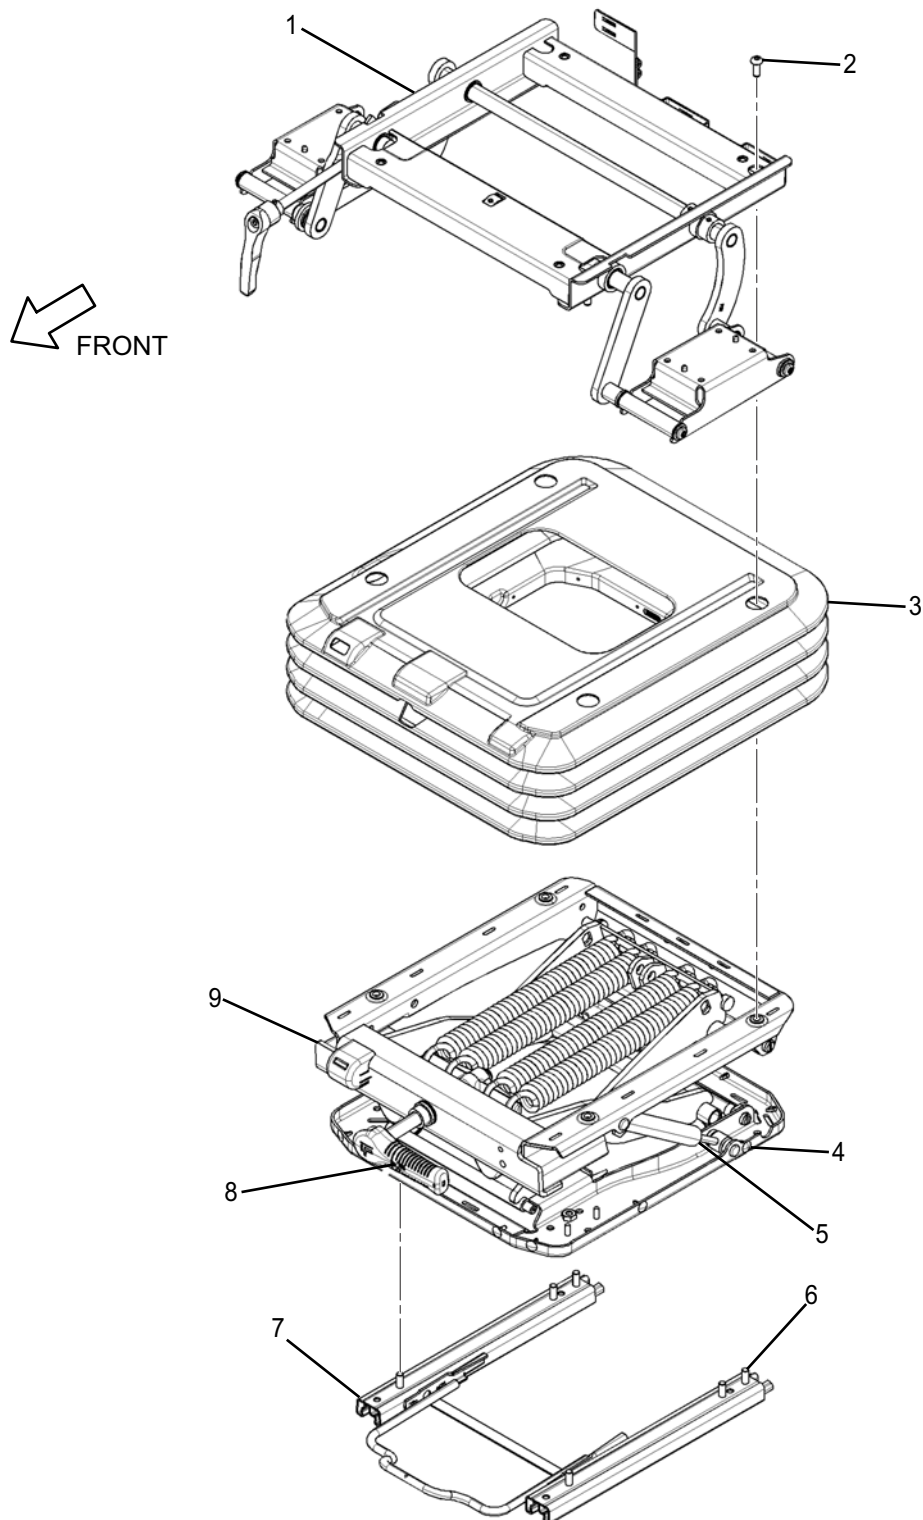


03-07

TABLE FOR FIGURE 03-07:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8897	KIT-BRACKET (ADJUSTABLE)	1	
2	198-3899	SCREW-BUTTON HEAD (M8X1.25X20-MM)	4	
3	327-6647	KIT-COVER (SUSPENSION SEAT)	1	
4	245-7895	KIT-CLIP (SEAT)	1	
5	327-6646	KIT-CYLINDER (DAMPENER)	1	
6	333-4180	SCREW-BUTTON HEAD (M8X1.25X20-MM)	6	
7	327-6648	KIT-ADJUSTER (SEAT POSITION)	1	
8	333-4181	KIT-HANDLE	1	
9	327-6645	KIT-SEAT SUSPENSION (MECHANICAL)	1	

FIGURE 03-08 DUCT GP-CAB AIR

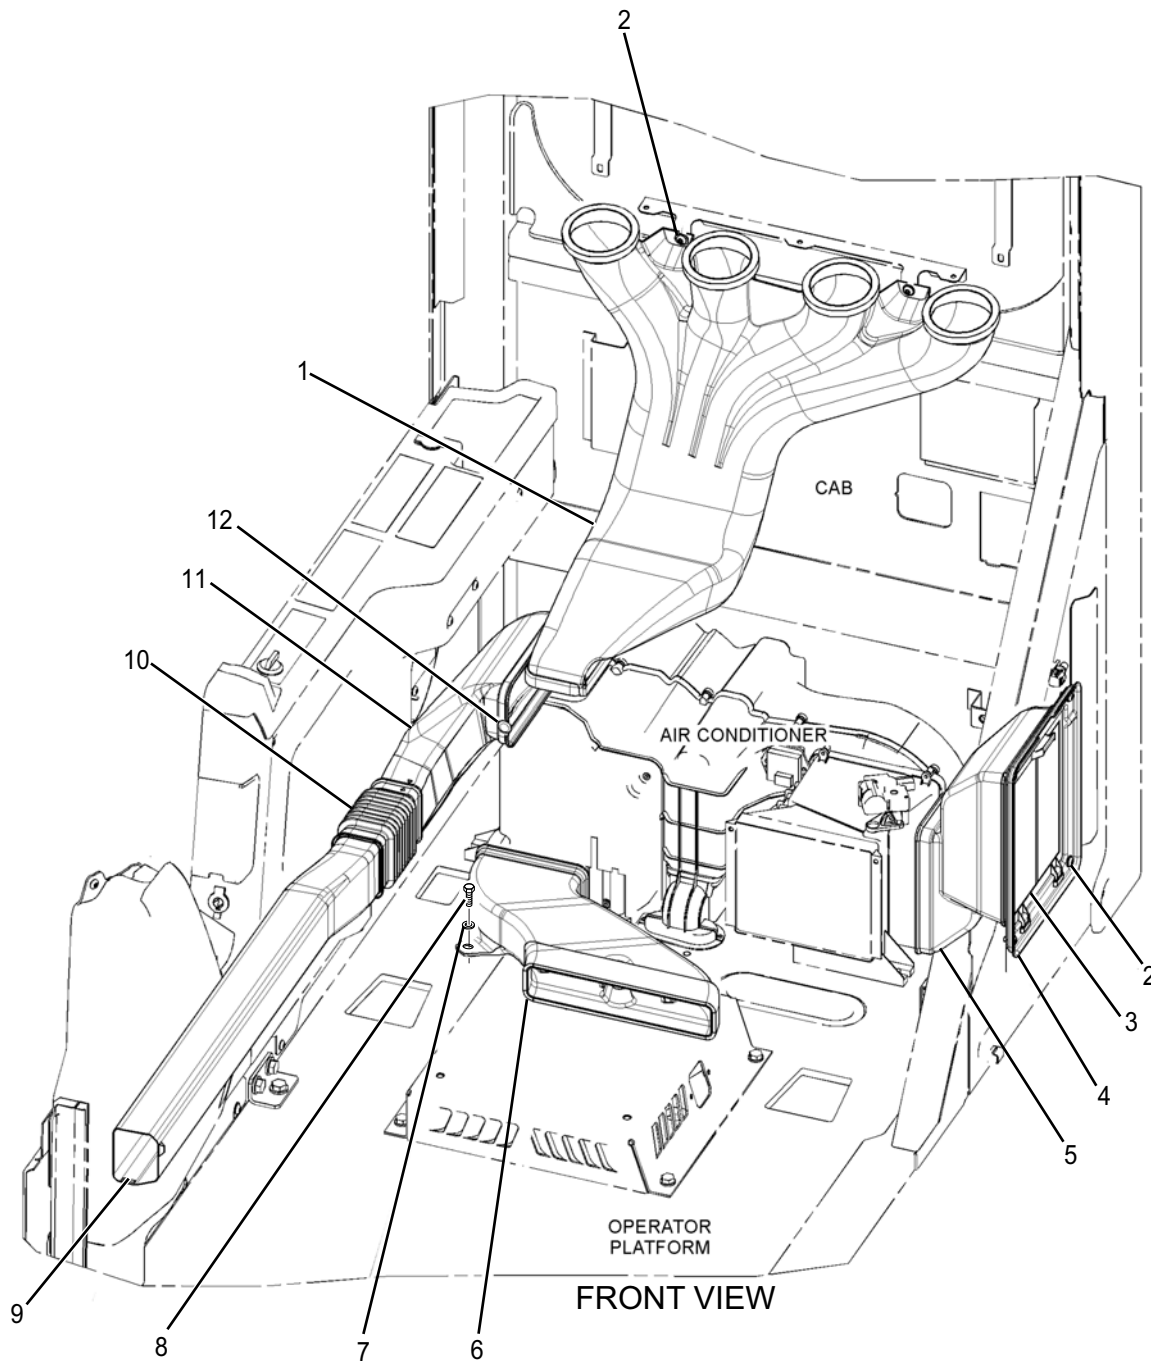


03-08

TABLE FOR FIGURE 03-08:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6534	DUCT AS-VENT (REAR)	1	
2	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	6	
3	327-6618	FILTER ELEMENT-CAB AIR (AIR INTAKE)	1	
4	327-6533	FRAME GP-AIR FILTER (CAB)	1	
5	327-6484	DUCT (FRESH AIR)	1	
6	327-6537	DUCT AS (FLOOR)	1	
7	7X-7729	WASHER (11X25X3-MM THK)	1	
8	8T-4136	BOLT (M10X1.5X25-MM)	1	
9	327-6536	DUCT (STRAIGHT)	1	
10	336-1206	DUCT	1	
11	327-6535	DUCT (VENT, FRONT)	1	
12	229-9028	CLIP	1	

FIGURE 03-09 FRAME GP-AIR FILTER-CAB

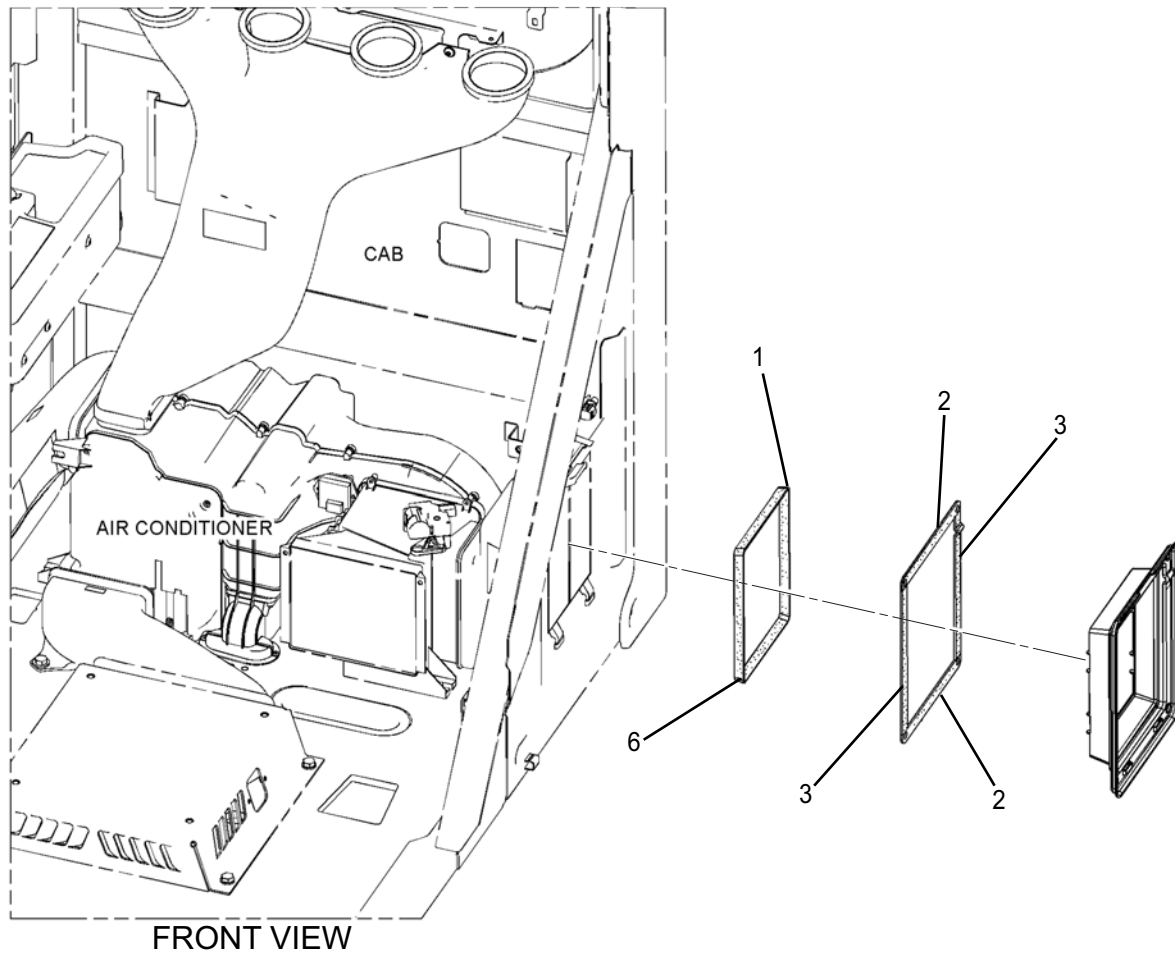

03-09

TABLE FOR FIGURE 03-09:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7429	INSULATION	1	
2	346-7427	INSULATION	2	
3	346-7428	INSULATION	2	

FIGURE 03-10 RADIO GP-AM/FM


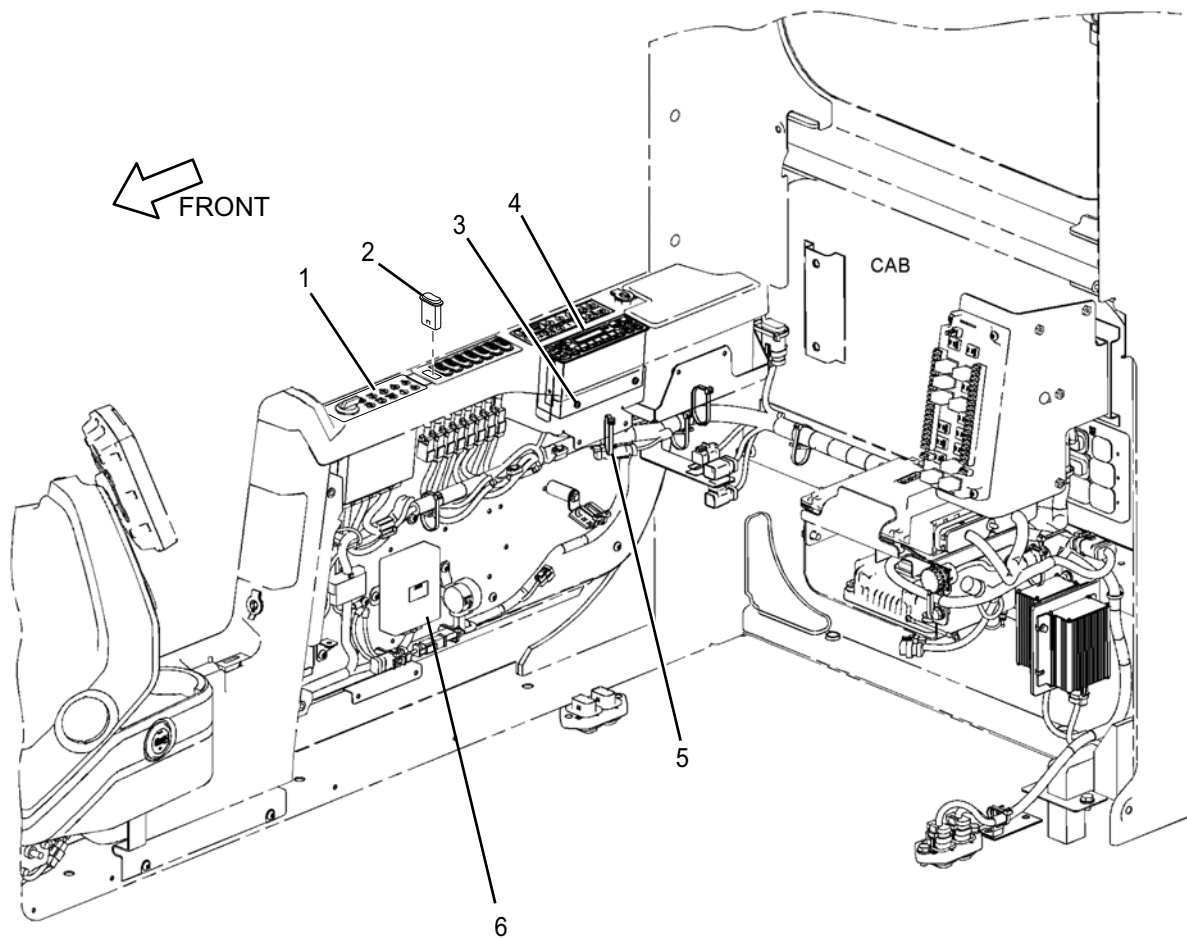


TABLE FOR FIGURE 03-10:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-7538	SWITCH PANEL	1	
2	238-2210	SWITCH, MIRROR HEAT	1	
3	106-2704	SCREW AS (M5X0.8X10-MM)	2	
4	328-0397	RADIO-AM/FM	1	
5	7K-1181	STRAP-CABLE	2	
6	A-04225-811	HARNESS, WIPER	1	

FIGURE 03-11 PANEL GP-SWITCH-ENGINE SPEED, START

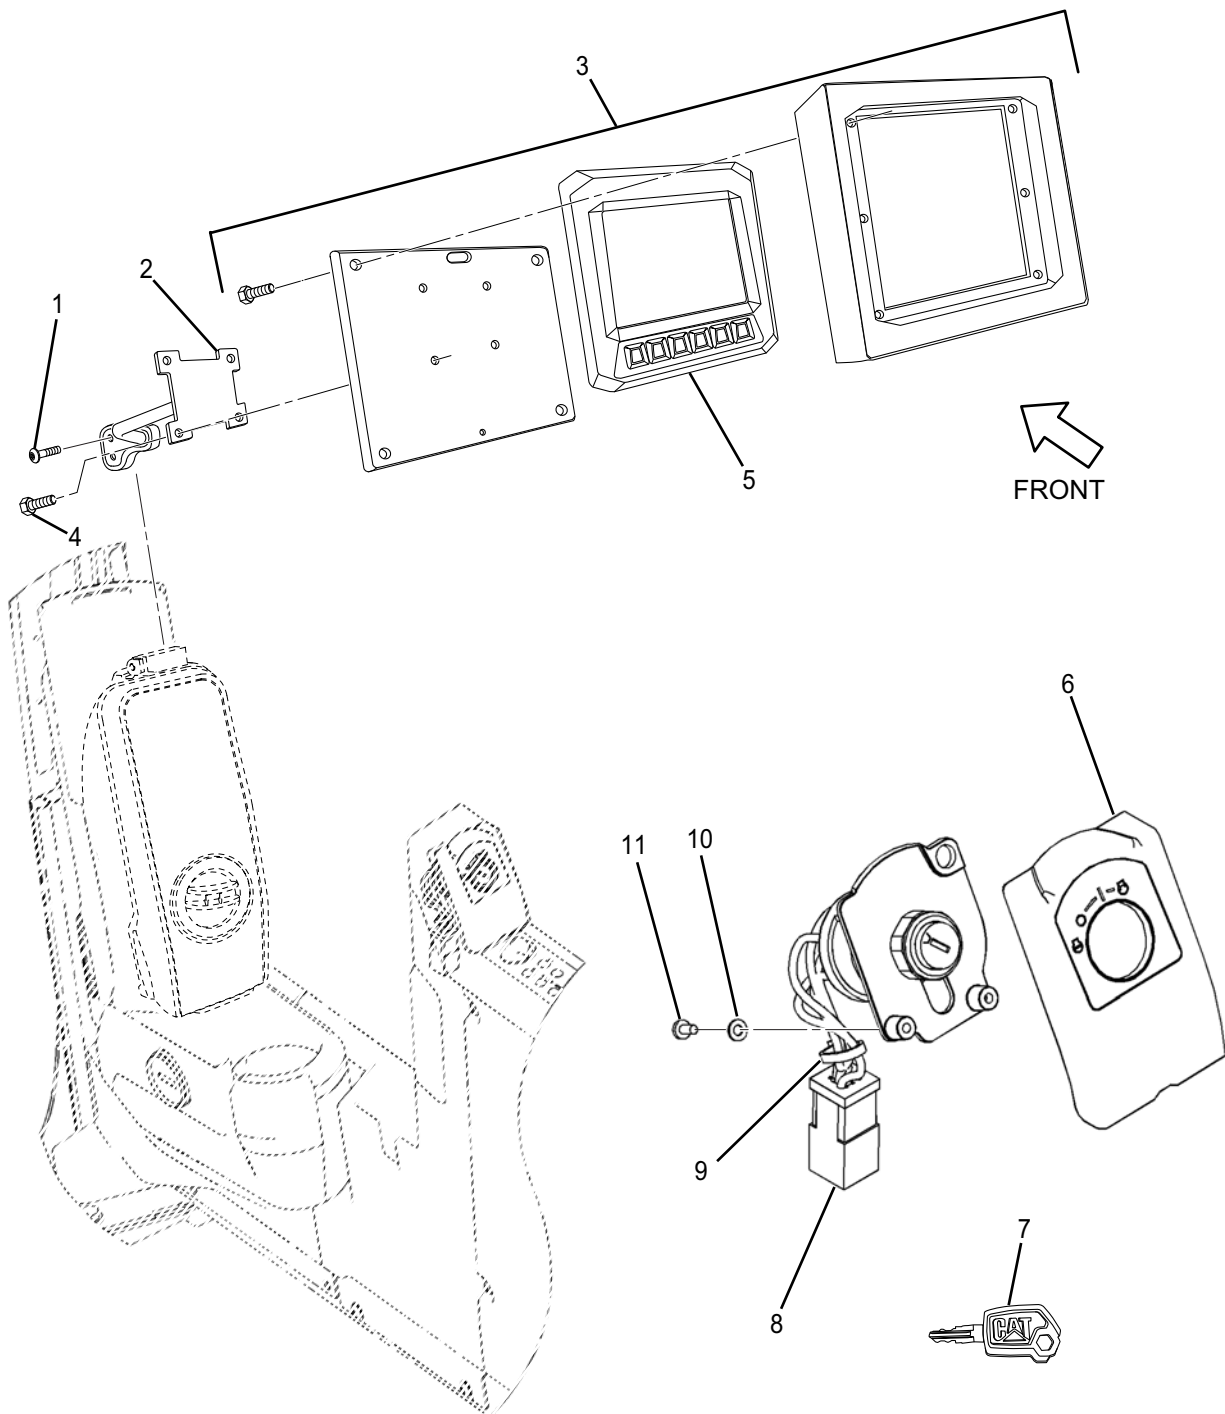

03-11

TABLE FOR FIGURE 03-11:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	9X-2042	SCREW	4	
2	327-6436	BRACKET	1	
3	A-04253-131	MONITOR BOX	1	
4	8C-7581	SCREW-MACHINE (M4X0.7X8-MM)	4	
5	A-04225-706	OPERATOR MONITOR	1	
6	353-1910	COVER	1	
7	5P-8500	IGNITION KEY	2	
8	328-0246	PANEL GP-SWITCH (ENGINE START)	1	
9	3S-2093	STRAP-CABLE	1	
10	0-1130-00408	M4 WASHER	3	
11	0-1000-00408	M 4 x 8 HEX BOLT	3	

FIGURE 03-12 PANEL GP-SWITCH-ENGINE START

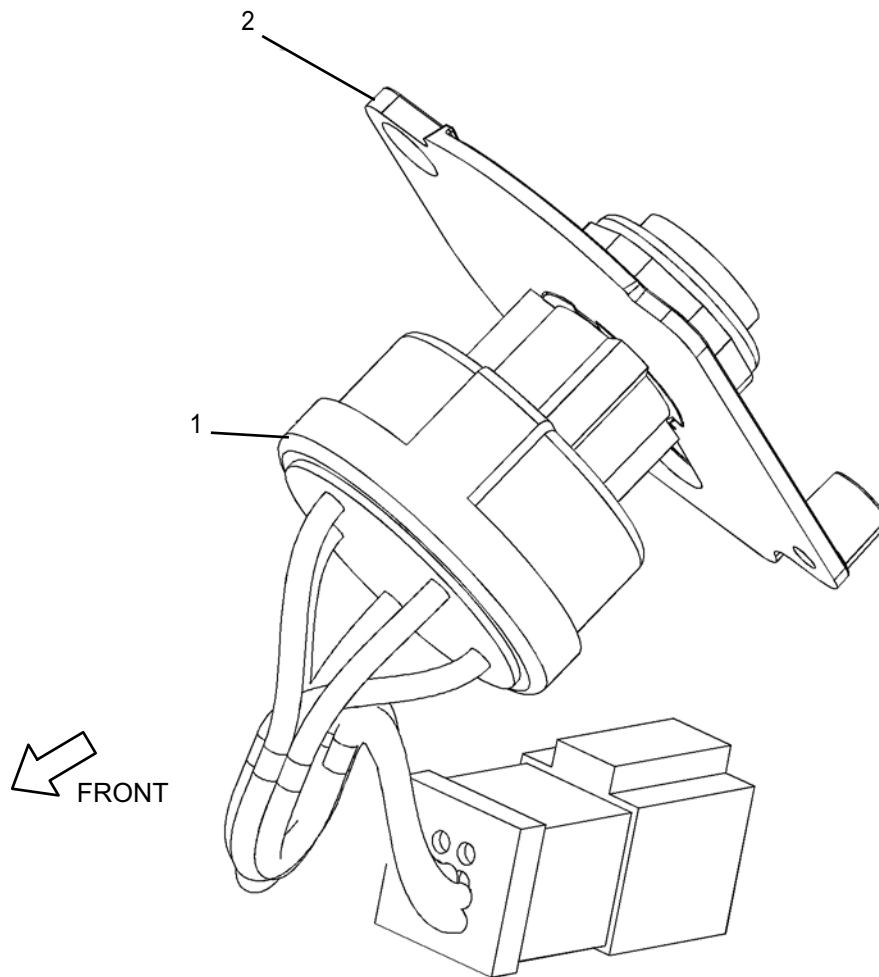


TABLE FOR FIGURE 03-12:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	255-2752	SWITCH GP-START	1	
2	350-8461	PANEL-SWITCH	2	

FIGURE 03-13 SWITCH GP-START

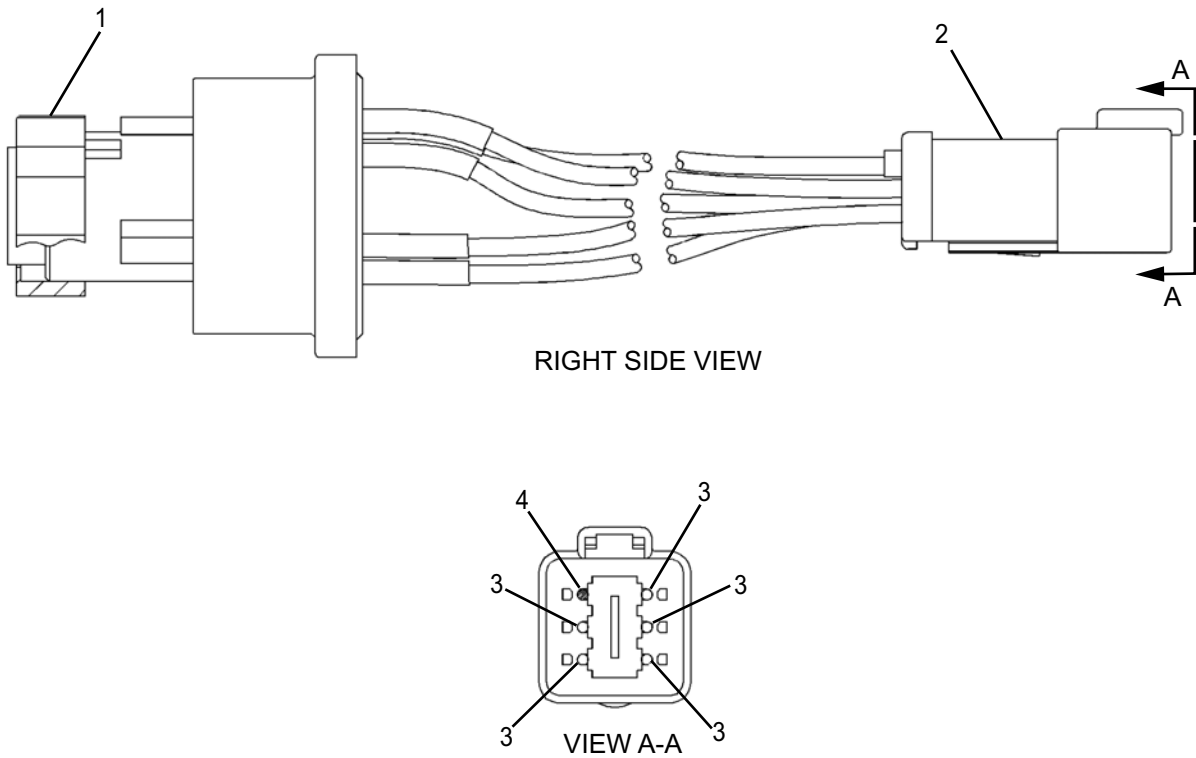


TABLE FOR FIGURE 03-13:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	7T-6799	NUT-MOUNTING (1-32-THD)	1	
2	102-8805	KIT-RECEPTACLE (6-PIN)	1	
3	8T-8729	PIN-CONNECTOR (16-GA TO 18-GA)	5	
4	8T-8737	PLUG-SEAL	1	

FIGURE 03-14 WIPER GP-WINDOW-UPPER


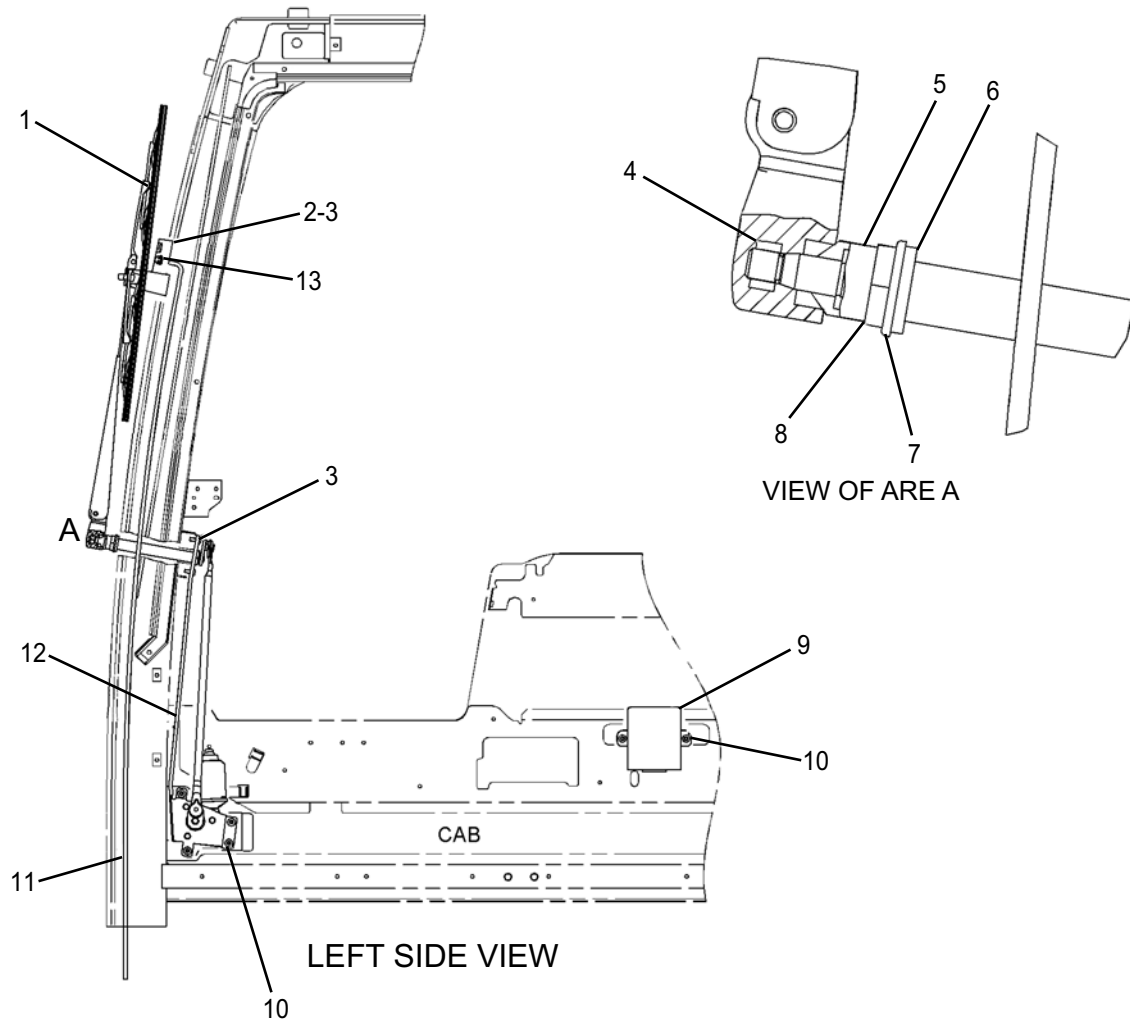


TABLE FOR FIGURE 03-14:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	372-9334	ARM GP-WINDOW WIPER (UPPER)	1	
	161-3669	•GUIDE	1	
	161-3670	•BLADE AS-WIPER (600-MM)	1	
	372-9285	•ARM AS-WIPER (UPPER)	1	
	185-8290	•SCREW AS (M3.5X0.6X9-MM)	1	
2	342-3548	HOLDER	1	
3	9X-2044	SCREW-TRUSS HEAD (M6X1X16-MM)	4	
4	6V-8231	NUT (M10X1.25-THD)	1	
5	7Y-3472	CAP	1	
6	124-3952	PACKING	1	
7	124-3953	WASHER (20.5X30X2-MM THK)	1	
8	7Y-3470	NUT (M20X1-THD)	1	
9	155-7042	RELAY AS (UPPER WIPER)	1	
10	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	6	
11	383-5632	HOSE	1	
12	342-3546	MOTOR GP-WINDOW WIPER	1	
13	383-5631	NOZZLE	1	

FIGURE 03-15 WIRING GP-CAB-ROOF

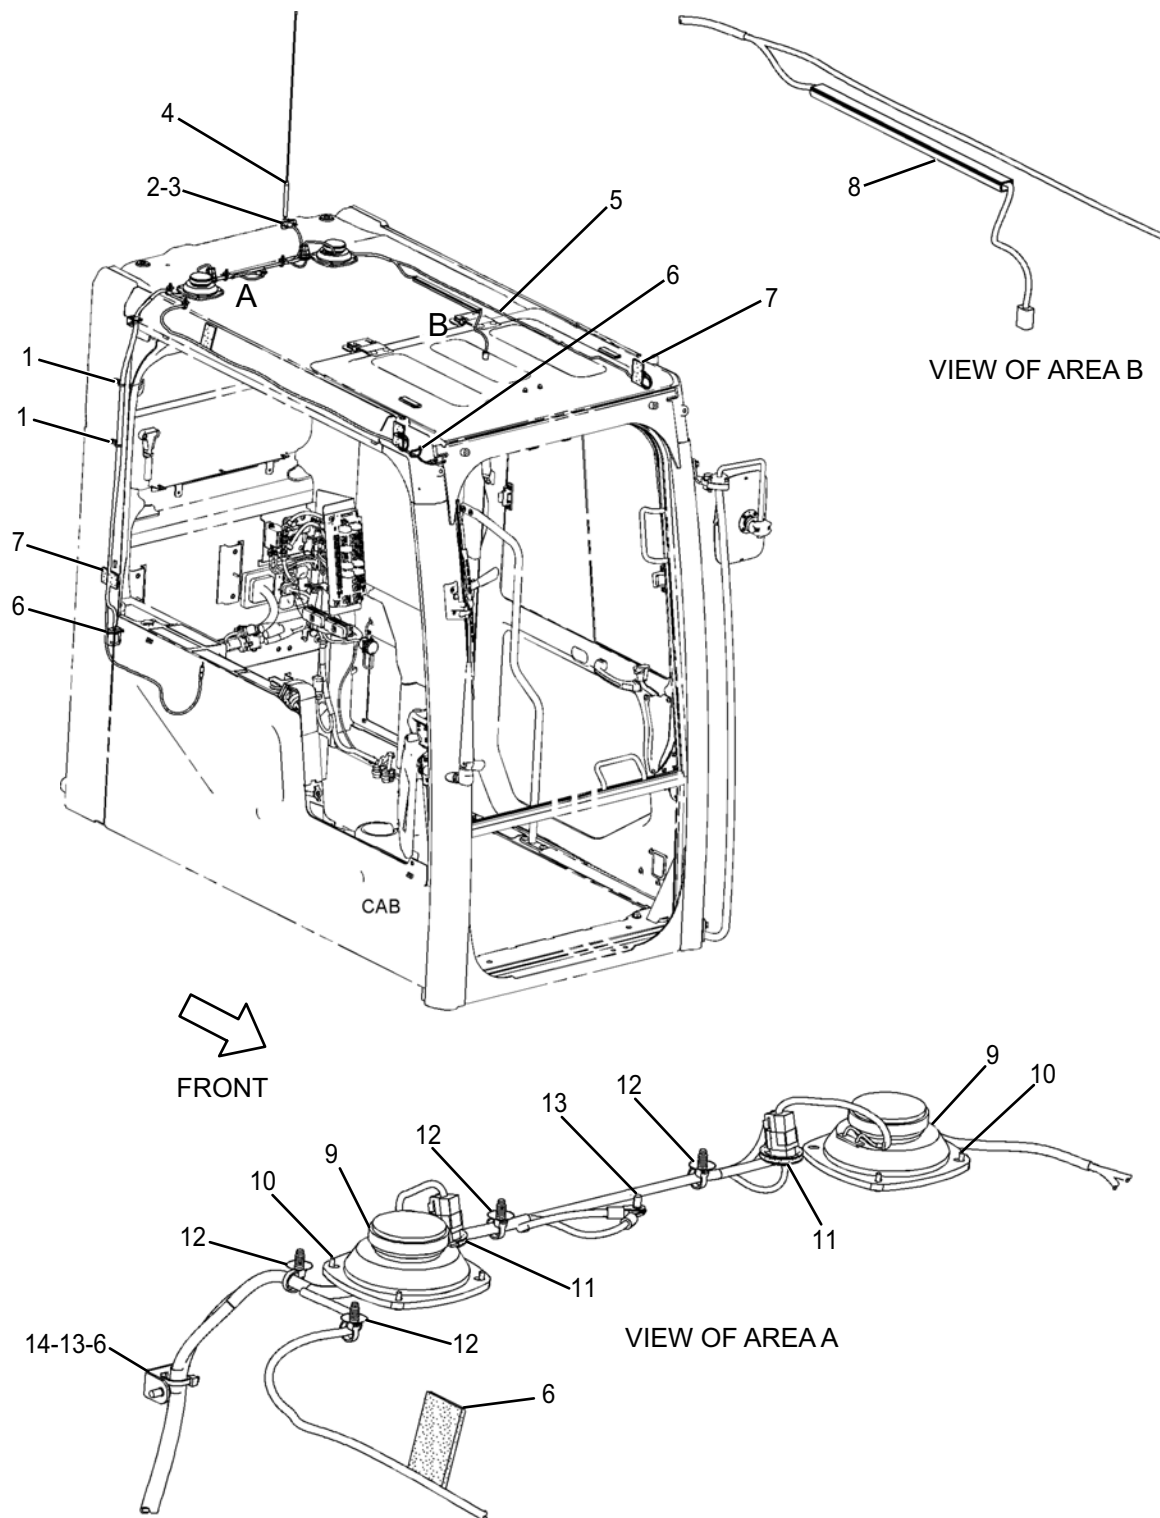

03-15

TABLE FOR FIGURE 03-15:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	7I-2673	STRAP-CABLE	2	
2	6V-9491	SCREW-MACHINE (M4X0.7X20-MM)	2	
3	096-6166	WASHER-HARD (4.5X9X1-MM THK)	2	
	7Y-3951	•TERMINAL-BLADE (14-GA)	2	
	7Y-3954	•CONNECTOR-PLUG (3-PIN)	1	
4	342-3067	ANTENNA AS	1	
5	327-9967	HARNESS AS-CAB	1	
	8T-8729	•PIN-CONNECTOR (16-GA TO 18-GA)	5	
	3S-2093	•STRAP-CABLE	14	
	7Y-3950	•TERMINAL-BLADE (14-GA TO 20-GA)	4	
	7Y-3955	•CONNECTOR-RECEPTACLE	2	
	7Y-3962	•TERMINAL-BULLET (MALE)	2	
	7Y-3964	•TUBE (CONNECTOR TERMINAL)	2	
	7Y-3963	•TERMINAL-BULLET (FEMALE)	2	
	7Y-3965	•TUBE (RECEPTACLE TERMINAL)	2	
	8T-8737	•PLUG-SEAL	4	
	9W-0852	•PIN-CONNECTOR (14-GA TO 16-GA)	3	
	125-7875	•TUBE-HEAT SHRINK (7.44-MM DIA) (5-CM)	AR	
	2L-8067	•TERMINAL-RING (10-GA TO 12-GA, 1/4-IN SCREW)	2	
	2L-8075	•TERMINAL-RING (14-GA TO 16-GA, NO. 8 SCREW)	1	
	167-3630	•CONNECTOR-PLUG	1	
	167-3631	•TERMINAL (FEMALE)	2	
	243-4510	•RECEPTACLE AS-CONNECTOR (12-PIN)	1	
	5P-3059	•TERMINAL-FORK (18-GA TO 22-GA, NO. 6 SCREW)	1	

TABLE FOR FIGURE 03-15: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
6	3S-2093	STRAP-CABLE	3	
7	251-0637	• INSULATION	4	
8	342-3601	COVER AS	1	
9	7Y-5505	SPEAKER AS	2	
10	8T-0337	SCREW-MACHINE (M4X0.7X12-MM)	6	
11	101-2846	GUARD (9-CM EACH)	2	
12	163-6795	STRAP-CABLE	5	
13	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	2	
14	156-6175	CLIP	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-16 WIRING GP-CONVERTER

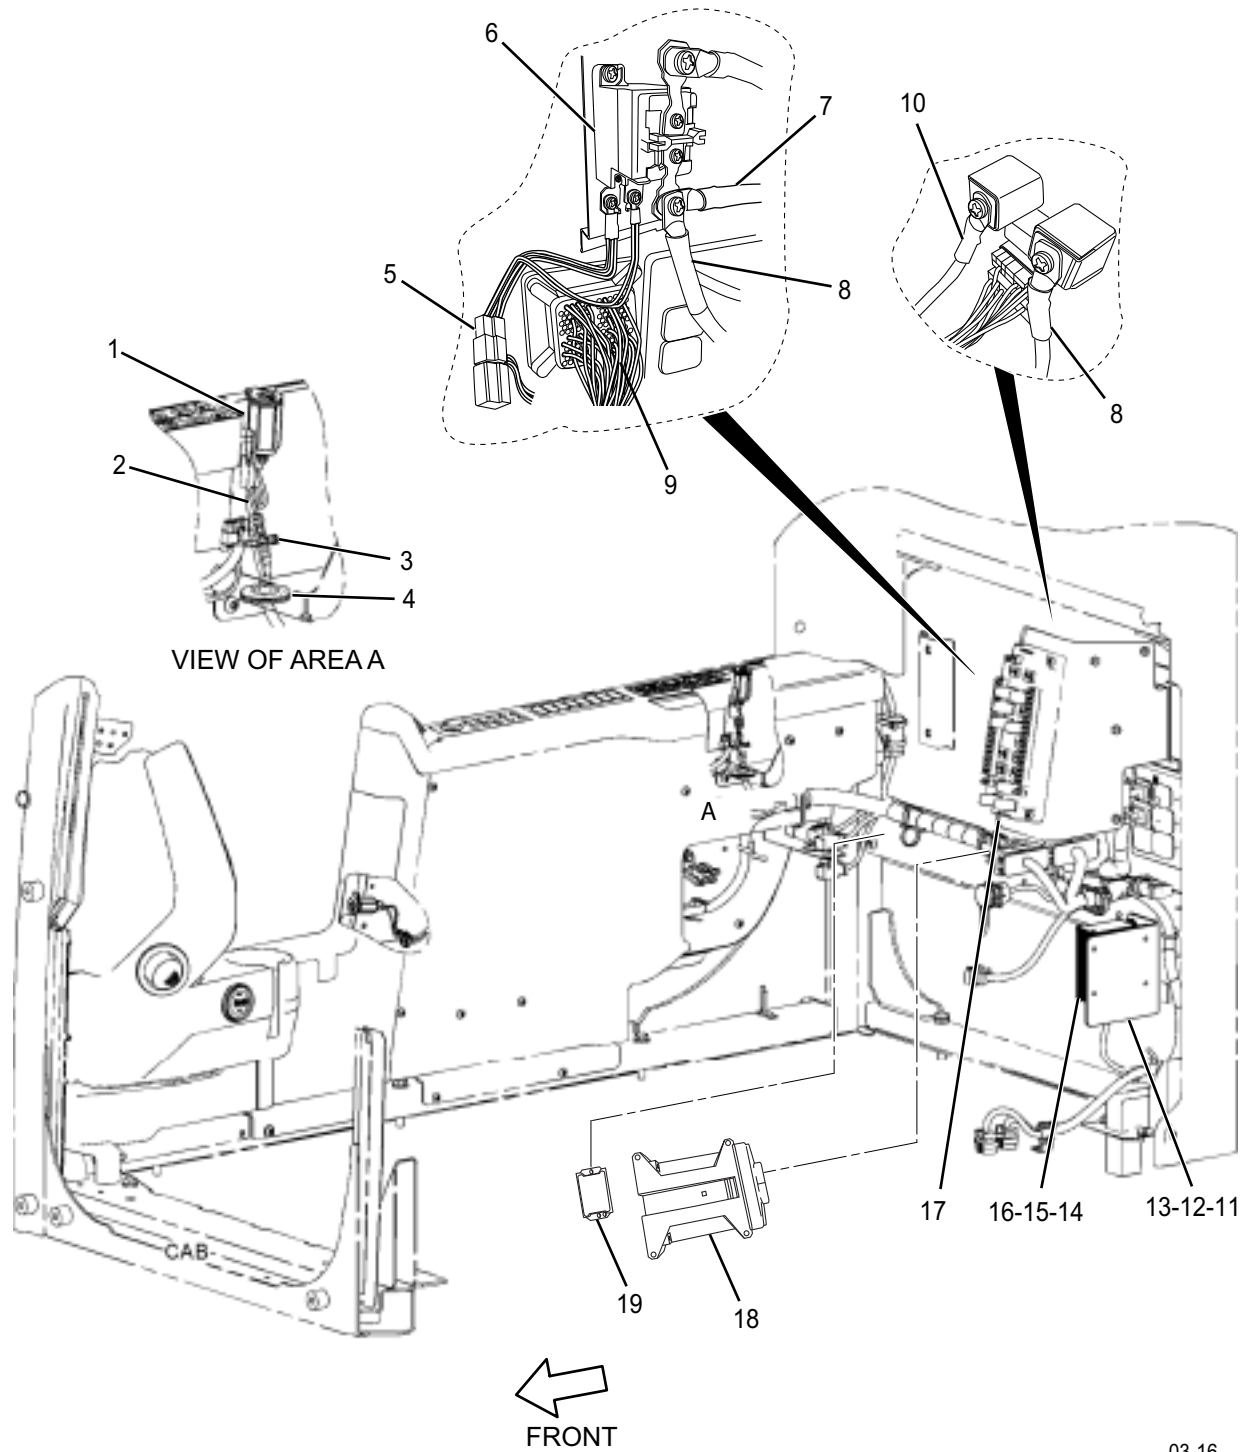


03-16

TABLE FOR FIGURE 03-16:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	324-5771	SOCKET-AUXILIARY POWER (12-VOLT)	2	
2	369-0153	WIRE AS	2	
3	3S-2093	STRAP-CABLE	2	
4	170-2986	GROMMET	1	
5	121-1022	DIODE	1	
6	213-0772	MAIN RELAY 24V	1	
7	A-04225-812	BATTERY CABLE	1	
8	A-04225-813	BATTERY CABLE	1	
9	A-04225-810	MAIN ROPS CAB HARNESS	1	
10	A-04225-814	BATTERY CABLE	1	
11	8T-4137	BOLT (M10X1.5X20-MM)	2	
12	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	2	
13	336-5895	BRACKET	1	
14	9X-8256	WASHER (6.6X12X2-MM THK)	4	
15	8T-4171	BOLT (M6X1X12-MM)	4	
16	324-5770	CONVERTER-POWER (24-VOLT TO 12-VOLT)	1	
17	A-08025-705	CAB DISGNOSTIC CONVERSION FOR CUMMINS	1	
18	A-04225-704	CONTROLLER	1	
19	A-04225-707	INCLINOMETER	1	

FIGURE 03-17 PLATFORM GP-OPERATOR

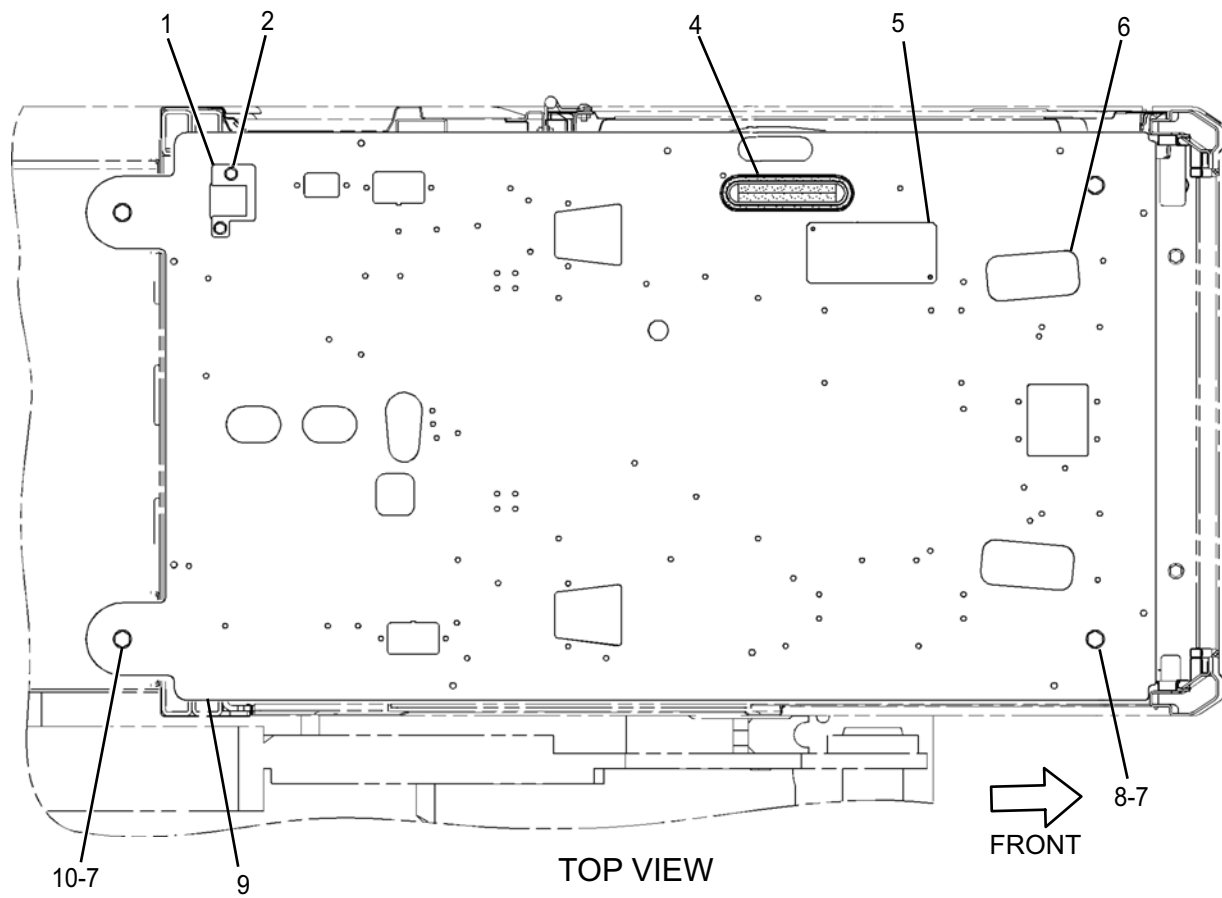


03-17

TABLE FOR FIGURE 03-17:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	162-0349	COVER	2	
2	453-1259	BOLT (M16X2X40-MM)	2	
3	340-6484	PLATE	1	
4	316-8930	COVER AS	1	
5	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	2	
6	353-1846	COVER	1	
7	8T-4191	BOLT (M10X1.5X16-MM)	2	
8	451-2175	WASHER-HARD (17.5X30X3.5-MM THK)	4	
9	346-8052	VALVE	1	
10	447-1711	BOLT (M16X2X50-MM)	2	

FIGURE 03-18 HATCH GP-ROOF

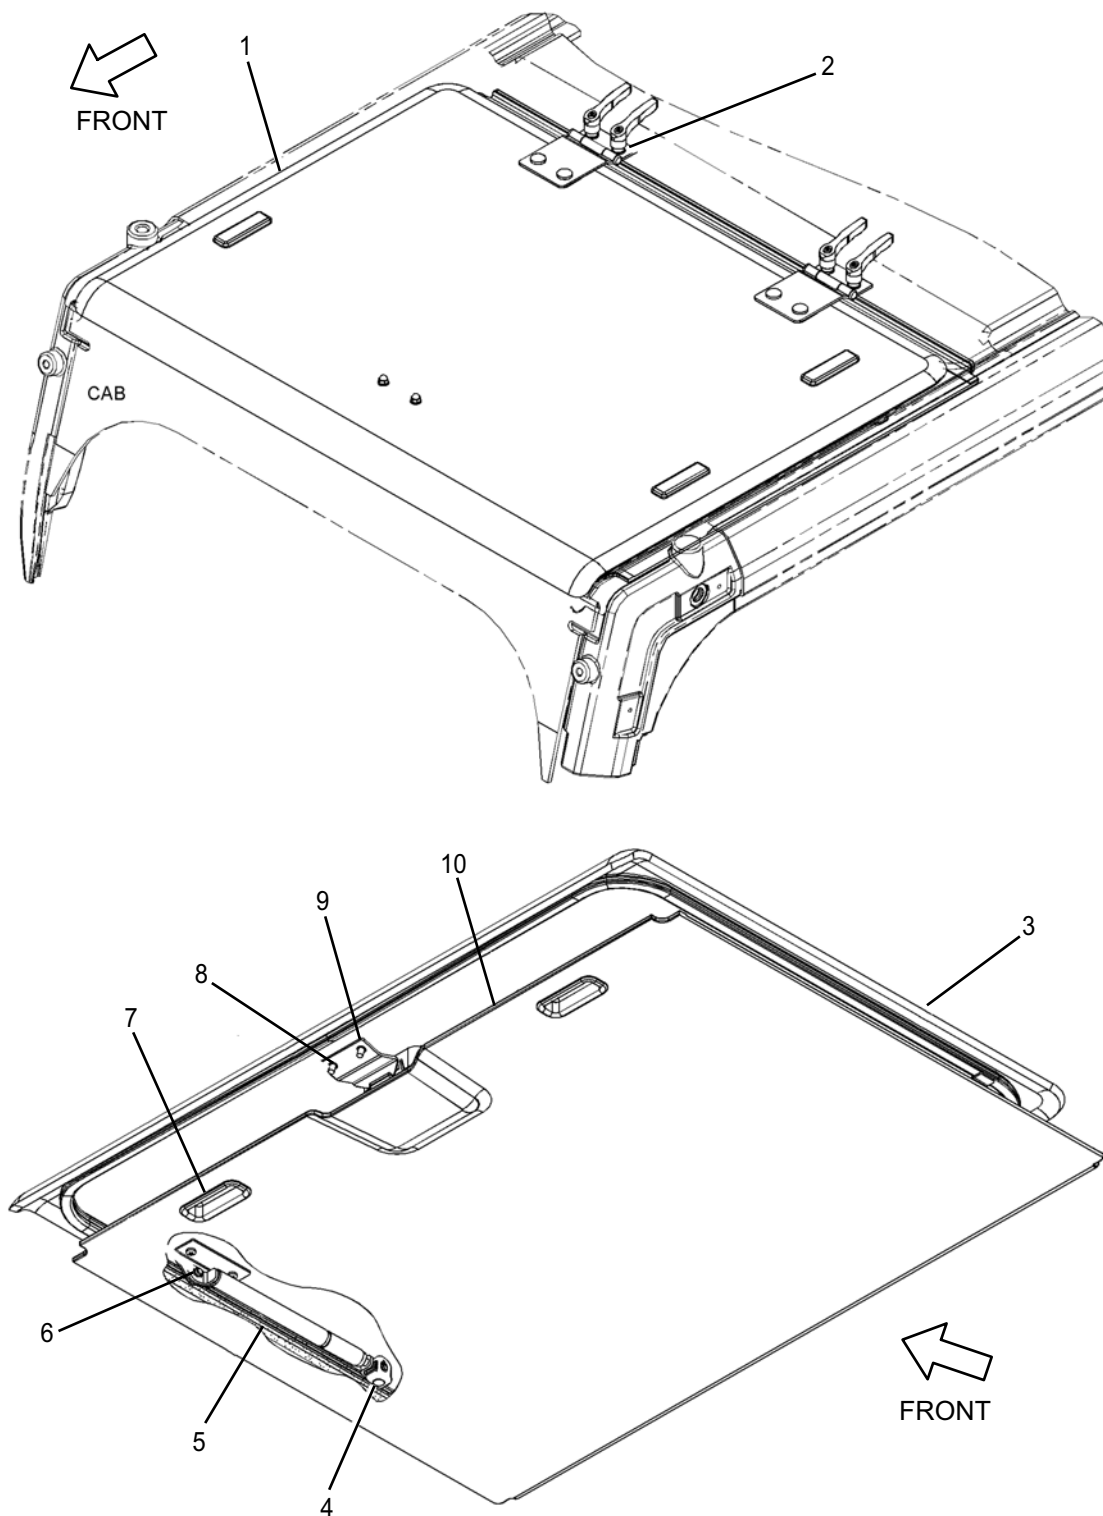


03-18

TABLE FOR FIGURE 03-18:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7922	HATCH GP-ROOF	1	
2	8T-4224	WASHER-HARD (8.8X16X2-MM THK)	4	
3	340-6594	SEAL	1	
4	340-6593	HOLDER AS	2	
5	099-3506	SPRING AS-GAS	2	
6	5D-4822	RING-RETAINING	2	
7	235-8929	HANDLE	2	
8	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	2	
9	340-6595	STRIKER	1	
10	327-6479	VISOR	1	

FIGURE 03-19 HATCH GP-ROOF

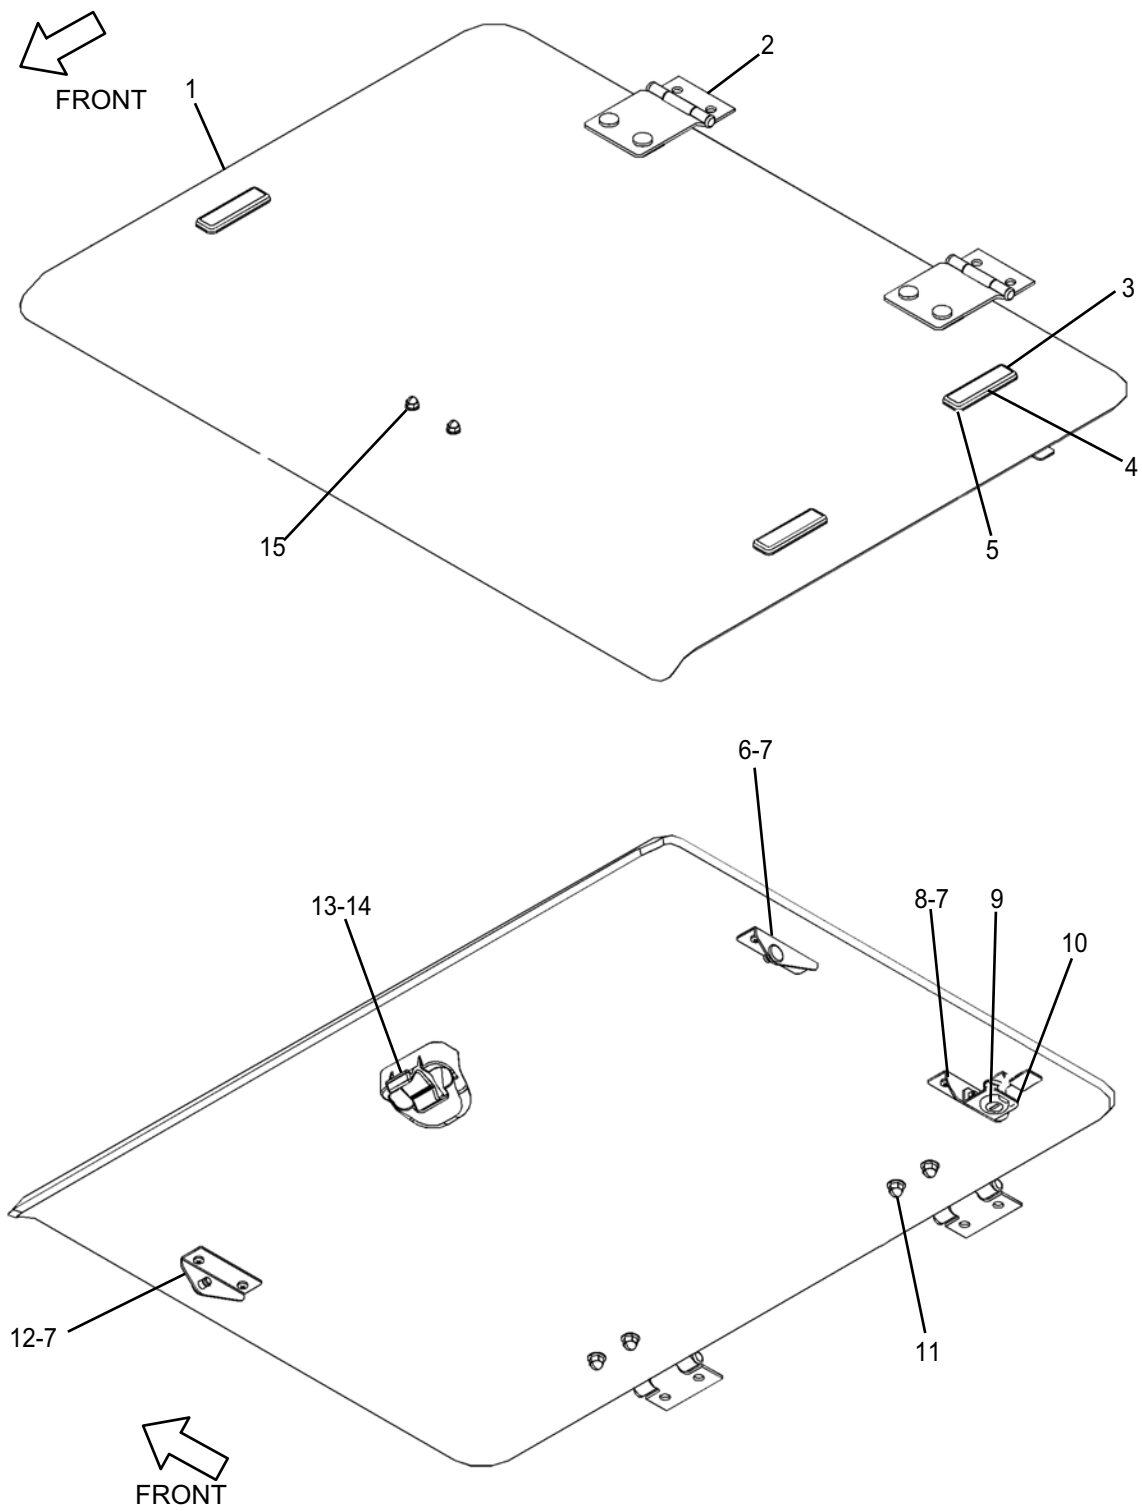

03-19

TABLE FOR FIGURE 03-19:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7906	VISOR	1	
2	340-6592	HINGE AS	2	
3	4I-4361	RETAINER	3	
4	4I-1260	PACKING	2	
5	085-6449	PACKING	3	
6	189-2694	BRACKET AS (LH)	1	
7	095-0736	SCREW-MACHINE (M5X0.8X10-MM)	8	
8	346-7907	BRACKET	1	
9	346-7924	LOCK AS	1	
10	346-7908	BRACKET AS	1	
11	6I-5342	NUT (M8X1.25-THD)	4	
12	189-2693	BRACKET AS (RH)	1	
13	161-3694	CATCH	1	
14	9X-2045	SCREW-TRUSS HEAD (M6X1X20-MM)	2	
15	171-7477	NUT	2	

FIGURE 03-20 MOUNTING GP-ROPS

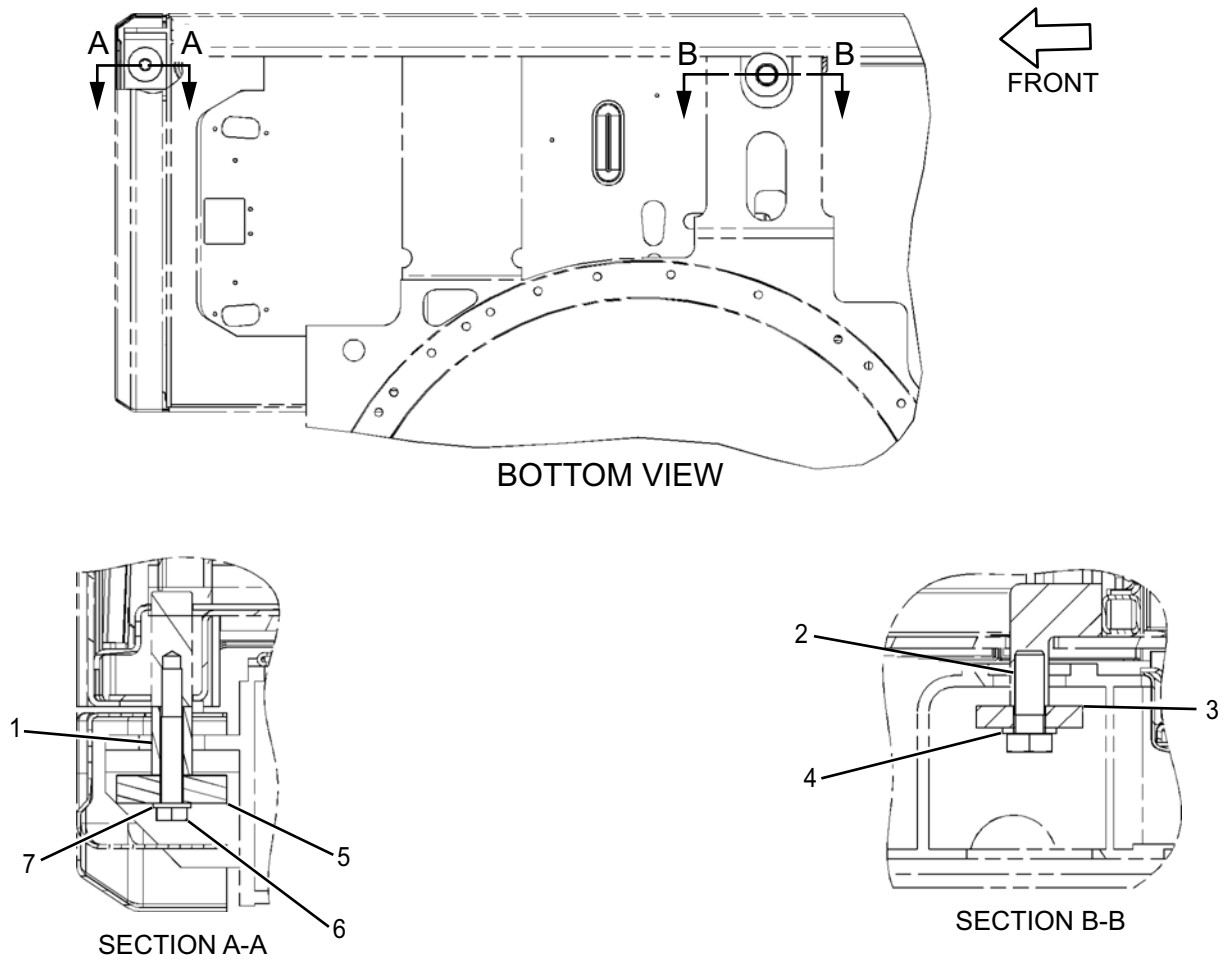


TABLE FOR FIGURE 03-20:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8931	SLEEVE (FRONT)	1	
2	145-2970	BOLT (M30X3.5X85-MM) (M30X3.5X85-MM)	1	
3	353-2087	STOP (REAR)	1	
4	451-2178	WASHER-HARD	1	
5	316-8932	STOP (FRONT)	1	
6	453-1256	BOLT	1	
7	451-2175	WASHER-HARD (17.5X30X3.5-MM THK)	1	

FIGURE 03-21 LINES GP-WINDOW WASHER

TABLE FOR FIGURE 03-21:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	357-3977	LINES GP-WINDOW WASHER	1	
2	6V-3265	CLIP	2	
3	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	2	
4	8T-4191	BOLT (M10X1.5X16-MM)	2	
5	9K-0700	GROMMET	1	

FIGURE 03-22 LINES GP-WINDOW WASHER


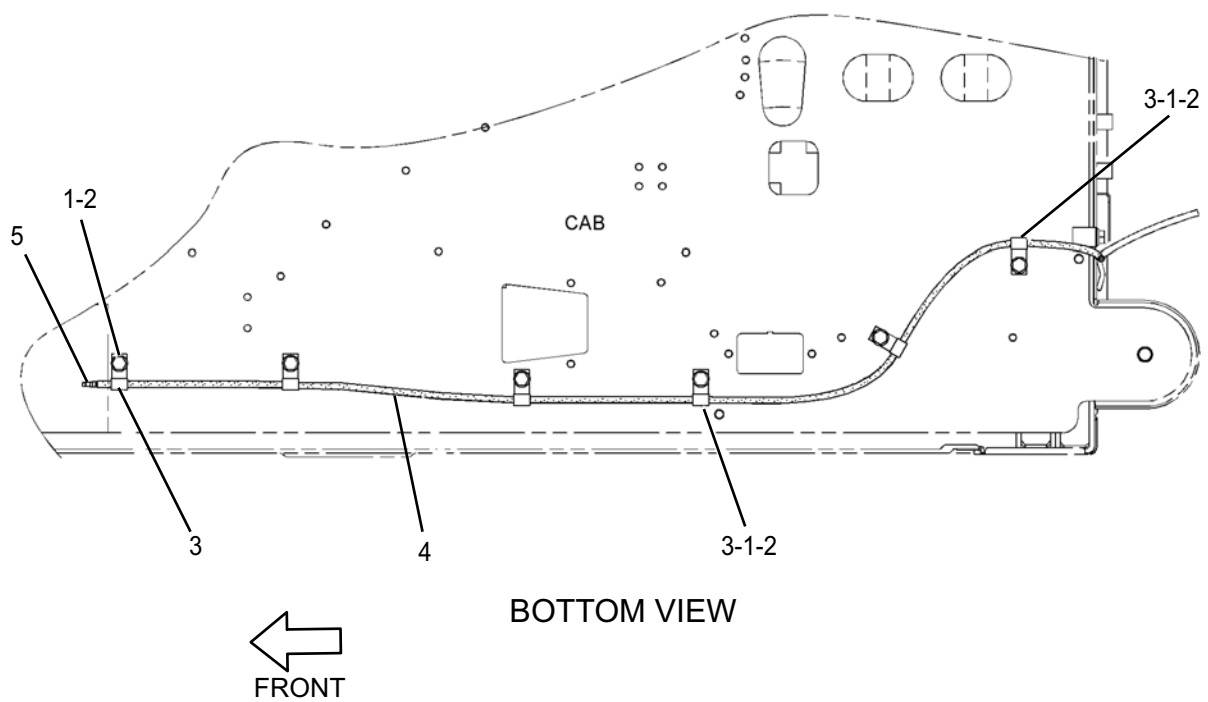


TABLE FOR FIGURE 03-22:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	8T-4191	BOLT (M10X1.5X16-MM)	6	
2	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	6	
3	6V-3265	CLIP	6	
4	144-0195	HOSE (140-CM)	AR	
5	7Y-3474	VALVE AS-CHECK (WINDOW WASHER)	1	

FIGURE 03-23 CAB GP

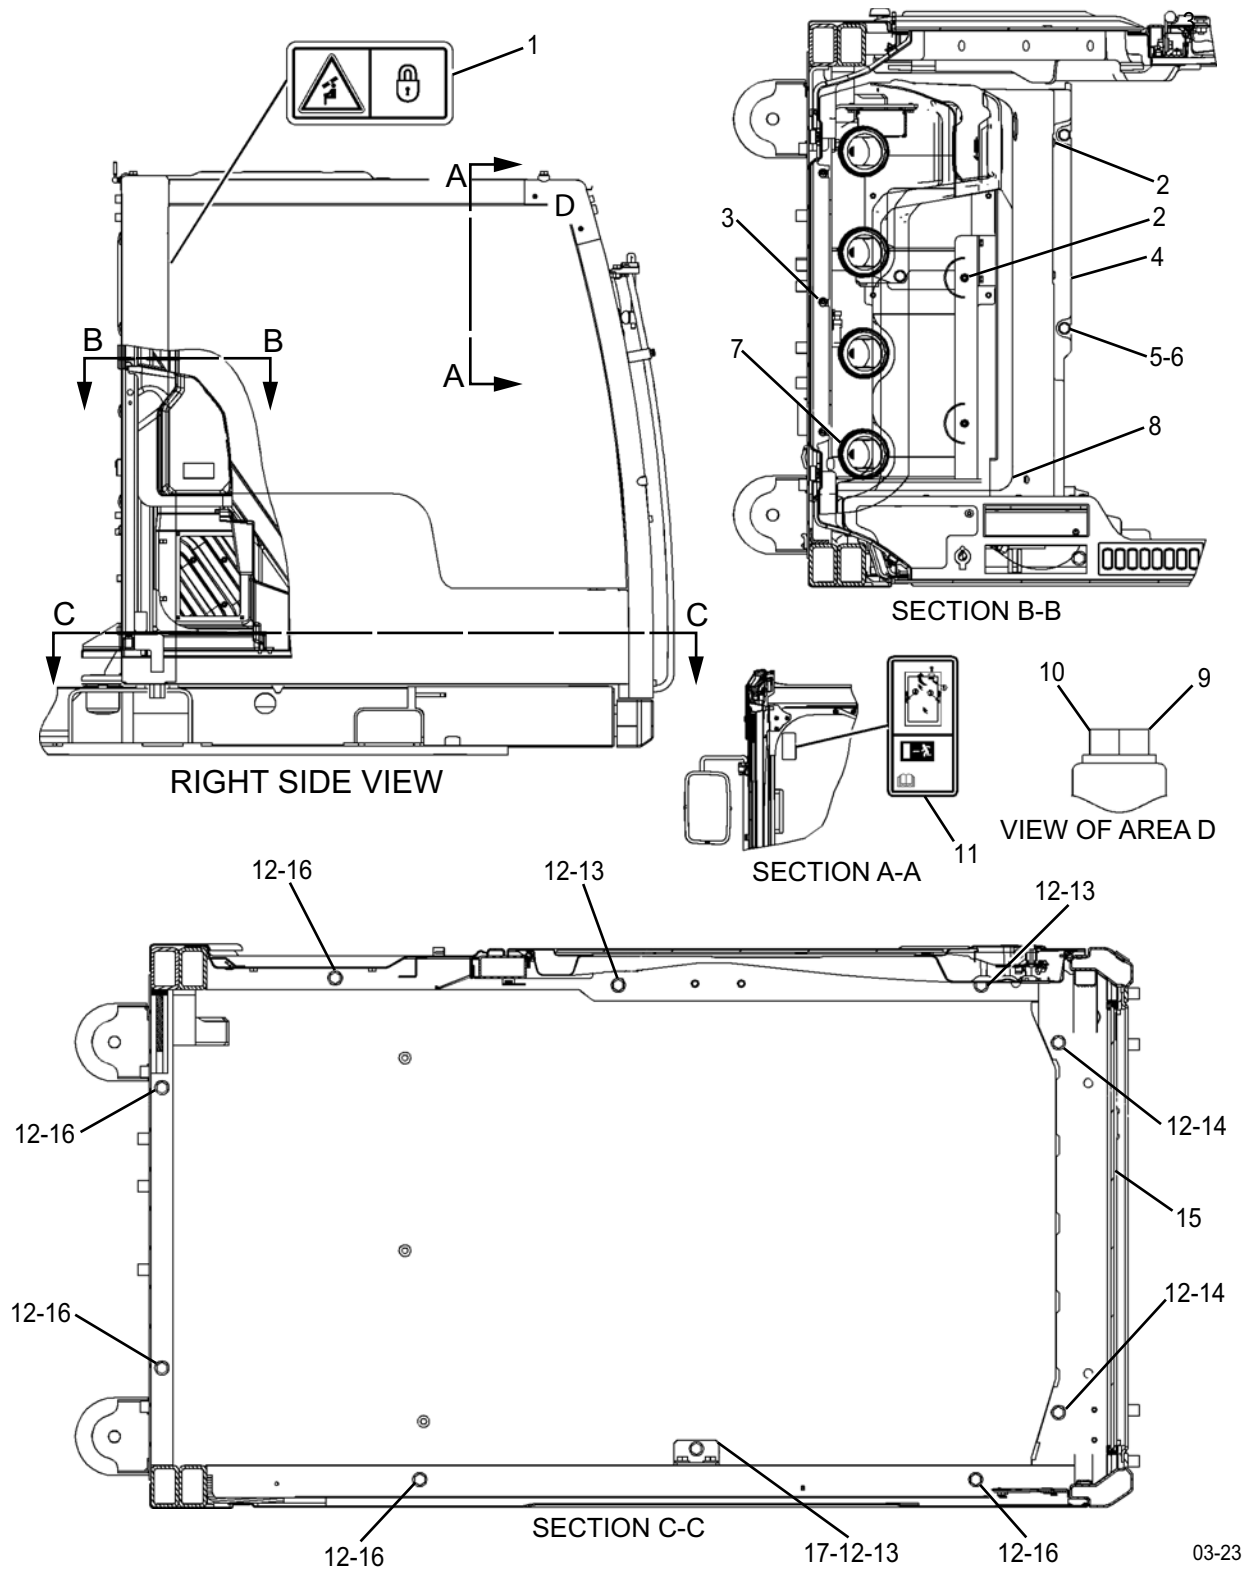

03-23

TABLE FOR FIGURE 03-23:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	331-8008	FILM-WARNING (FRONT WINDOW, READ OMM, INTL)	1	
2	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	5	
3	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	3	
4	327-6554	COVER	1	
5	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	3	
6	8T-4191	BOLT (M10X1.5X16-MM)	3	
7	164-8474	LOUVER AS-VENT	4	
8	327-6616	COVER GP-CAB	1	
9	8T-4190	BOLT (M16X2X25-MM)	4	
10	9X-8257	WASHER (17.5X30X3.5-MM THK)	4	
11	331-7979	FILM-INSTRUCTION (ALTERNATE EXIT, READ OMM)	1	
12	8T-4223	WASHER-HARD (13.5X25.5X3-MM THK)	12	
13	8T-4179	BOLT (M12X1.75X20-MM)	5	
14	8T-4192	BOLT (M12X1.75X25-MM)	2	
15	353-2046	CAB GP	1	
16	8T-4648	BOLT (M12X1.75X70-MM)	5	
17	235-9001	SUPPORT	1	

FIGURE 03-24 COVER GP-CAB


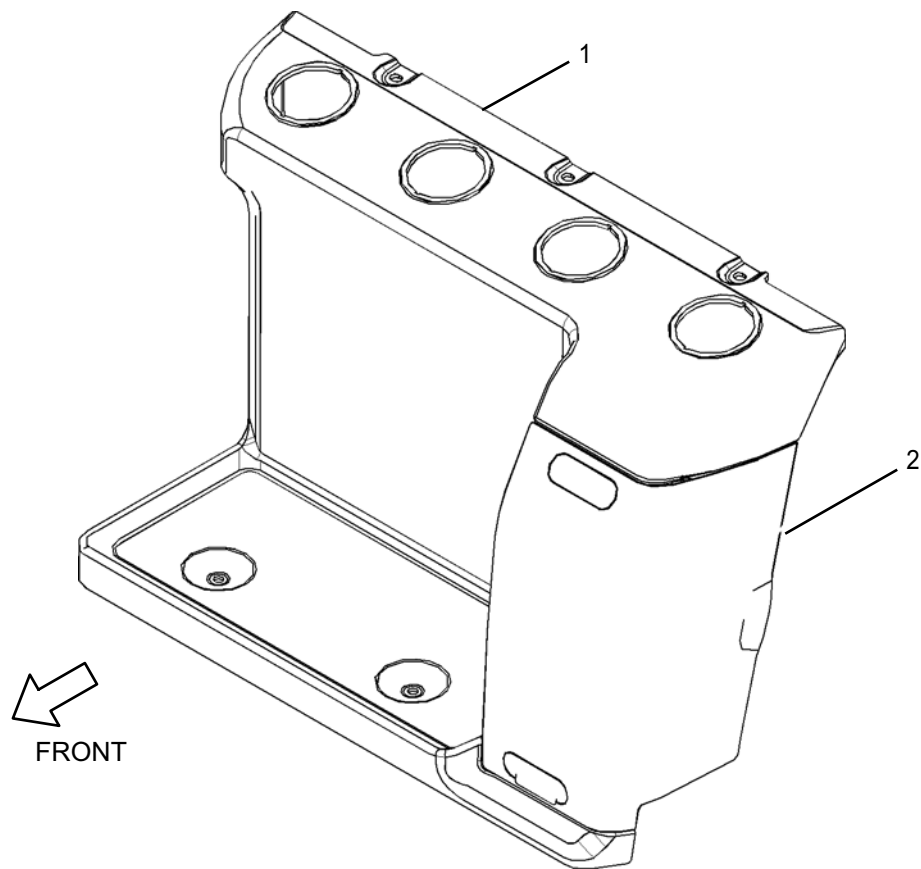


TABLE FOR FIGURE 03-24:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6486	COVER	1	
2	327-6487	COVER	1	

FIGURE 03-25 CAB GP

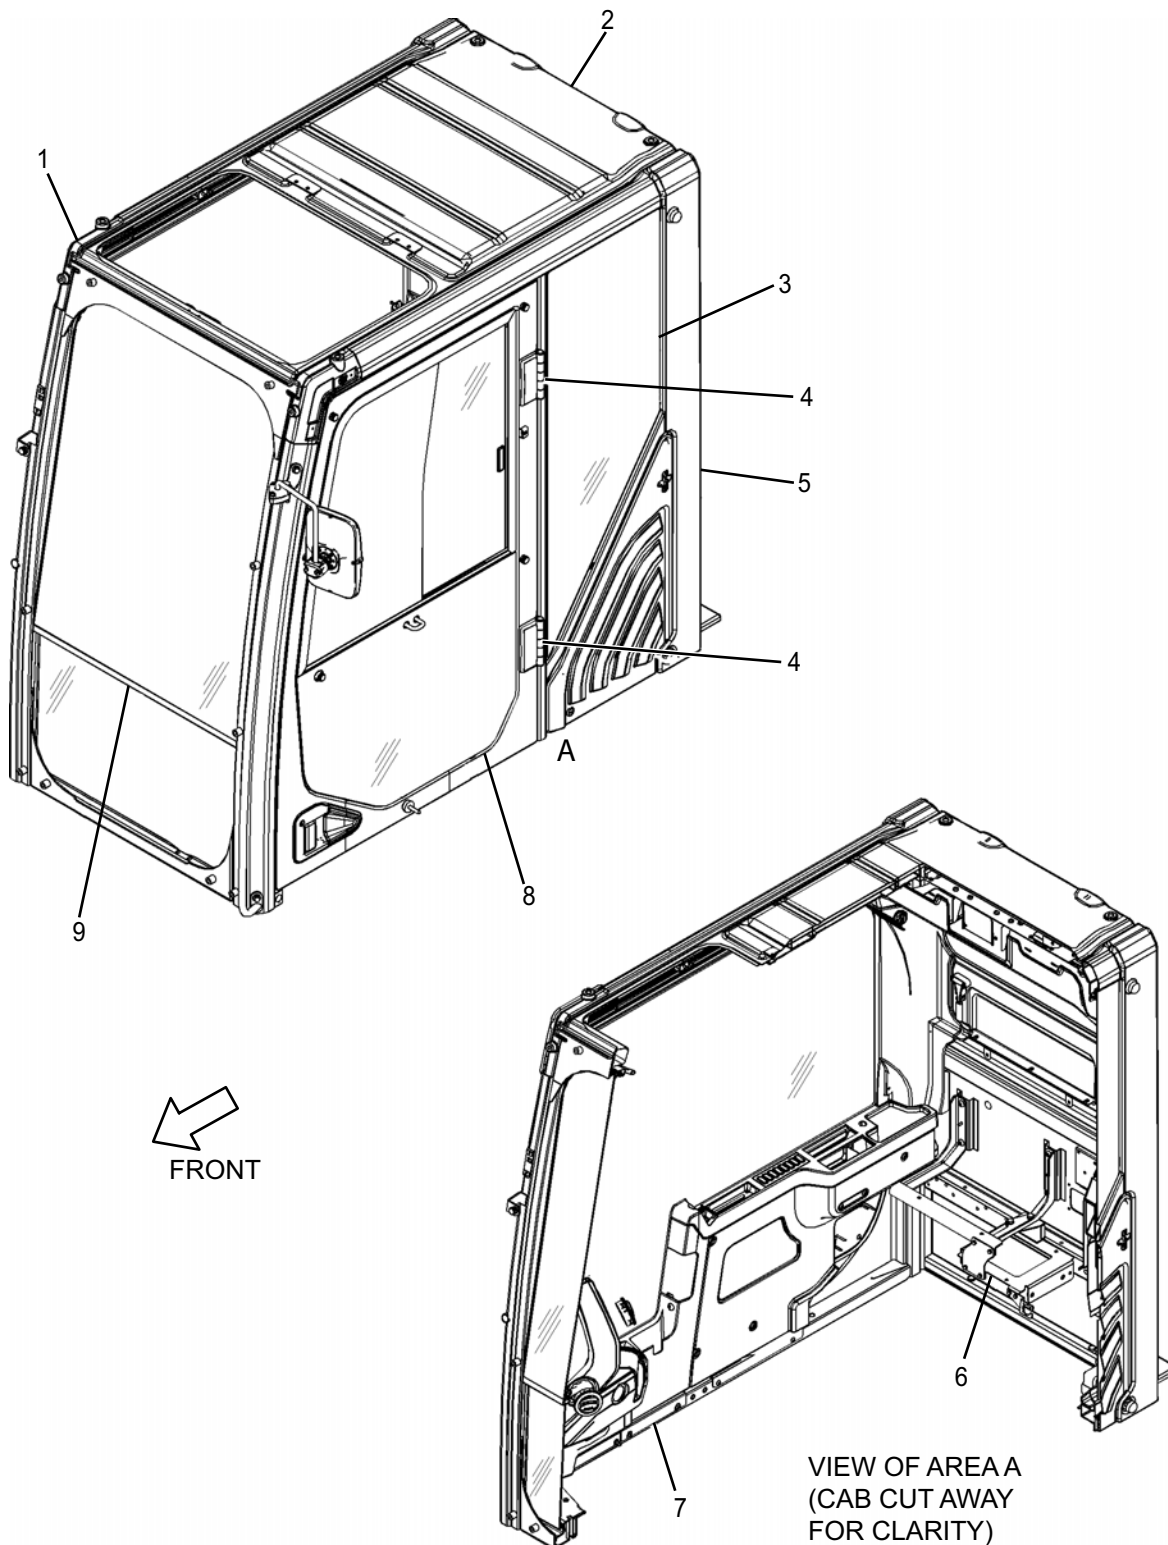


03-25

TABLE FOR FIGURE 03-25:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7953	COVER GP-CAB	1	
2	353-1845	CAB GP (EXTERIOR)	1	
3	342-3549	WINDOW GP-CAB (FRONT, REAR, SIDE)	1	
4	151-6777	HINGE	2	
5	357-3891	CAB AS	1	
6	333-4161	BRACKET GP-MOUNTING	1	
7	333-4344	CAB GP (INTERIOR)	1	
8	346-8062	DOOR GP-CAB Only Top & Bottom Glass	1	
	185-8182	•BOLT (M10X1.5X20-MM)	6	
	185-8187	•WASHER (10.2X22X3.2-MM THK)	6	
	9X-2041	•SCREW-TRUSS HEAD (M10X1.5X20-MM)	6	
9	327-6625	WINDOW GP-CAB (FRONT, UPPER)	1	

372-9323 - COMPLETE DOOR ASSY

FIGURE 03-26 BRACKET GP-MOUNTING

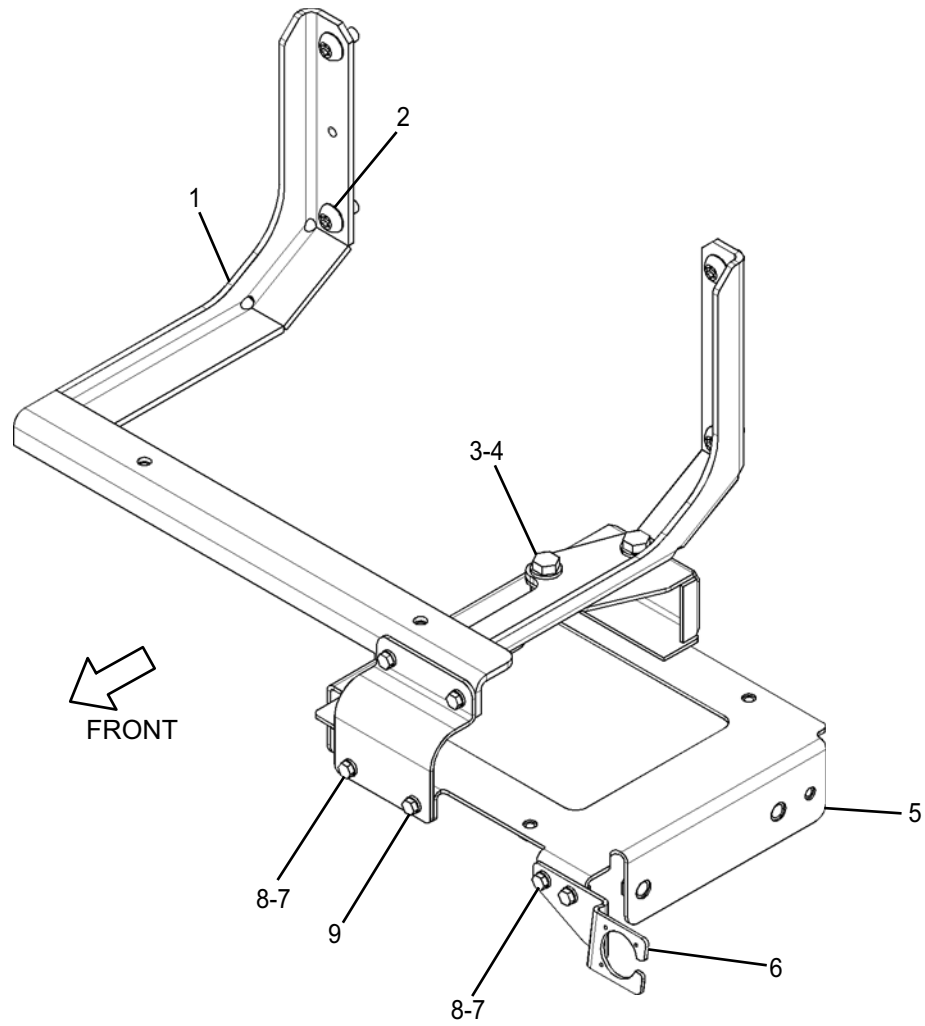

03-26

TABLE FOR FIGURE 03-26:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7998	BRACKET AS	1	
2	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	4	
3	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	2	
4	8T-4137	BOLT (M10X1.5X20-MM)	2	
5	346-7957	BRACKET AS	1	
6	342-3564	BRACKET	1	
7	9X-8256	WASHER (6.6X12X2-MM THK)	6	
8	5C-9553	BOLT (M6X1X16-MM)	6	
9	333-4176	BRACKET	1	

FIGURE 03-27 CAB GP-INTERIOR

TABLE FOR FIGURE 03-27:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	333-4345	COVER GP-CAB (REAR)	1	
2	333-4346	COVER GP-CONSOLE (WIPER MOTOR)	1	
3	333-4347	COVER GP-CAB (RH)	1	

FIGURE 03-28 COVER GP-CAB-REAR


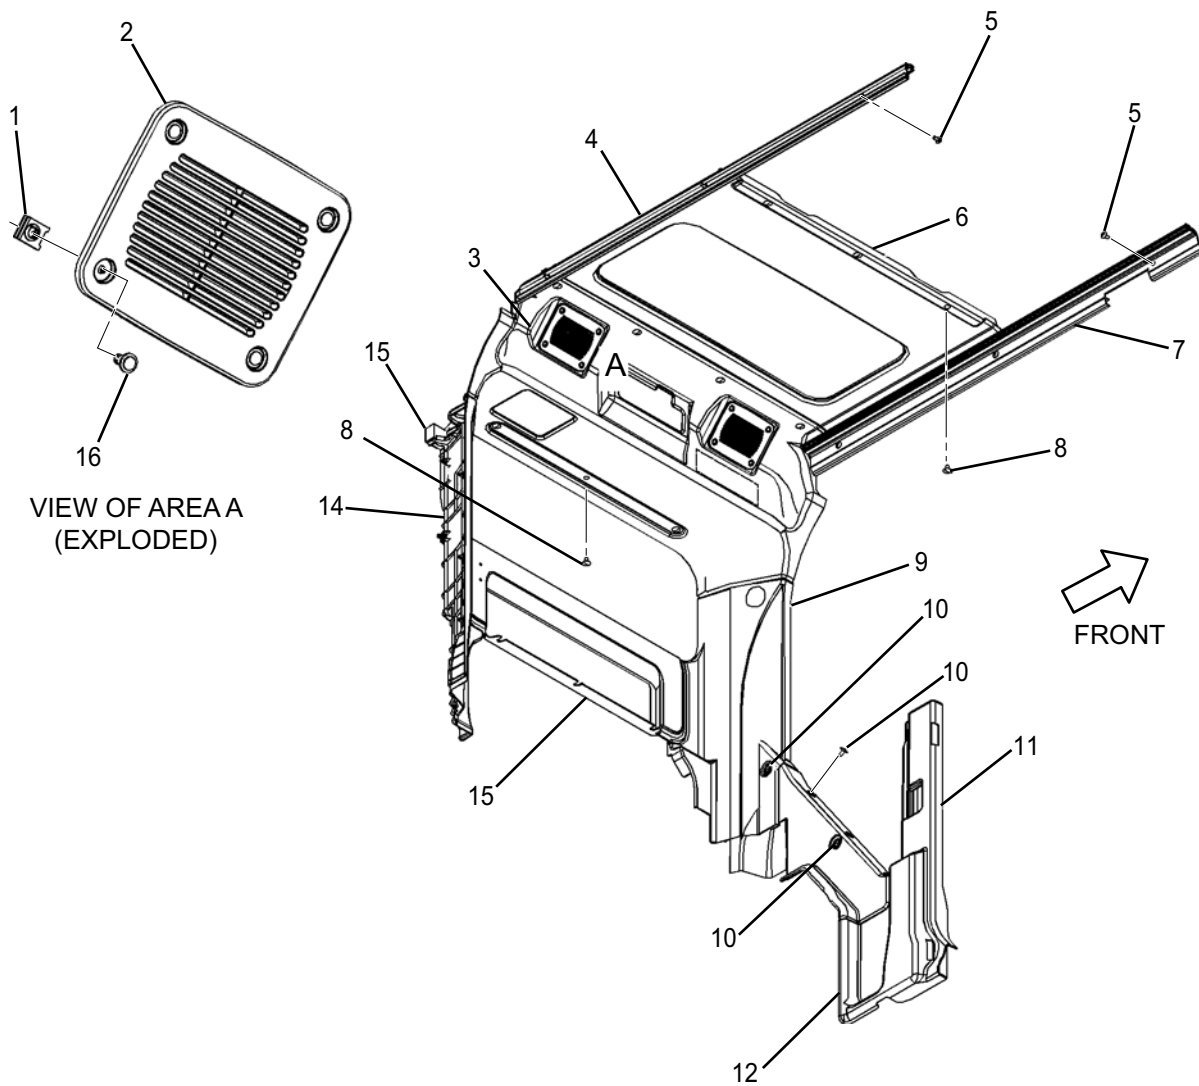


TABLE FOR FIGURE 03-28:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	234-6579	NUT-SPEED	8	
2	333-4353	COVER	2	
3	327-6476	COVER	1	
4	357-3898	RAIL AS (RH)	1	
5	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	6	
6	327-6480	COVER	1	
7	357-3899	RAIL AS (LH)	1	
8	185-8205	CLIP	10	
9	346-7361	COVER AS	1	
10	357-3975	RIVET	5	
11	342-3747	COVER AS	1	
	170-9724	•CLIP	6	
	327-6475	•COVER	1	
12	340-6742	COVER	1	
13	346-7366	COVER AS	1	
14	346-7363	COVER AS	1	
	357-3901	•STOP	1	
15	357-3964	SPACER	2	
16	171-7325	SCREW-TAPPING (M5X0.8-THD)	8	

FIGURE 03-29 COVER GP-CONSOLE-WIPER MOTOR

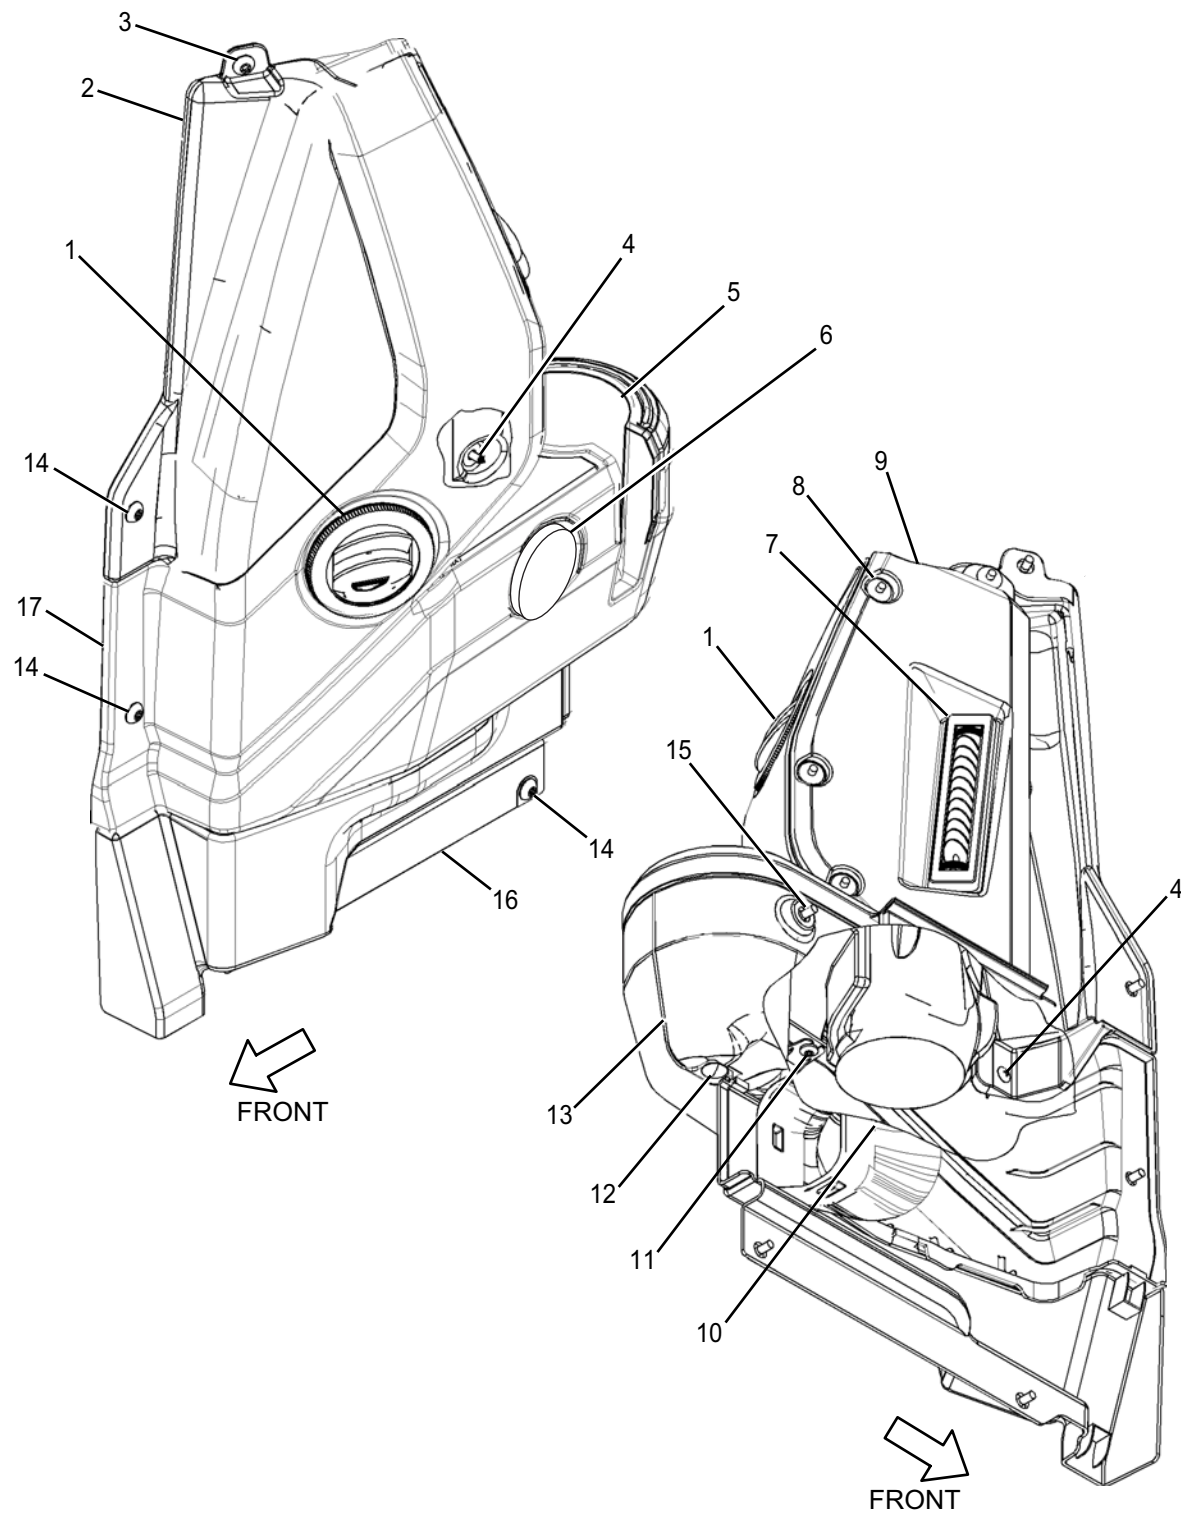


03-29

TABLE FOR FIGURE 03-29:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	164-8474	LOUVER AS-VENT	1	
2	327-6465	COVER	1	
3	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	1	
4	245-7790	SCREW - TAPPING	1	
5	346-7372	COVER	1	
6	A-04253-703	PLUG	1	
7	8Y-6352	LOUVER AS	1	
8	357-3966	FASTENER	1	
9	327-6464	COVER	1	
10	333-4363	DUCT	1	
11	099-0823	SCREW-MACHINE (M6X1X6-MM)	1	
12	185-8205	CLIP	1	
13	327-6466	COVER	1	
14	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	1	
15	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	1	
16	327-6467	COVER	1	
17	327-6463	COVER	1	

FIGURE 03-30 COVER GP-CAB-RH

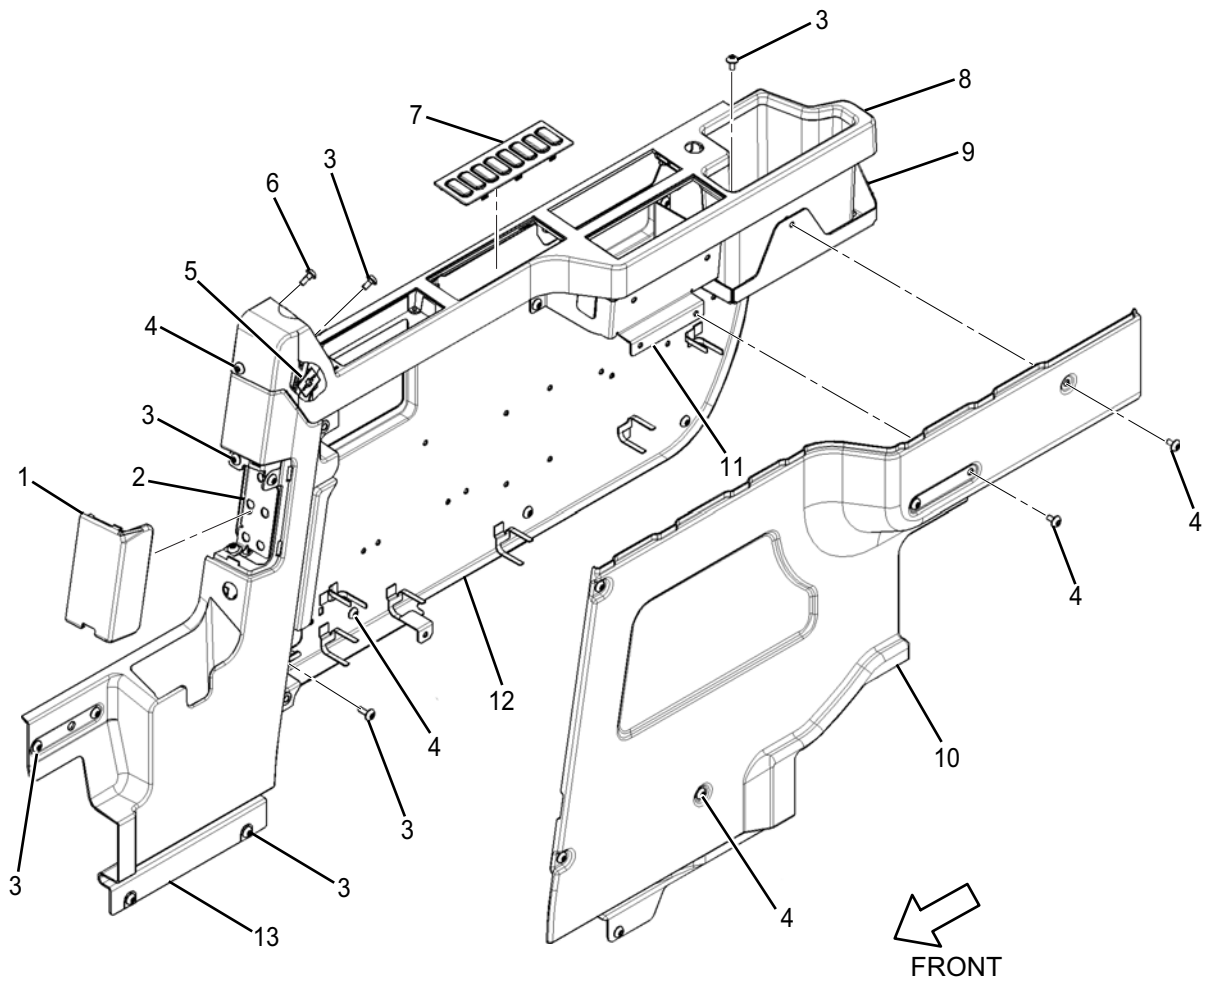


03-30

TABLE FOR FIGURE 03-30:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6472	COVER	1	
2	346-7359	BRACKET AS	1	
3	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	12	
4	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	26	
5	235-8966	BASE-MOUNTING	1	
6	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	12	
7	164-0655	PANEL-SWITCH	1	
8	357-3861	COVER AS	1	
9	333-4366	BRACKET AS	1	
10	327-6471	COVER	1	
11	333-4365	BRACKET AS	1	
12	333-4364	PANEL AS	1	
13	327-6470	COVER	1	

FIGURE 03-31 DOOR GP-CAB-PARTIAL

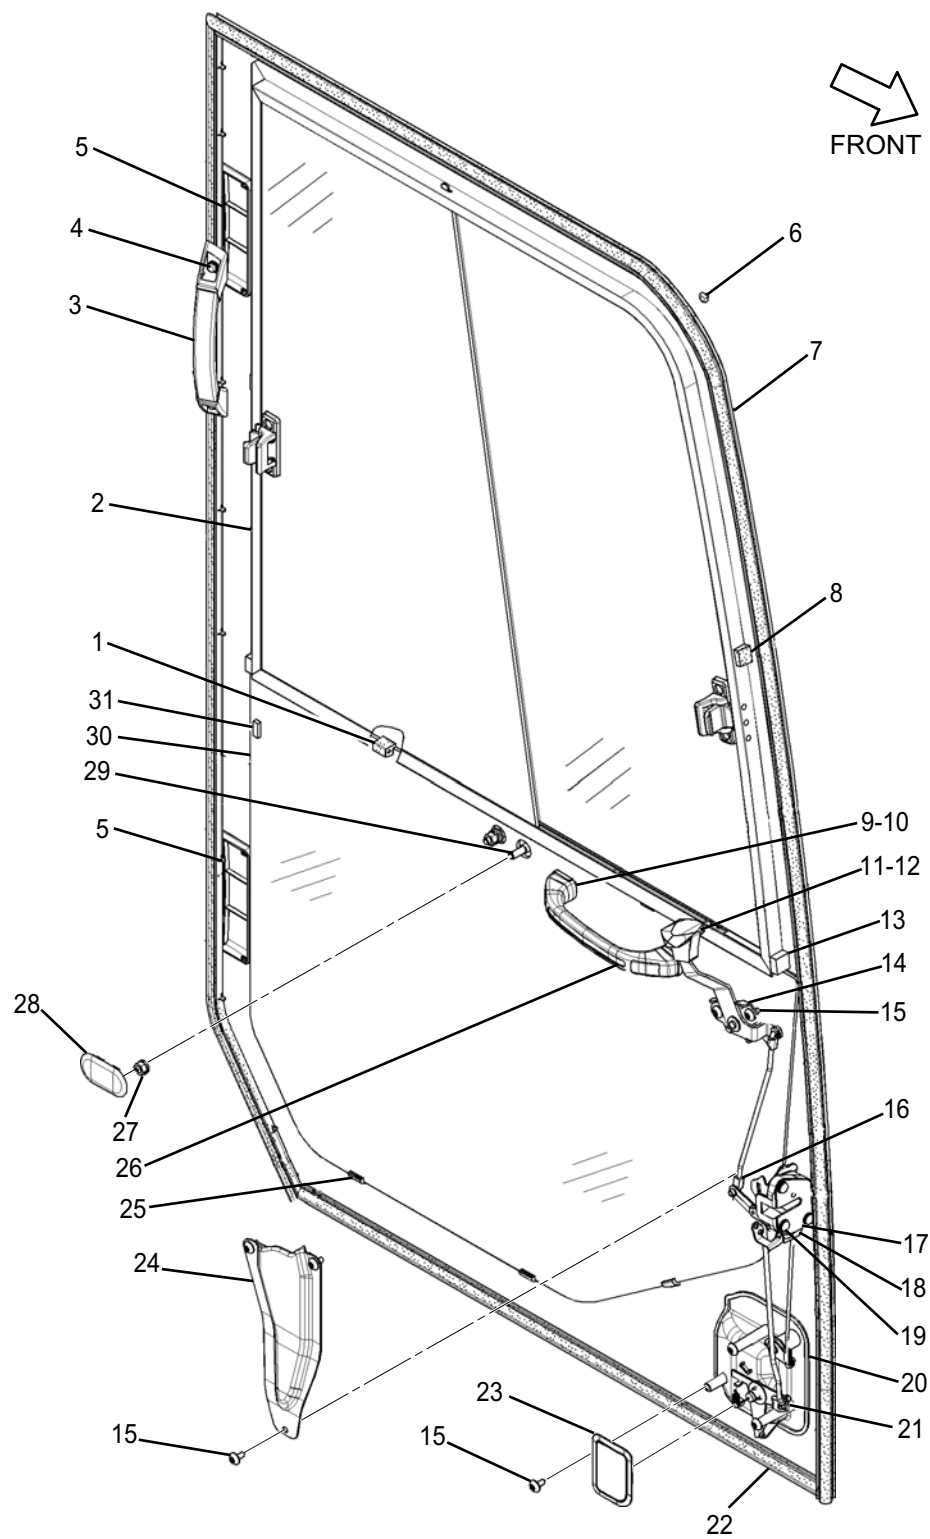

03-31

TABLE FOR FIGURE 03-31:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6526	SPACER	2	
2	383-5650	WINDOW GP-DOOR	1	
3	189-2690	HANDLE	1	
4	101-8900	SCREW AS (M6X1X20-MM)	2	
5	156-6643	COVER	2	
6	334-6538	BUSHING-RUBBER	1	
7	334-6528	SEAL AS	1	
	151-9497	•CLIP	23	
8	151-9498	SPACER	2	
9	151-9499	HANDLE-PULL	1	
10	151-9500	SCREW AS (M6X1.0X16-MM)	2	
11	151-9501	KNOB (HANDLE)	1	
12	151-9502	SCREW-MACHINE (M4X0.7X8-MM)	2	
13	151-9503	SPACER	2	
14	151-9504	HANDLE AS	1	
15	151-9505	SCREW-TRUSS HEAD (M6X1X12-MM)	8	
16	151-9506	CLIP	1	
17	151-9507	SCREW (M6X1X16-MM)	3	
18	151-9508	LATCH AS	1	
19	151-9509	CLIP	1	
20	151-9510	HANDLE AS	1	
	151-9511	•CLIP	1	
21	151-9512	JOINT	1	
22	151-9513	SEAL AS	1	
	151-9514	•CLIP	1	
23	151-9515	COVER	5	
24	151-9516	COVER	1	

TABLE FOR FIGURE 03-31: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
25	151-9517	SPACER	3	
26	151-9518	CAP (HANDLE)	2	
27	151-9519	NUT-SPRING (M8X1.25-THD)	2	
28	151-9520	GROMMET	1	
29	151-9521	HOOK	1	
30	151-9522	GLASS INCORRECT PART#	1	
31	151-9523	SPACER	2	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-32 SPACER-RUBBER


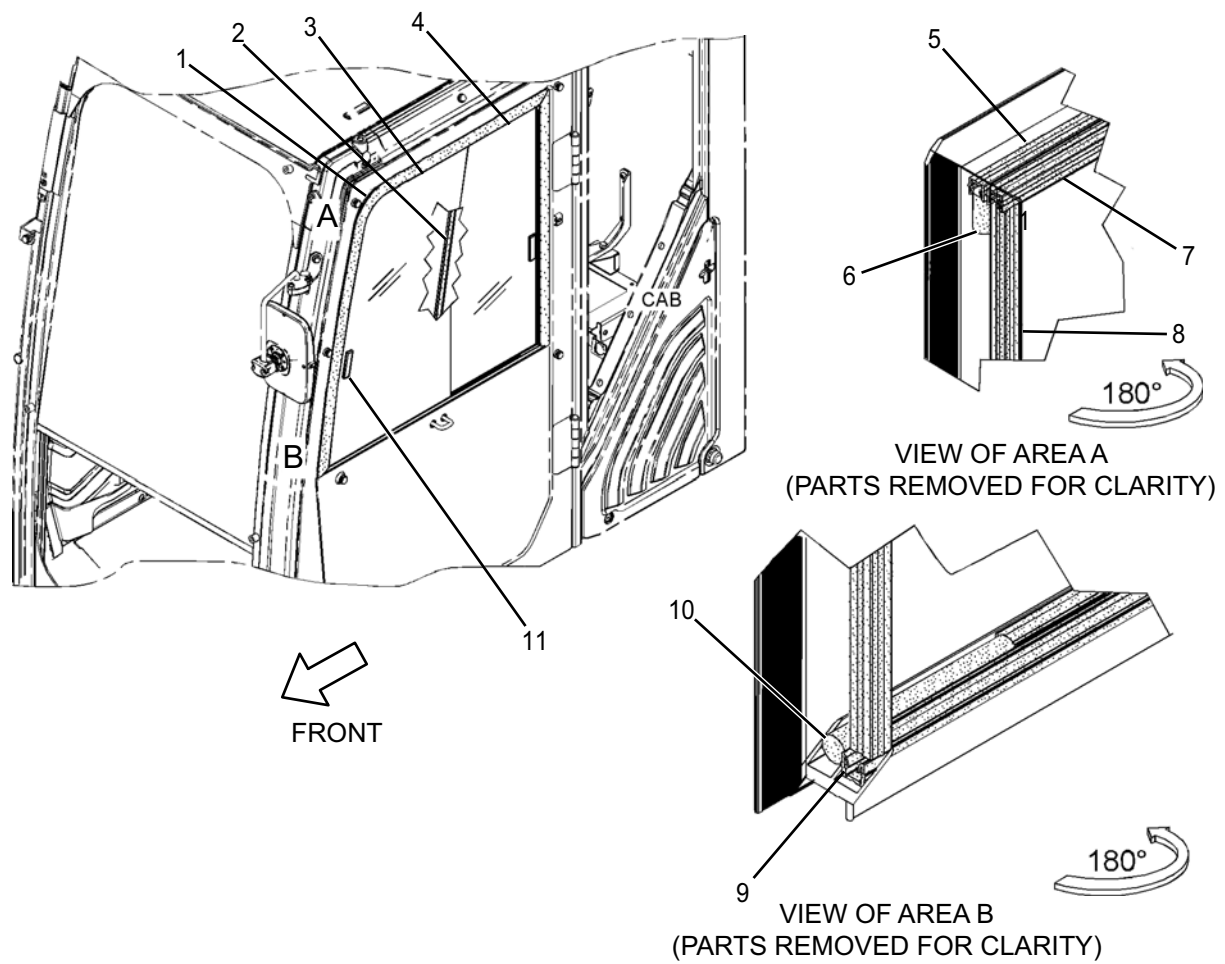


TABLE FOR FIGURE 03-32:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	383-5556	FRAME AS	1	
2	383-5651	SEAL AS	1	
3	383-5583	GLASS	1	
4	383-5582	GLASS	1	
5	383-5577	SEAL	1	
6	383-5545	SPACER-RUBBER	1	
7	383-5578	SEAL	1	
8	383-5580	SEAL	1	
9	383-5579	SEAL	2	
10	383-5581	SPACER-RUBBER	2	
11	085-6444	LATCH GP-WINDOW	2	

FIGURE 03-33 LATCH GP-WINDOW

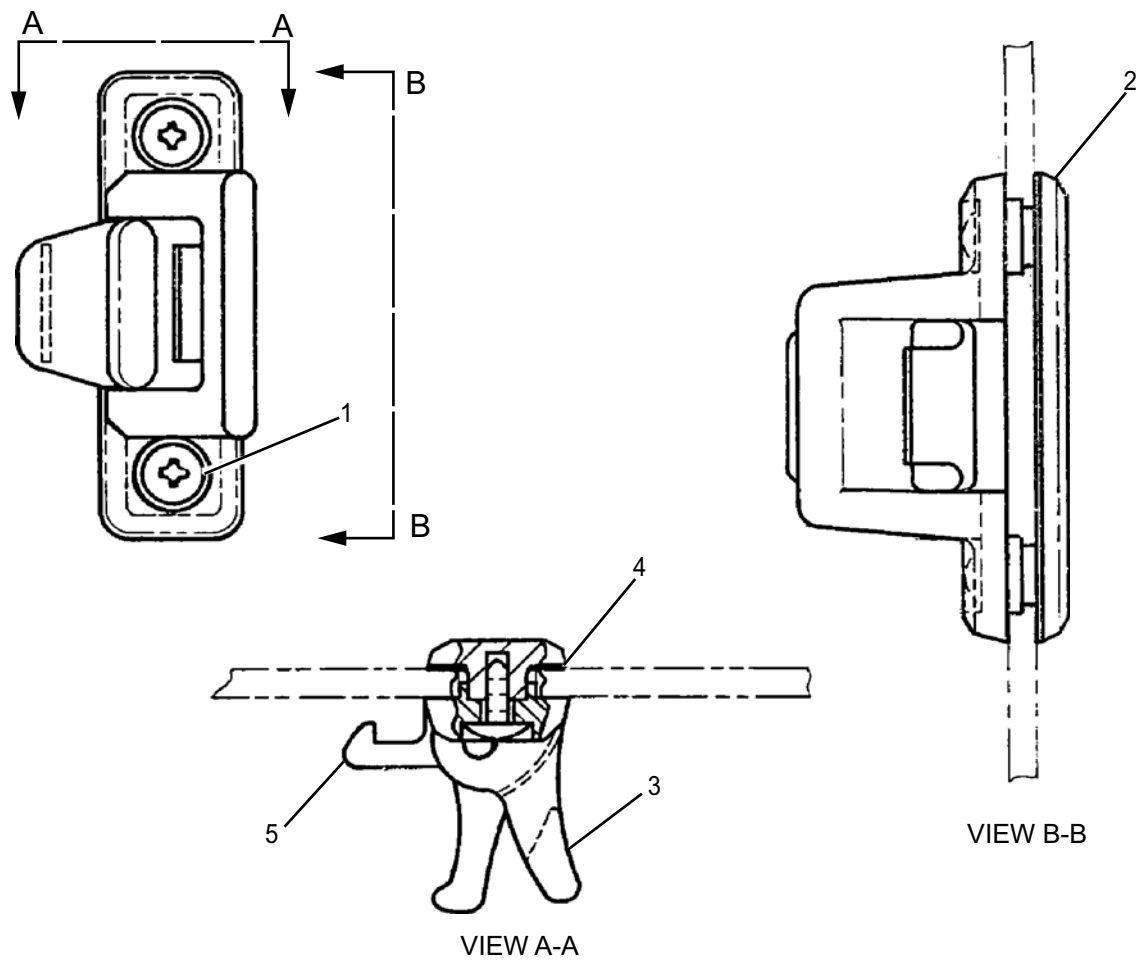

03-33

TABLE FOR FIGURE 03-33:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	085-6448	SCREW-TAPPING	2	
2	085-6447	RETAINER	1	
3	085-6446	LOCK	1	
4	085-6449	PACKING	1	
5	085-6445	LOCK	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-34 CAB GP-EXTERIOR (SHEET 1 OF 2)


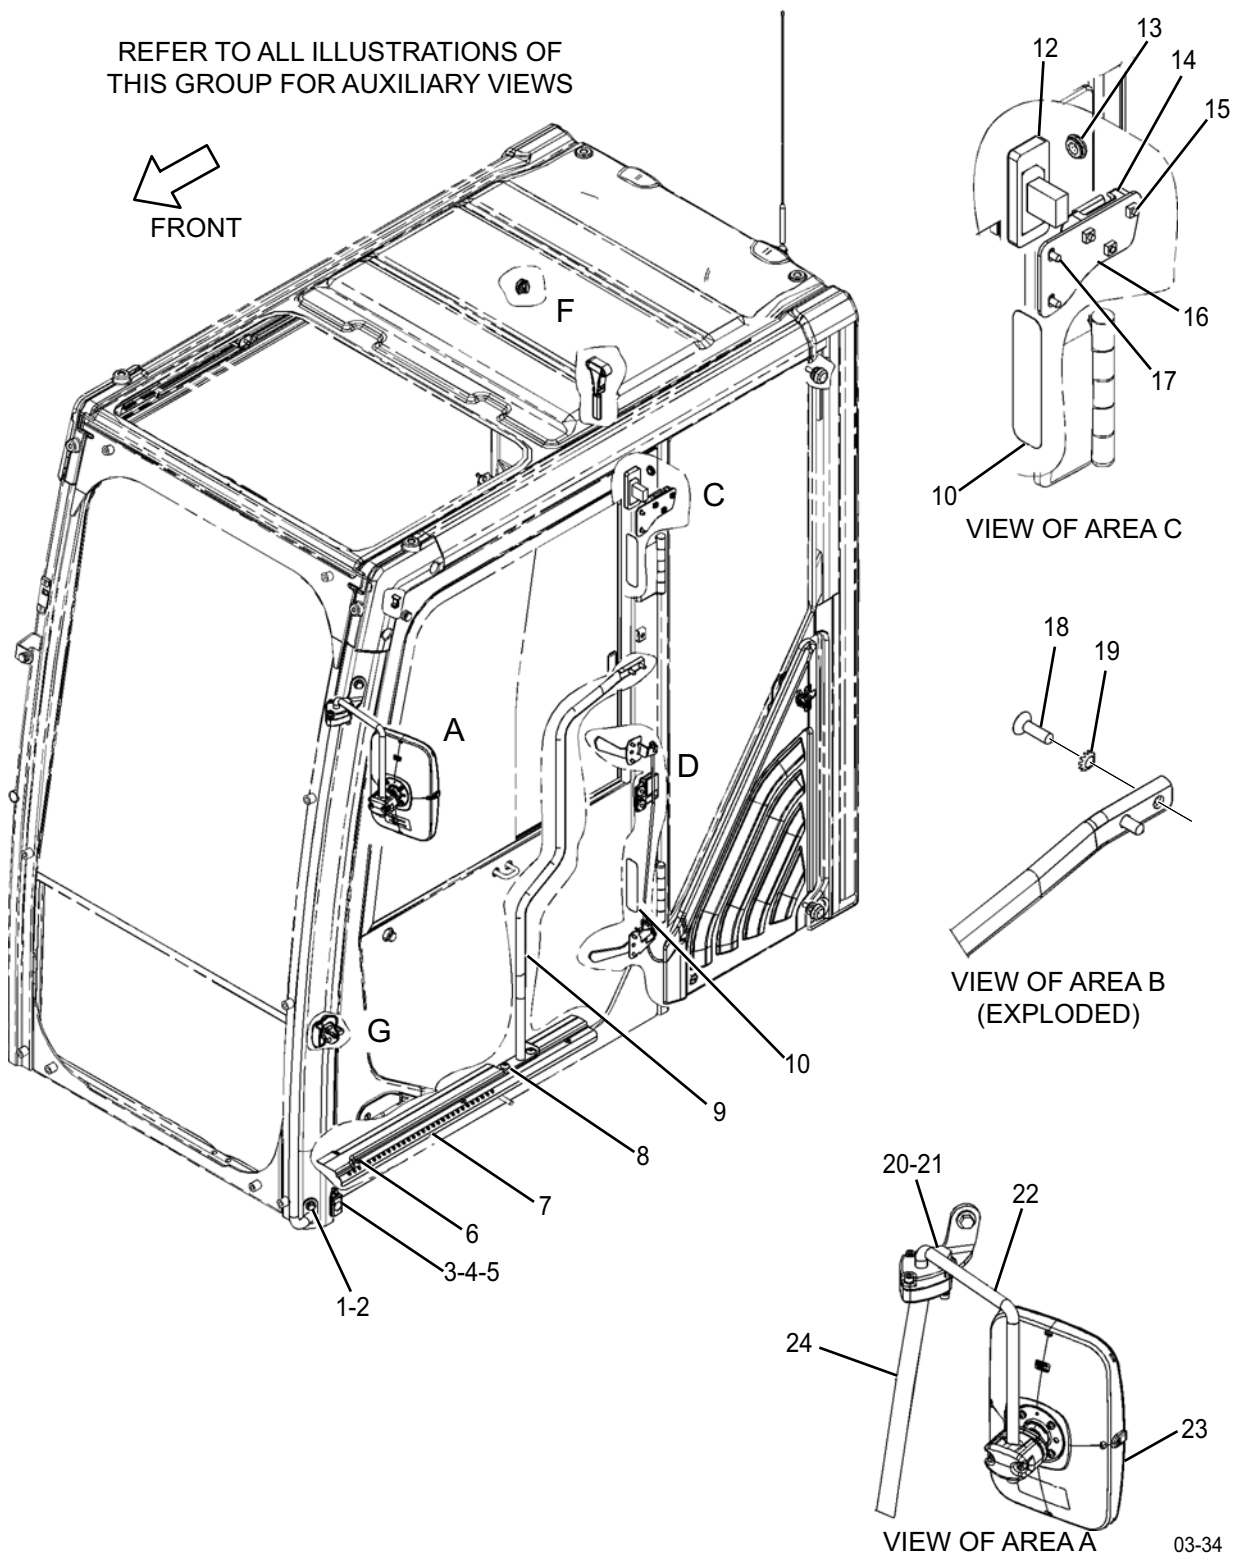


FIGURE 03-34 CAB GP-EXTERIOR (SHEET 2 OF 2)

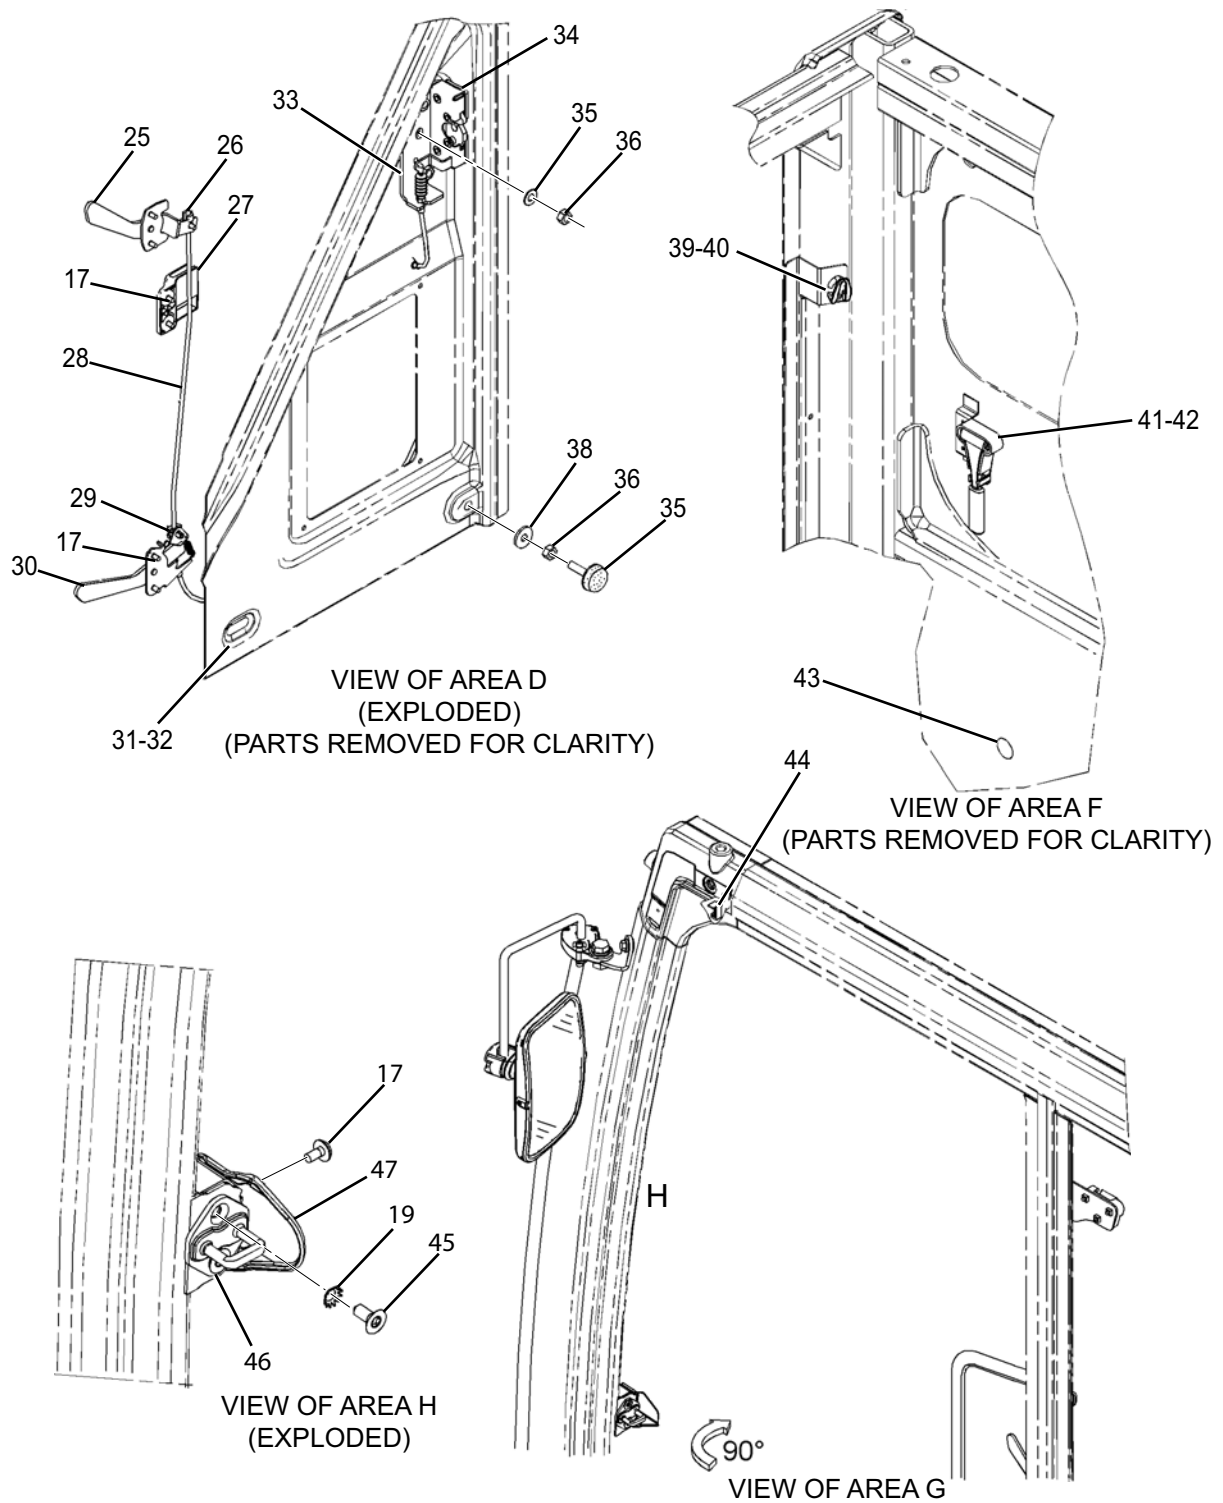

03-34

TABLE FOR FIGURE 03-34:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	8T-4137	BOLT (M10X1.5X20-MM)	2	
2	4I-3144	WASHER-HARD (10.2X22X3.2-MM THK)	2	
3	334-6566	STOP	1	
4	334-6567	COVER	1	
5	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	1	
6	099-0823	SCREW-MACHINE (M6X1X6-MM)	3	
7	334-6549	GUARD	1	
8	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	2	
9	334-6546	HANDRAIL	1	
10	167-7042	SEAL	2	
11	334-6568	COVER GP-CAB (EXTERIOR)	1	
12	176-1986	LAMP AS-DOME	1	
	201-4417	•LAMP (24-VOLT, 10-WATT)	1	
13	340-6587	GROMMET	1	
14	4I-4270	HOLDER-GLASS	1	
15	3E-8020	SCREW-TRUSS HEAD (M6X1X25-MM)	6	
16	334-6562	BRACKET AS	2	
17	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	16	
18	189-2864	SCREW-FLAT HEAD (M8X1.25X30-MM)	3	
19	1R-5998	LOCKWASHER	4	
20	8T-4779	BOLT (M16X2X35-MM)	1	
21	9X-8257	WASHER (17.5X30X3.5-MM THK)	1	
22	346-7375	BRACKET GP-MOUNTING (MIRROR)	1	
23	327-6550	MIRROR GP-REAR VIEW	1	
24	334-6542	HANDRAIL	1	
25	334-6552	LEVER GP-CAB DOOR	1	
26	340-6586	CLIP	1	

TABLE FOR FIGURE 03-34: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
27	334-6564	HOLDER	1	
28	334-6551	ROD	1	
29	164-0515	JOINT	2	
30	334-6557	LEVER GP-CAB DOOR	1	
31	163-6795	STRAP-CABLE	2	
32	334-6550	CABLE AS	1	
33	334-6565	BRACKET	1	
34	383-5666	LATCH AS	1	
35	4B-4278	WASHER (10.2X20.5X1.6-MM THK)	1	
36	8T-4133	NUT (M10X1.5-THD)	5	
37	4I-1205	BUMPER	2	
38	099-3607	WASHER-HARD (10.2X30X3.2-MM THK)	2	
39	5C-7793	HOOK-COAT	1	
40	095-0755	SCREW-MACHINE (M4X0.7X12-MM)	2	
41	280-8618	HAMMER	1	
42	171-7325	SCREW-TAPPING (M5X0.8-THD)	2	
43	156-6480	SEAL	1	
44	353-1887	COVER	1	
45	127-0580	SCREW-FLAT HEAD (M8X1.25X20-MM)	2	
46	156-6599	STRIKER	1	
47	353-2024	COVER	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-35 MIRROR GP-REAR VIEW

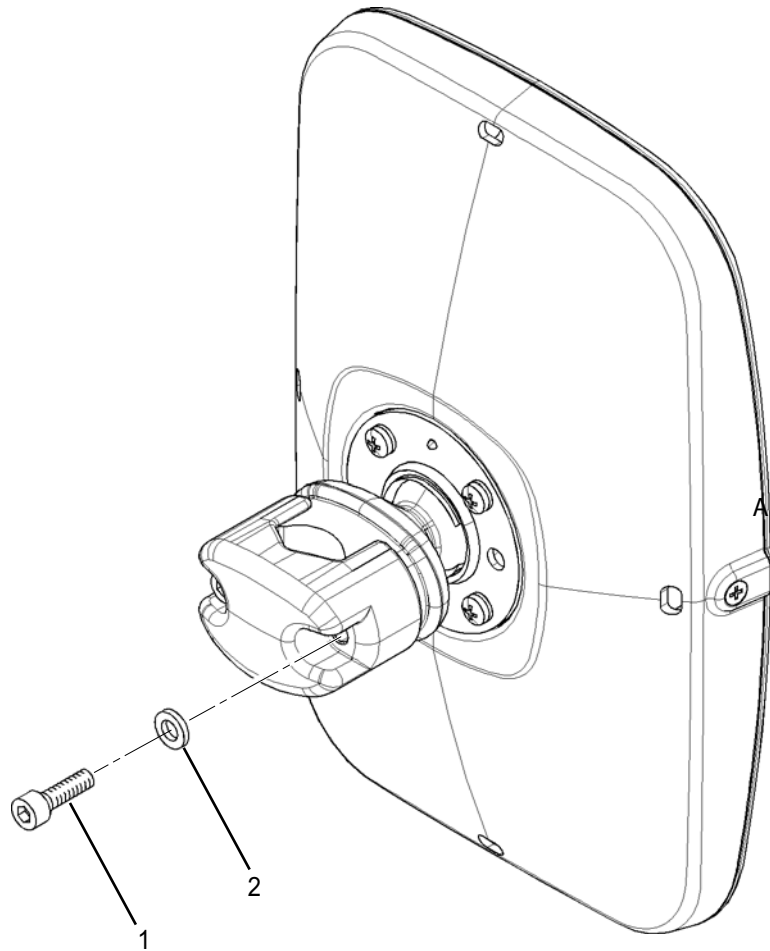


03-35


TABLE FOR FIGURE 03-35:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	105-3487	BOLT-SOCKET HEAD (M6X1X20-MM)	2	
2	9X-8256	WASHER (6.6X12X2-MM THK)	2	

FIGURE 03-36 LEVER GP-CAB DOOR

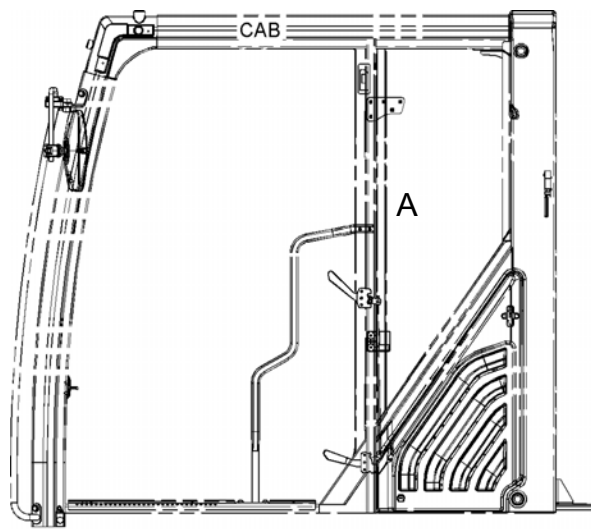

LEFT SIDE VIEW

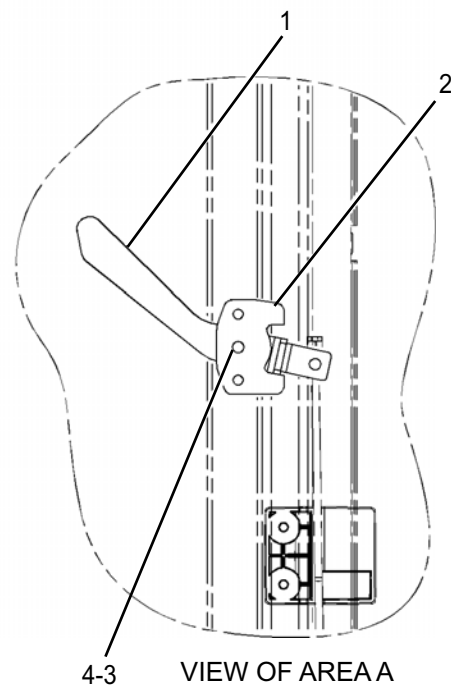

VIEW OF AREA A

TABLE FOR FIGURE 03-36:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6554	LEVER AS	1	
2	334-6553	BRACKET	1	
3	185-8280	WASHER-WAVE (10.5X15X0.3-MM THK)	1	
4	176-1941	PIN	1	

FIGURE 03-37 LEVER GP-CAB DOOR

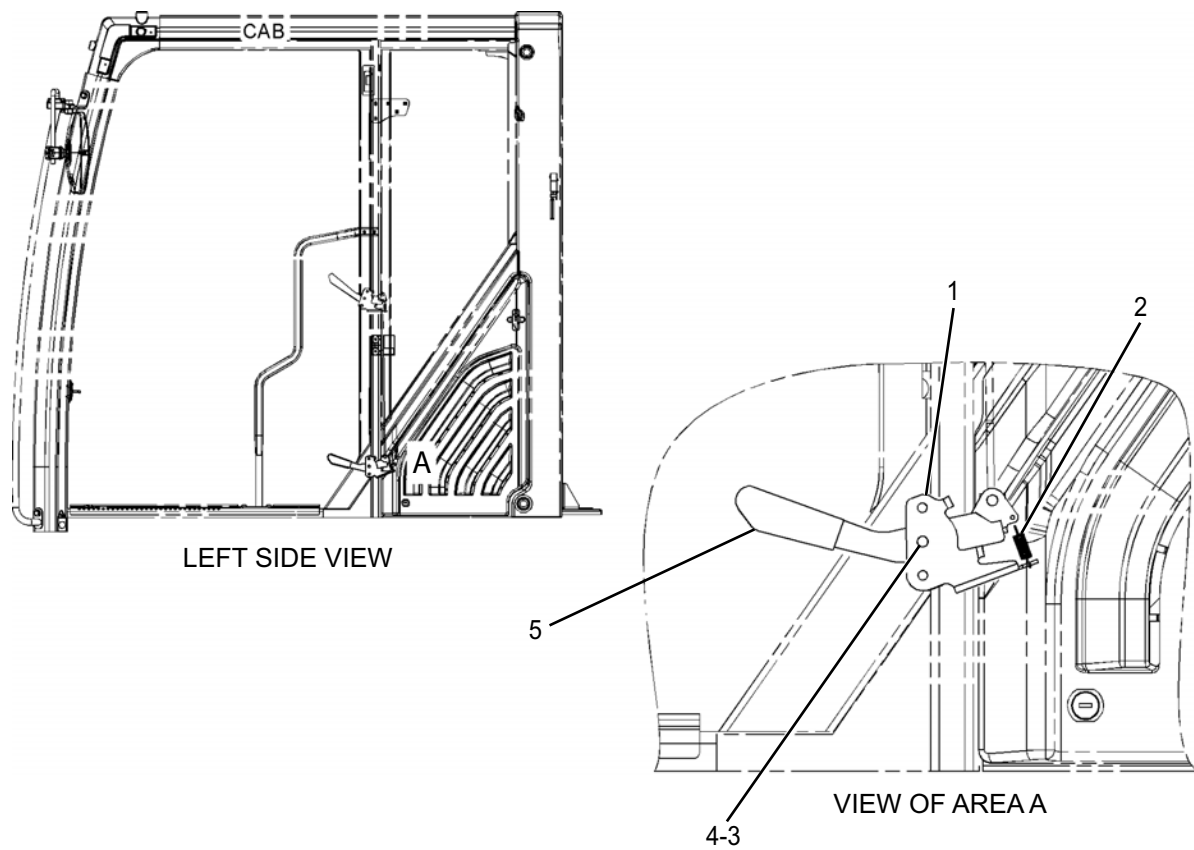


TABLE FOR FIGURE 03-37:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6558	BRACKET	1	
2	185-8281	SPRING	1	
3	185-8280	WASHER-WAVE (10.5X15X0.3-MM THK)	1	
4	176-1941	PIN	1	
5	334-6559	LEVER AS	1	

FIGURE 03-38 COVER GP-CAB-EXTERIOR


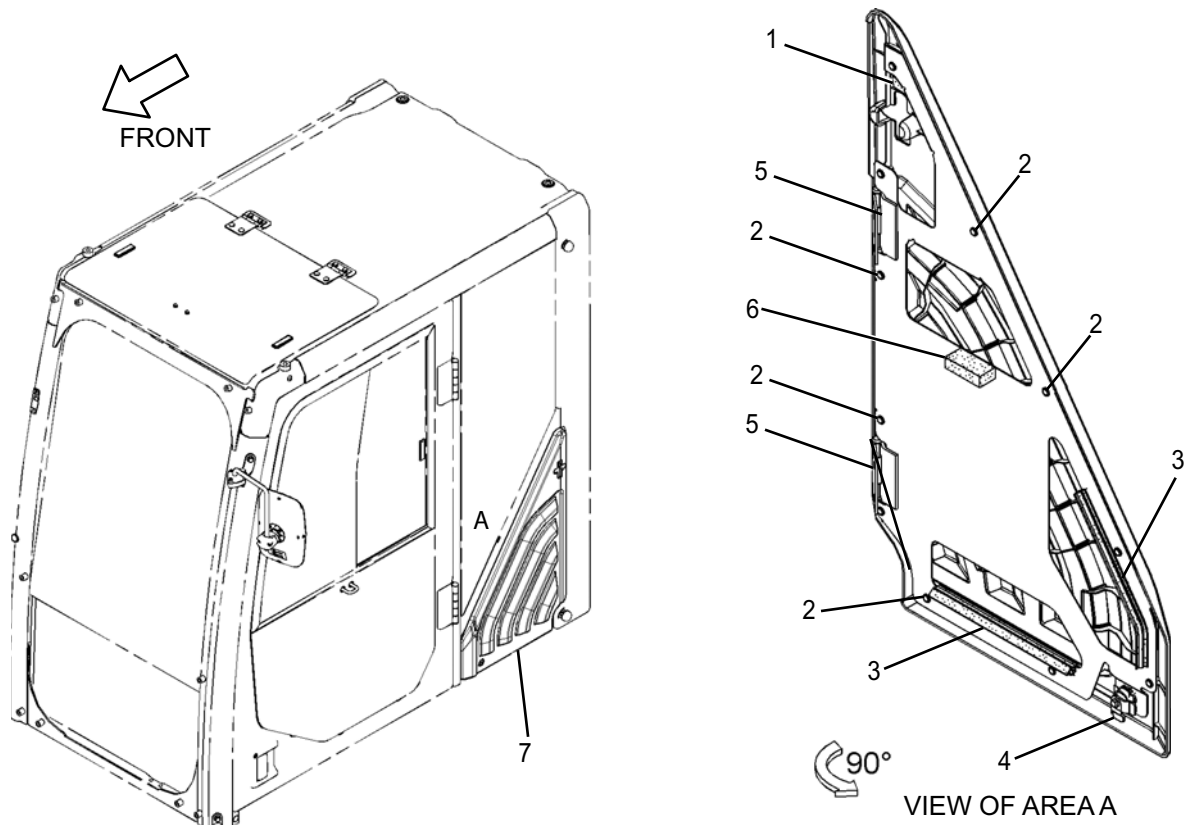


TABLE FOR FIGURE 03-38:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	340-6584	SEAL	1	
2	171-7325	SCREW-TAPPING (M5X0.8-THD)	11	
3	340-6585	SEAL-RUBBER	2	
4	267-7064	LOCK AS	1	
5	340-6582	HINGE	2	
6	383-5644	INSULATION	1	
7	353-2020	COVER GP	1	

FIGURE 03-39 BRACKET GP-MOUNTING-MIRROR

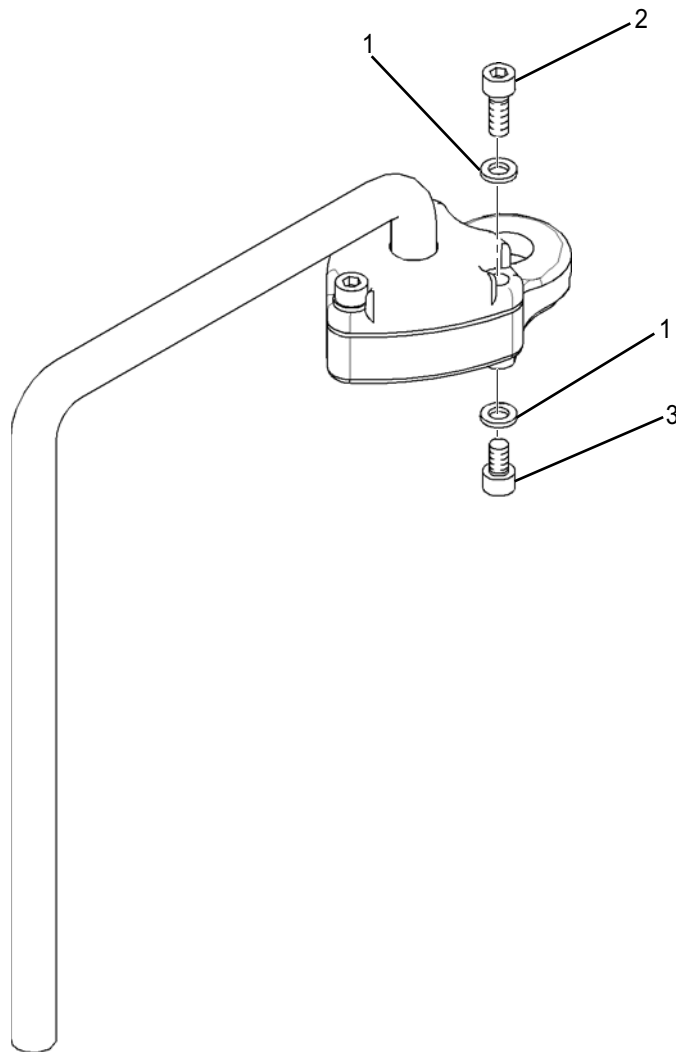


03-39

TABLE FOR FIGURE 03-39:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	2U-2552	LOCKWASHER	5	
2	6V-5683	BOLT (M6X1X16-MM)	3	
3	9X-6153	BOLT (M6X1X10-MM)	2	

FIGURE 03-40 COVER GP-CAB

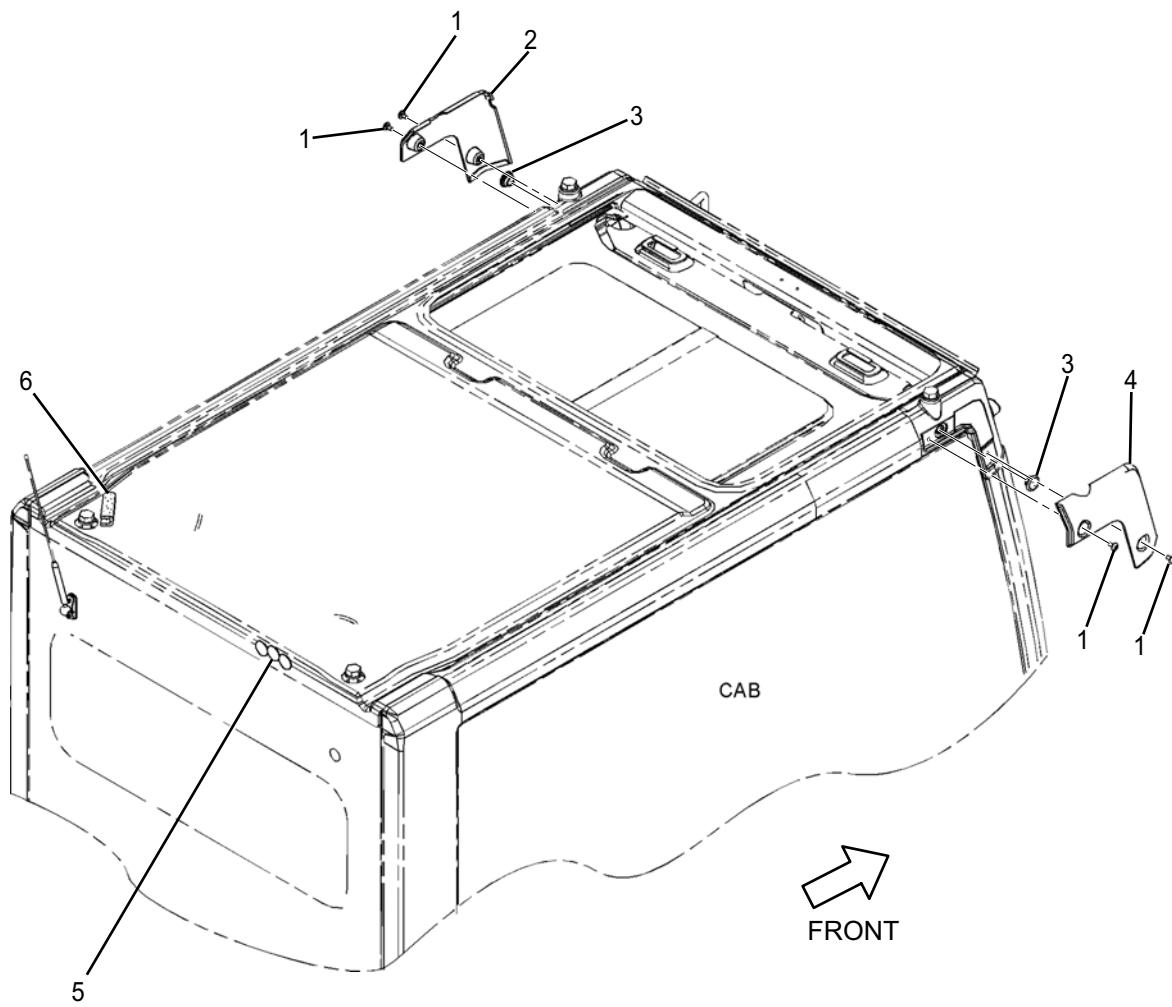


03-40

TABLE FOR FIGURE 03-40:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	4	
2	346-7976	COVER (LH)	1	
3	178-5570	GROMMET	2	
4	357-4127	COVER (RH)	1	
5	4I-3090	SEAL	3	
6	251-0637	INSULATION	1	

FIGURE 03-41 DOOR GP-CAB-PARTIAL

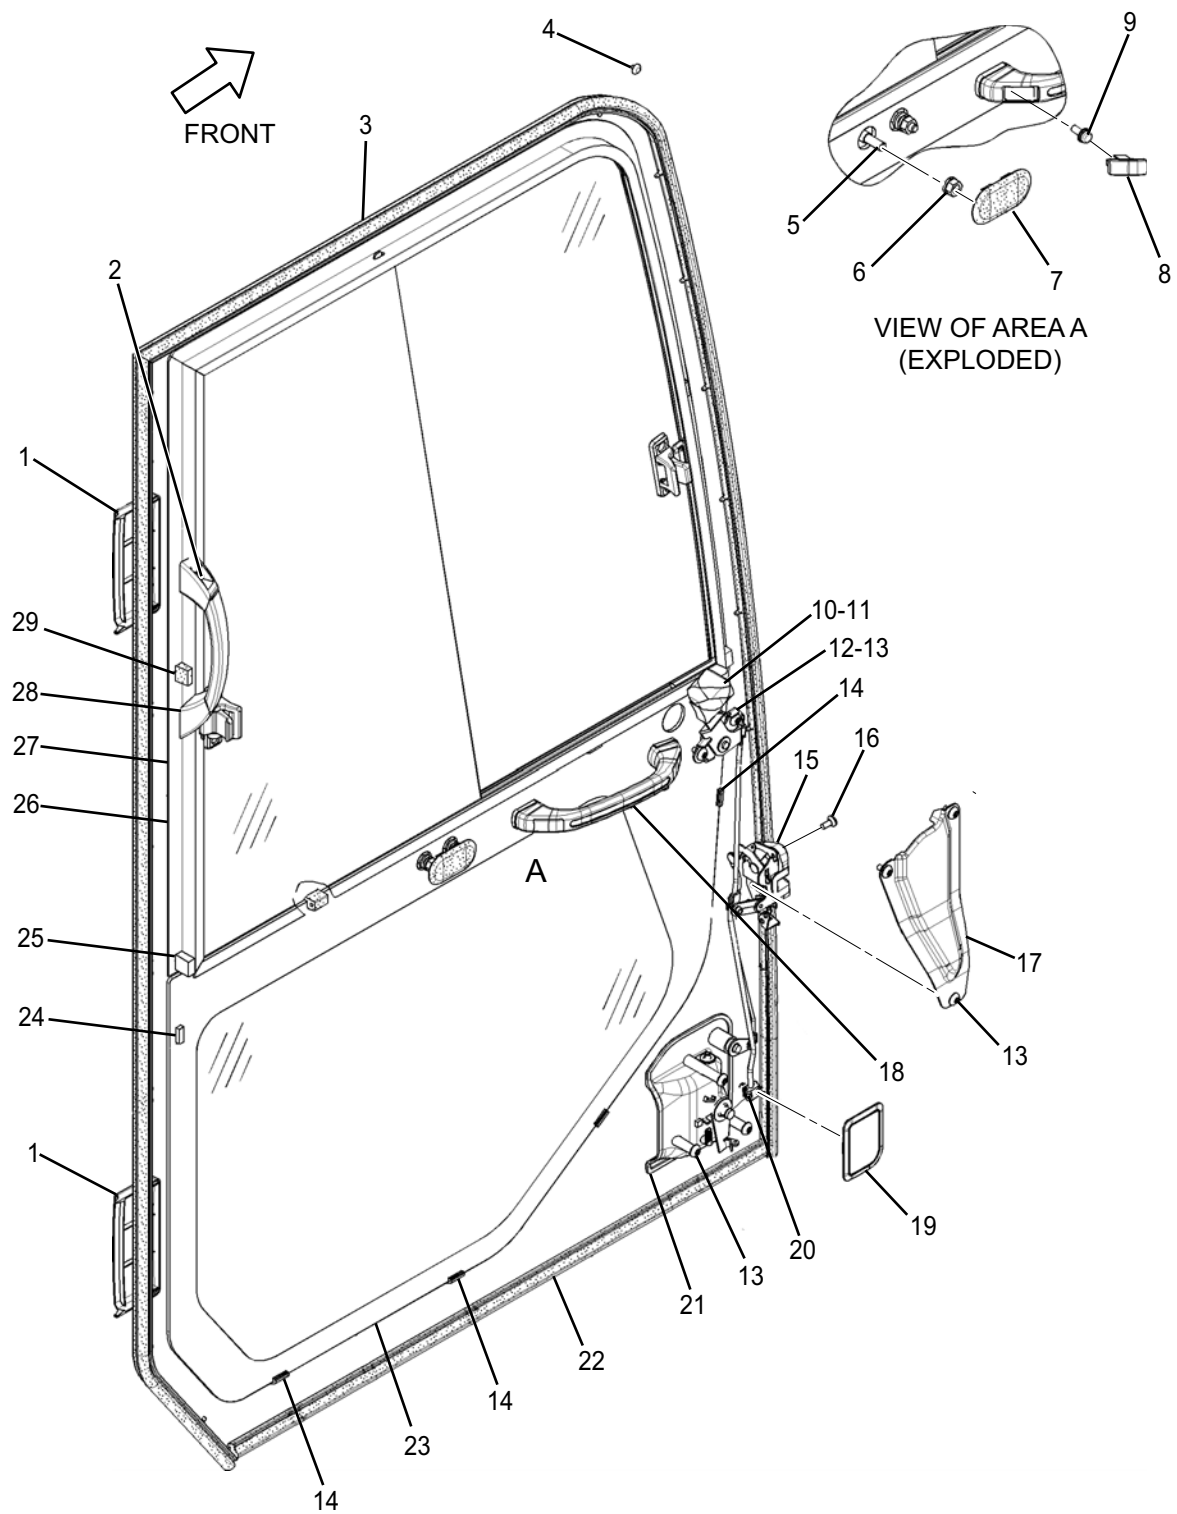

03-41

TABLE FOR FIGURE 03-41:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	156-6643	COVER	2	
2	101-8900	SCREW AS (M6X1X20-MM)	2	
3	334-6528	SEAL AS	23	
	151-9497	•CLIP	1	
4	334-6538	BUSHING-RUBBER	1	
5	334-6534	HOOK	1	
6	096-3884	NUT-SPRING (M8X1.25-THD)	2	
7	167-7039	GROMMET	2	
8	151-6704	CAP	1	
9	101-8899	SCREW AS (M6X1.0X16-MM)	2	
10	4I-4286	KNOB	1	
11	096-2622	SCREW-MACHINE (M4X0.7X8-MM)	2	
12	161-3639	HANDLE AS	1	
13	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	8	
14	178-5573	SPACER	3	
15	334-6535	LATCH AS	1	
	164-0514	•CLIP	1	
	164-0519	•CLIP	1	
16	185-8180	SCREW (M6X1X16-MM)	1	
17	334-6536	COVER	1	
18	151-6703	HANDLE-PULL	2	
19	259-7354	COVER	1	
20	164-0515	JOINT	1	
21	334-6537	HANDLE AS	1	
	201-4391	•CLIP	1	
22	334-6531	SEAL AS	5	
	334-6530	•CLIP	1	

TABLE FOR FIGURE 03-41:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
23	346-8063	GLASS	1	
24	178-5574	SPACER	3	
25	334-6527	SPACER	1	
26	334-6526	SPACER	2	
27	383-5650	WINDOW GP-DOOR	2	
28	189-2690	HANDLE	1	
29	151-9461	SPACER	2	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-42 WINDOW GP-DOOR

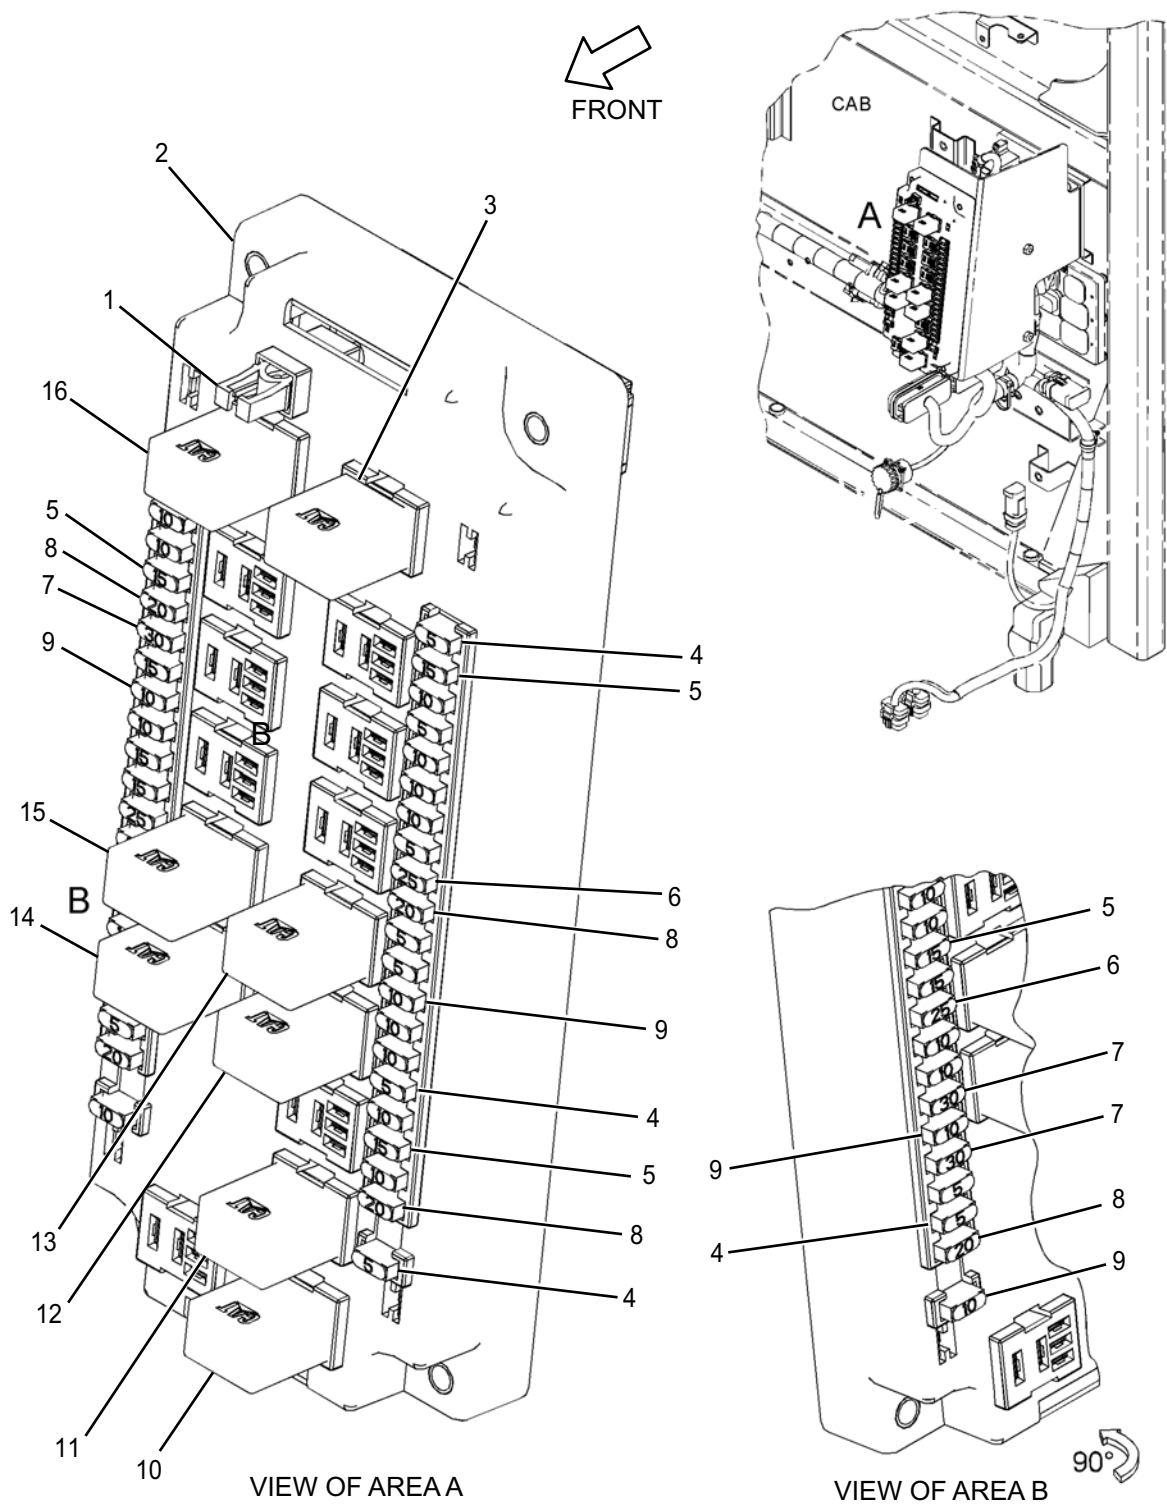


03-42

TABLE FOR FIGURE 03-42:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	170-6888	PULLER-FUSE	1	
2	161-3128	RELAY (24-VOLT) (CAB LIGHT)	1	
3	161-3128	RELAY (24-VOLT)	1	
4	141-2759	FUSE (5-AMPERE)	3	
5	113-8491	FUSE (15-AMPERE)	7	
6	113-8493	FUSE (25-AMPERE)	2	
7	124-3548	FUSE (30-AMPERE)	3	
8	113-8492	FUSE (20-AMPERE)	4	
9	113-8490	FUSE (10-AMPERE)	17	
10	161-3128	(BOOM LIGHTS)	1	
11	161-3128	RELAY (24-VOLT)	1	
12	161-3128	RELAY (24-VOLT)	1	
13	161-3128	RELAY (24-VOLT)	1	
14	161-3128	RELAY (24-VOLT)	1	
15	161-3128	RELAY (24-VOLT)	1	

FIGURE 03-44 WINDOW GP-CAB-FRONT, UPPER

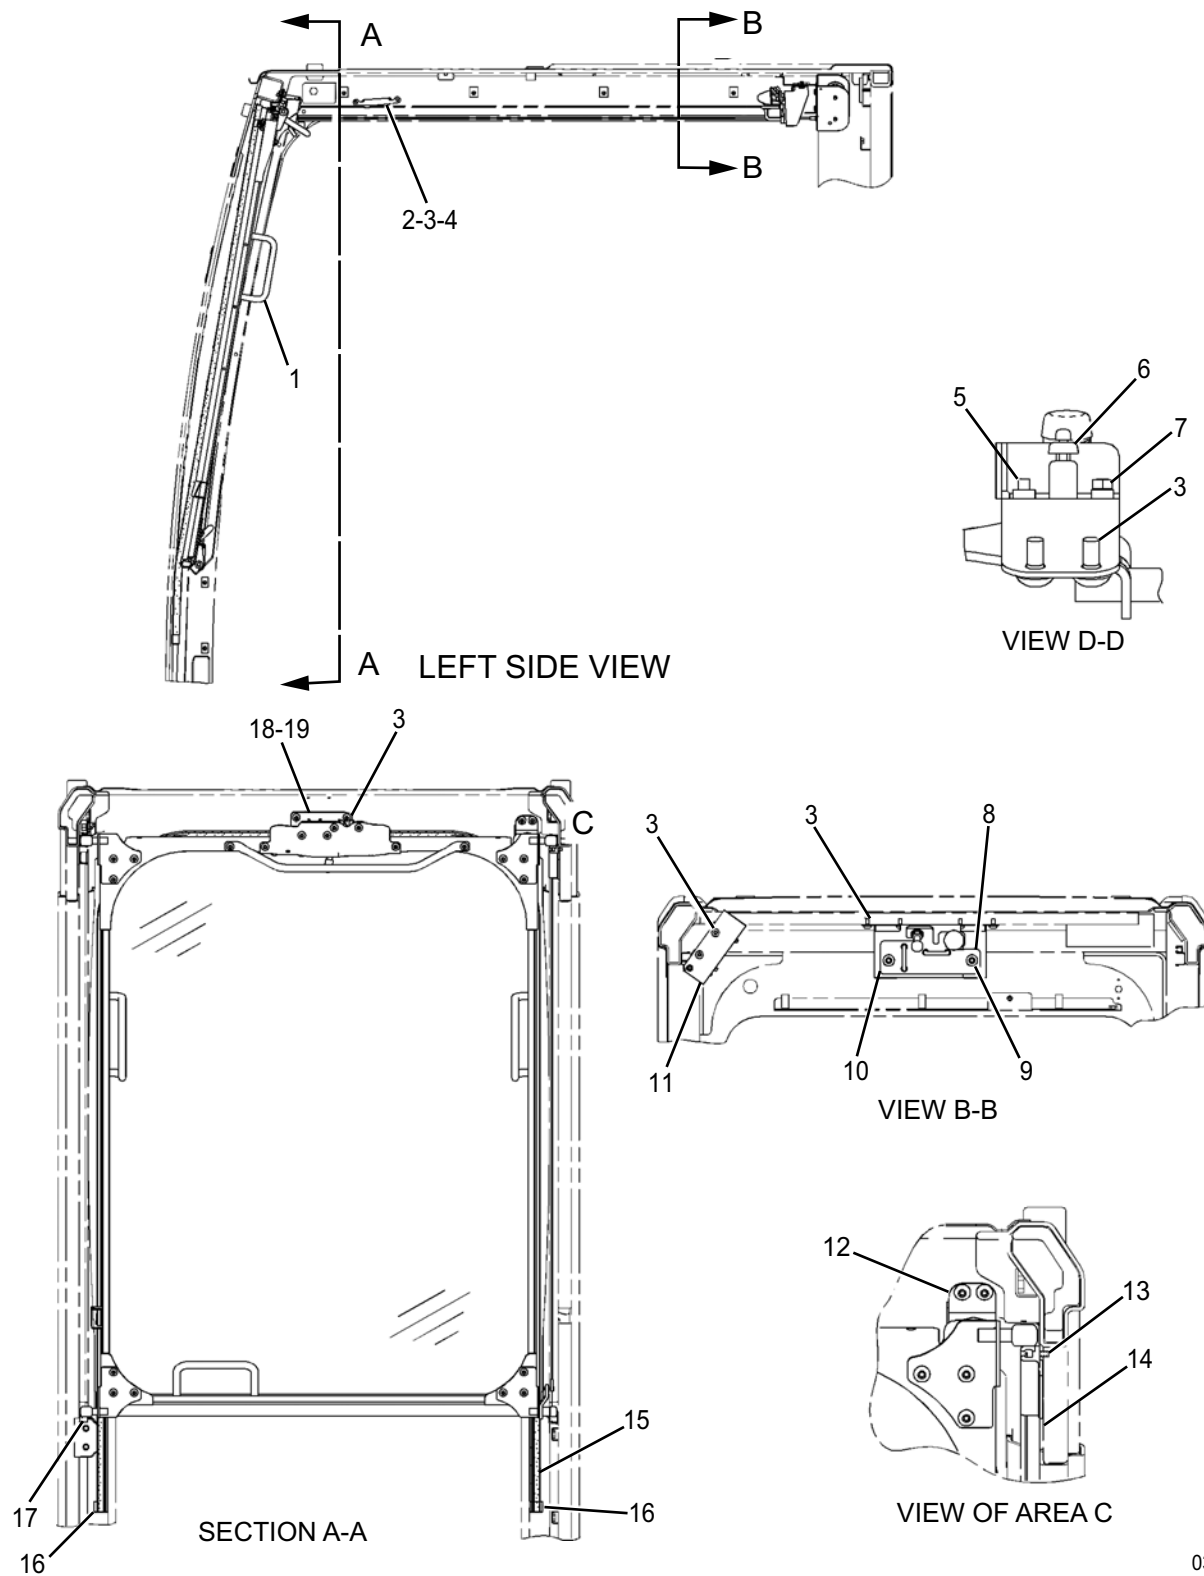


03-44

TABLE FOR FIGURE 03-44:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6388	WINDOW GP-CAB (FRONT, UPPER)	1	03-44
2	334-6499	BRACKET AS	1	03-44
3	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	12	03-44
4	430-5703	SHIM	1	03-44
5	138-8454	SCREW-TRUSS HEAD (M4X0.7X10-MM)	2	03-44
6	117-6306	SWITCH (WINDOW POSITION)	1	03-44
7	5C-8312	NUT (M4X0.7-THD)	1	03-44
8	334-6492	STRIKER GP-LATCH (WINDOW)	1	03-44
9	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	2	03-44
10	334-6497	SHEET AS	1	03-44
11	334-6508	CABLE AS	1	03-44
12	334-6505	BRACKET AS	1	03-44
13	099-2374	BOLT-SOCKET HEAD (M5X0.8X12-MM)	1	03-44
14	334-6509	GUIDE AS	1	03-44
15	334-6507	SEAL AS	1	03-44
16	363-9373	SPACER	2	03-44
17	151-9557	STOP-RUBBER	2	03-44
18	334-6501	STRIKER AS	1	03-44
19	334-6504	SHIM (2-MM THK)	1	03-44

FIGURE 03-45 WINDOW GP-CAB-FRONT, UPPER

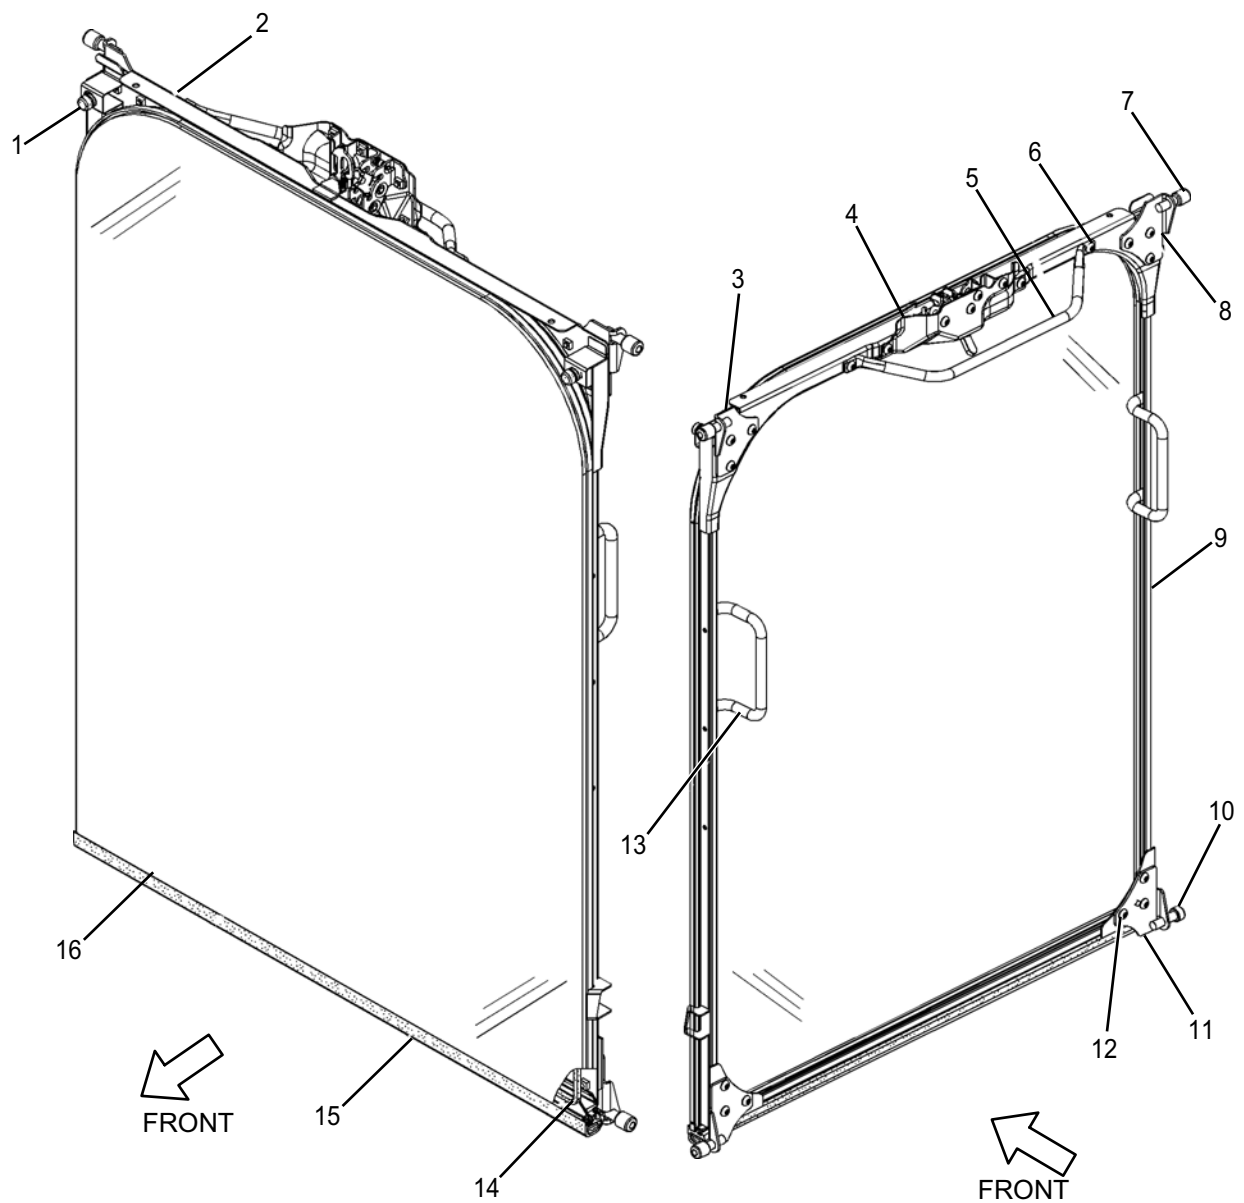

03-45

TABLE FOR FIGURE 03-45:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	185-8221	STOP	1	
2	334-6389	FRAME AS-WINDOW	1	
3	334-6479	BRACKET AS	2	
4	334-6485	LOCK AS-WINDOW	1	
	9X-2042	•SCREW-TRUSS HEAD (M6X1X12-MM)	7	
	334-6486	•COVER AS	1	
	334-6488	•LOCK AS	1	
	334-6489	•LEVER AS	1	
5	334-6490	HANDLE	1	
6	9X-2044	SCREW-TRUSS HEAD (M6X1X16-MM)	2	
7	334-6482	ROLLER	3	
8	334-6481	BRACKET AS	2	
9	334-6469	SEAL	2	
10	151-9576	ROLLER	1	
11	151-6813	BRACKET AS	1	
12	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	16	
13	334-6478	HANDLE	1	
14	334-6484	SEAL	1	
15	346-8036	SEAL	2	
16	453-4794	GLASS	1	

FIGURE 03-46 STRIKER GP-LATCH-WINDOW


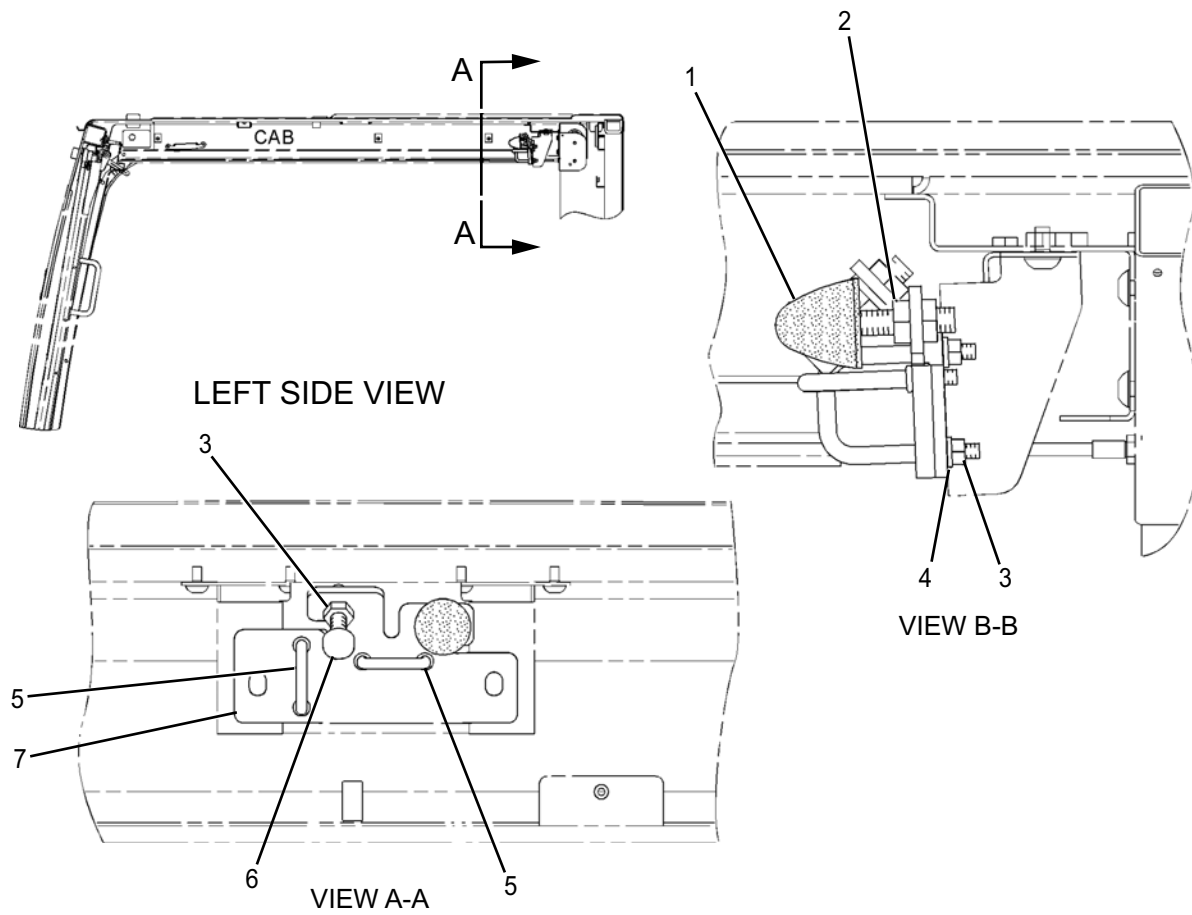


TABLE FOR FIGURE 03-46:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	7Y-8561	BUMPER	1	
2	142-0485	NUT (M10X1.5-THD)	2	
3	5C-2890	NUT (M6X1-THD)	4	
4	9X-8256	WASHER (6.6X12X2-MM THK)	4	
5	334-6495	STRIKER	2	
6	178-5576	STOP	1	
7	334-6493	SHEET AS	1	

FIGURE 03-47 WINDOW GP-CAB-FRONT, REAR, SIDE

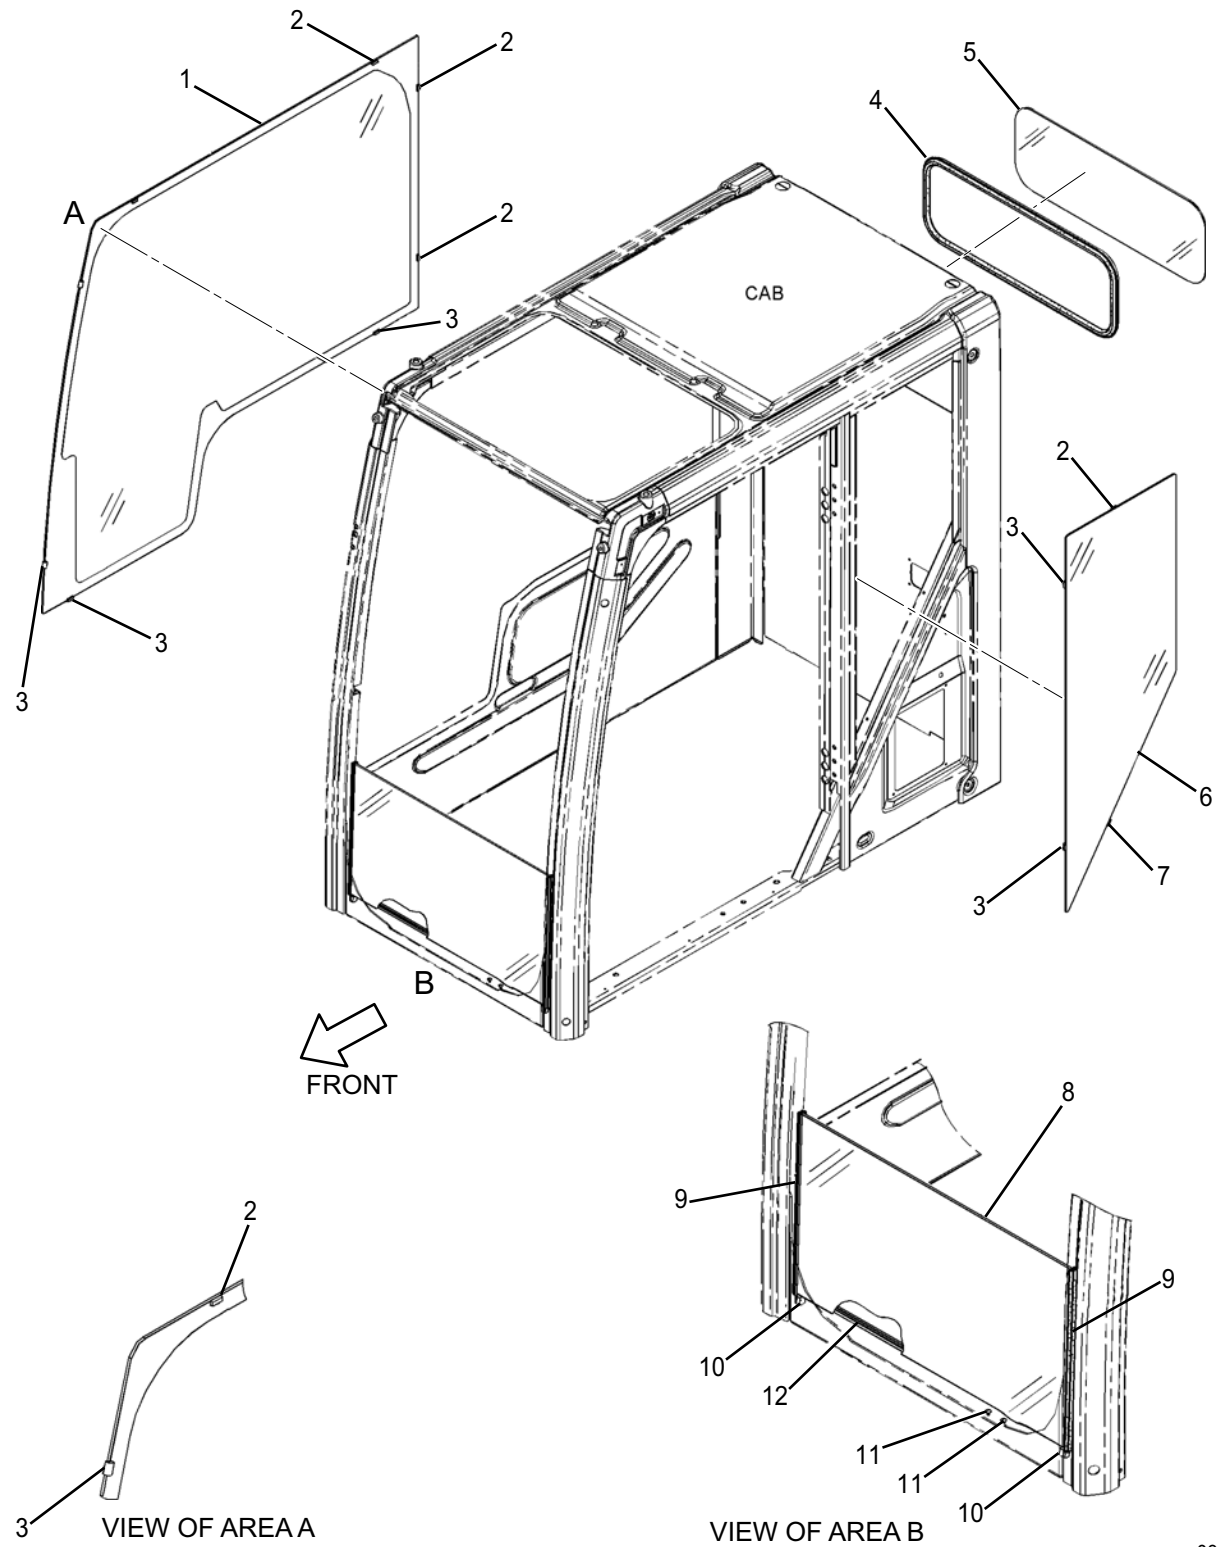


03-47

TABLE FOR FIGURE 03-47:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	342-3550	GLASS	1	
2	178-5574	SPACER	6	
3	178-5572	SPACER-SPECIAL (WINDOW)	6	
4	342-3552	SEAL	1	
5	342-3551	GLASS	1	
6	340-6625	GLASS	1	
7	178-5573	SPACER	1	
8	316-8854	GLASS	1	
9	346-8030	SEAL	2	
10	156-6631	STOP	2	
11	139-7119	PLUG	2	
12	340-6727	SEAL	1	

FIGURE 03-48 AIR CONDITIONER & MOUNTING GP

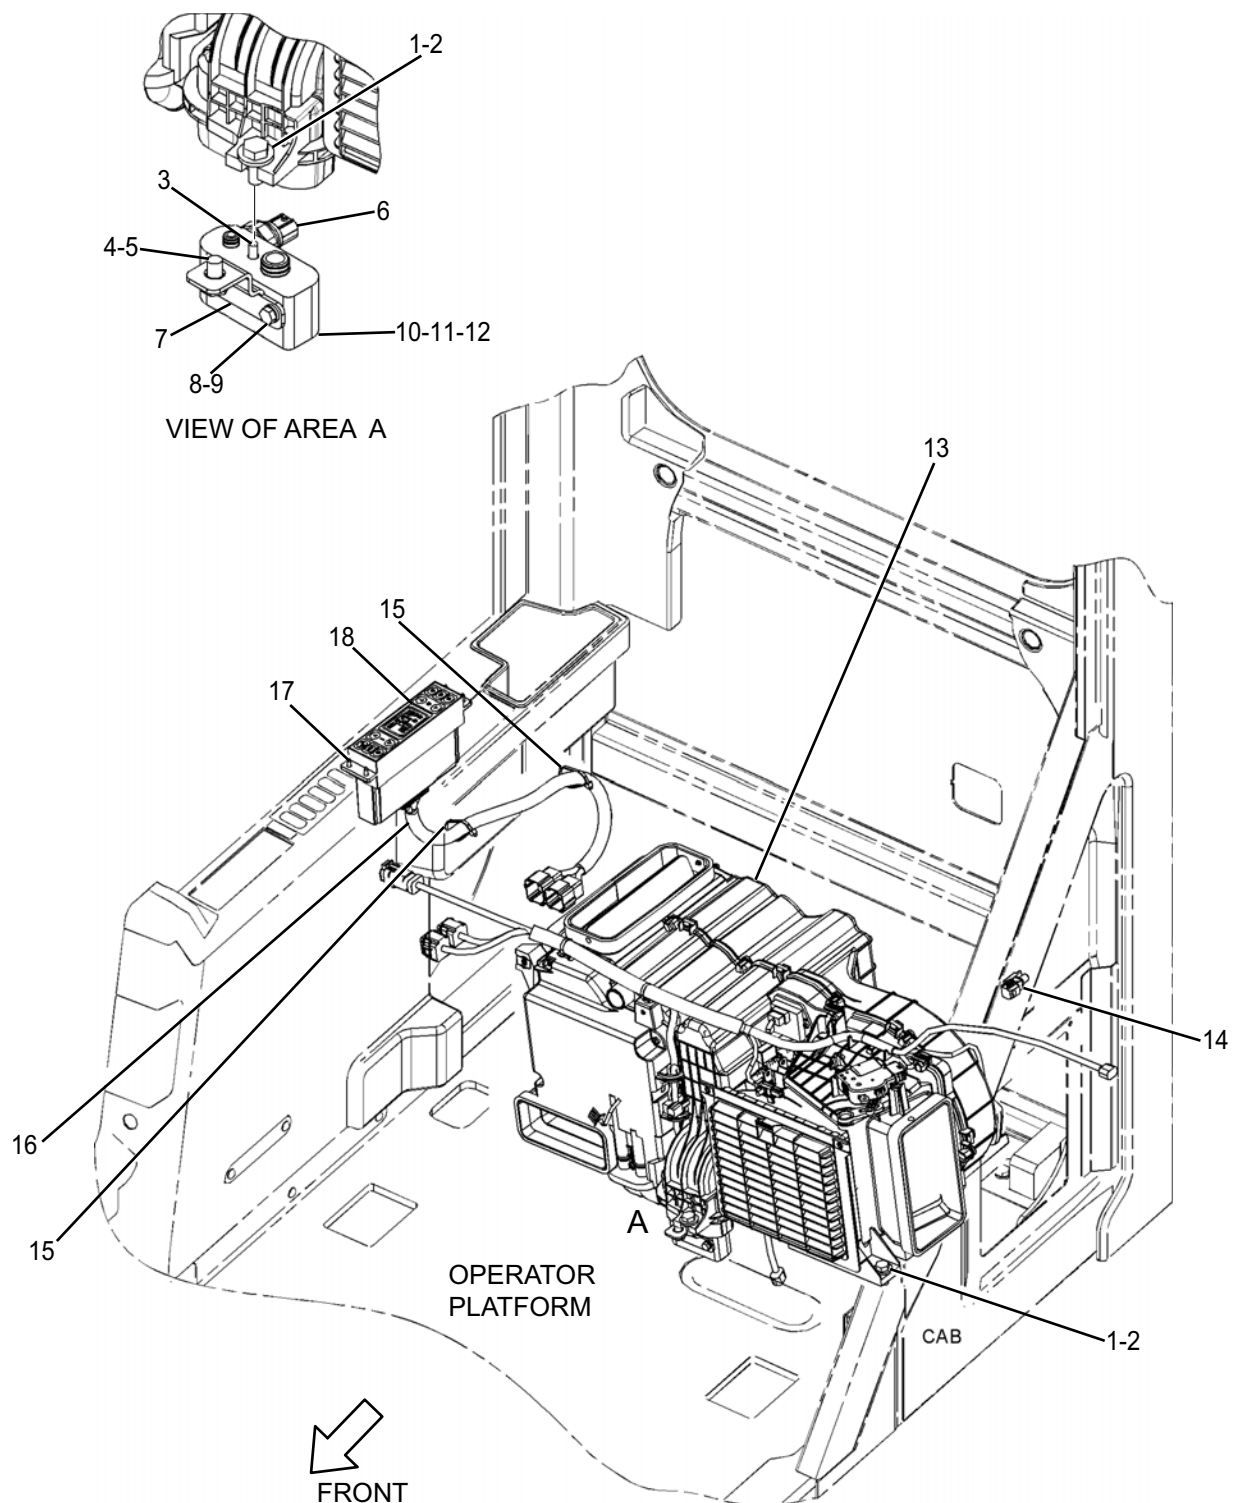


03-48

TABLE FOR FIGURE 03-48:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	8T-4136	BOLT (M10X1.5X25-MM)	6	
2	7X-7729	WASHER (11X25X3-MM THK)	6	
3	8T-8442	BOLT-SOCKET HEAD (M6X1X30-MM)	1	
4	8T-4191	BOLT (M10X1.5X16-MM)	1	
5	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	1	
6	293-1139	SWITCH AS-PRESSURE (REFRIGERANT)	1	
7	423-5588	BRACKET	1	
8	5C-9553	BOLT (M6X1X16-MM)	2	
9	9X-8256	WASHER (6.6X12X2-MM THK)	3	
10	113-3468	SEAL-O-RING	1	
11	121-7063	SEAL-O-RING	1	
12	435-9945	MANIFOLD	1	
13	363-9493	AIR CONDITIONER GP	1	
14	235-8874	SENSOR-TEMPERATURE (AMBIENT AIR)	1	
15	3S-2093	STRAP-CABLE	2	
16	363-9495	HARNESS AS-WIRING	1	
17	119-5026	SCREW-PAN HEAD (10-16X0.63-IN)	4	
18	363-9494	PANEL AS-CONTROL (AIR CONDITIONER, HEATER)	1	


THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-49 AIR CONDITIONER GP (SHEET 1 OF 2)

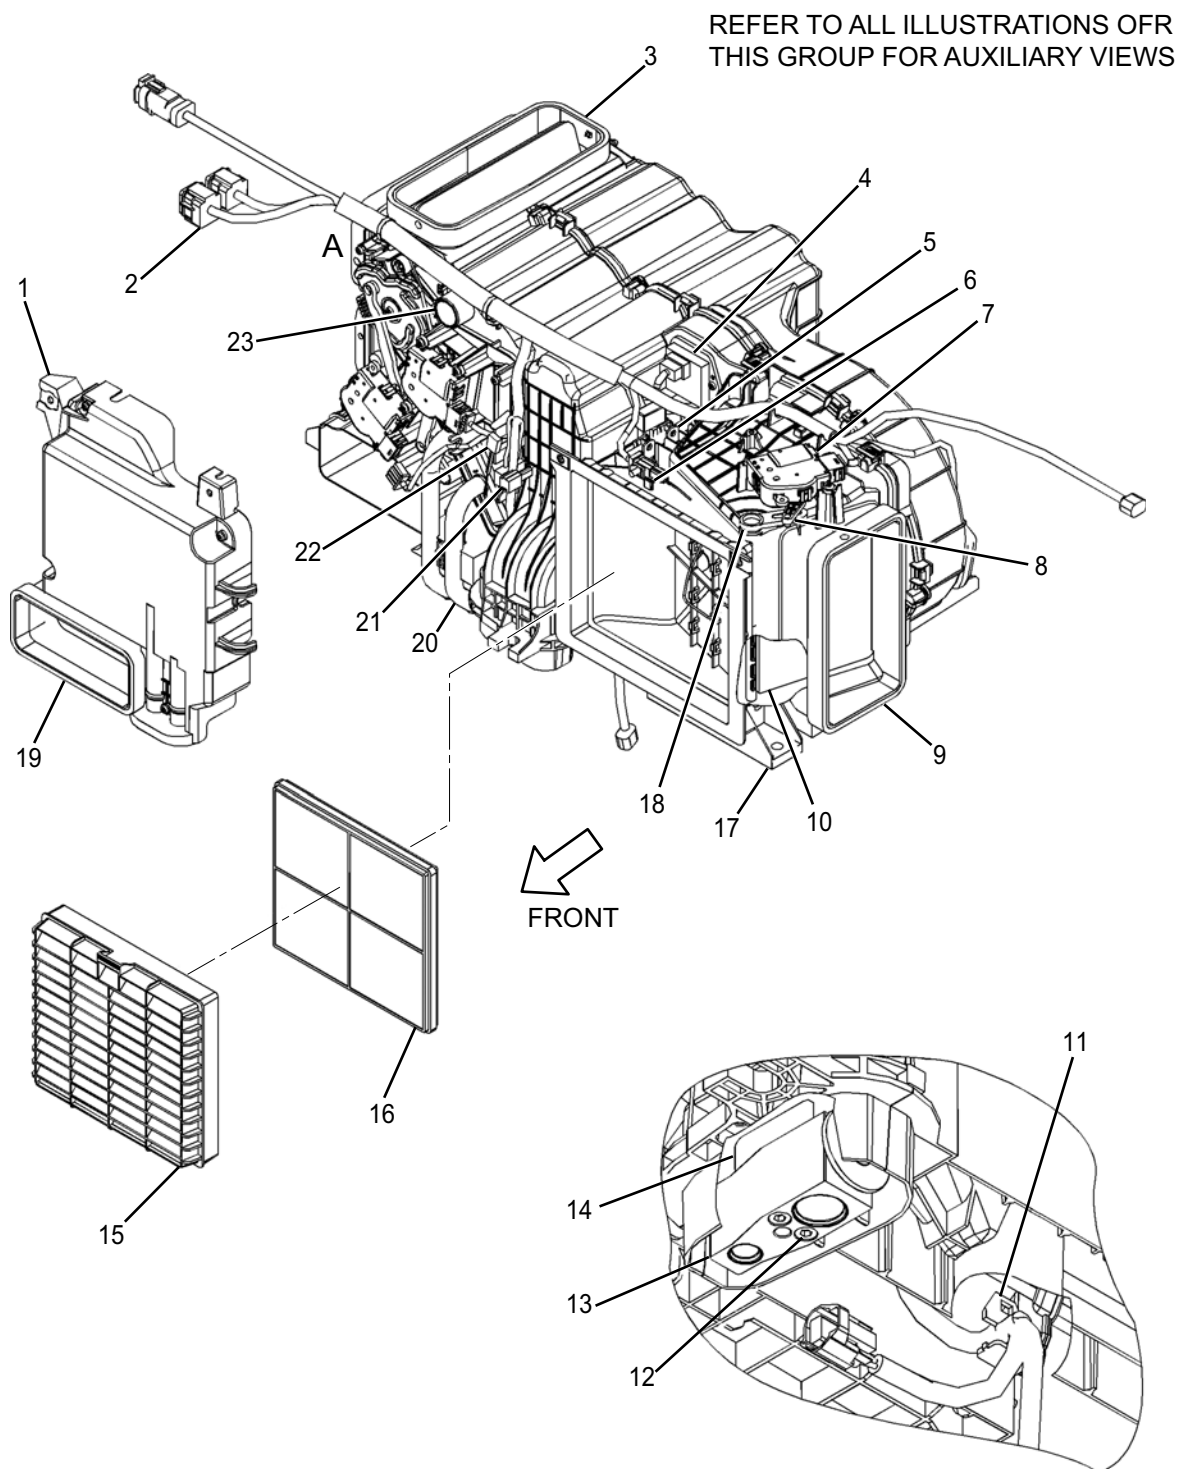

03-49

FIGURE 03-49 AIR CONDITIONER GP (SHEET 2 OF 2)

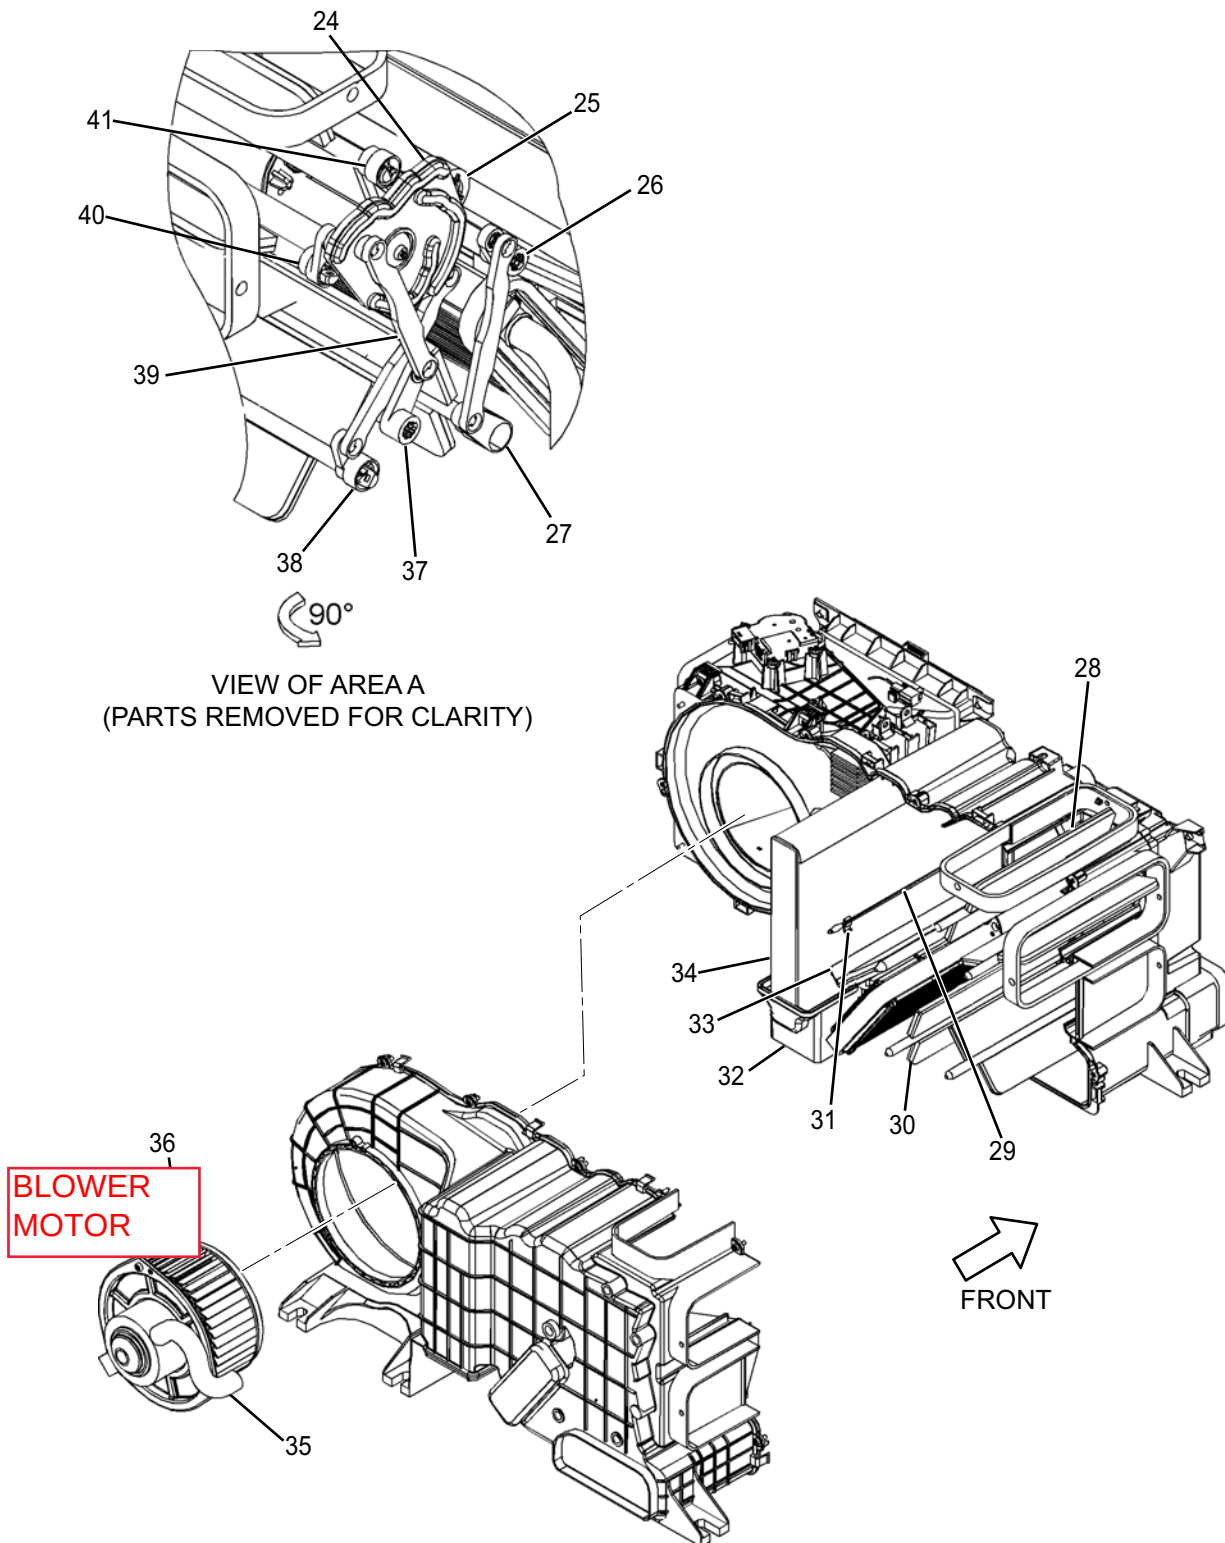

03-49

TABLE FOR FIGURE 03-49:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	363-9451	COVER AS (LINK)	1	
2	372-9365	HARNESS AS-HEATER & AIR COND	1	
3	363-9482	INSULATOR	2	
4	356-4944	CONTROL AS-FAN (BLOWER)	1	
5	124-4042	RELAY (BLOWER MOTOR)	3	
6	363-9477	SENSOR AS (INTAKE AIR TEMPERATURE)	1	
7	363-9459	MOTOR AS	3	
8	363-9466	LEVER	1	
9	363-9482	INSULATOR	1	
10	363-9461	DAMPER	1	
11	363-9480	CLIP-HARNESS	1	
12	281-0791	BOLT-SOCKET HEAD (M5X0.8X40-MM)	2	
13	363-9454	VALVE AS-EXPANSION	1	
14	363-9455	PLATE	1	
15	363-9452	COVER-FILTER	1	
16	363-9402	FILTER (AIR CONDITIONER)	1	
17	363-9450	HOUSING AS-AIR CONDITIONER (INTAKE AIR)	1	
18	363-9465	LEVER	1	
19	363-9483	INSULATOR	1	
20	363-9456	CORE AS-HEATER	1	
21	363-9476	SENSOR AS (EVAPORATOR)	1	
22	363-9478	SENSOR AS (WATER TEMPERATURE)	1	
23	363-9470	LEVER	1	
24	363-9460	PLATE	1	
25	363-9471	LEVER	1	

TABLE FOR FIGURE 03-49:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
26	363-9473	LEVER	1	
27	363-9474	LEVER	1	
28	363-9463	DAMPER	1	
29	305-0419	HOLDER	1	
30	363-9462	DAMPER	3	
31	363-9481	HOLDER	1	
32	363-9449	CASE	1	
33	363-9464	DAMPER	1	
34	363-9453	COIL AS-EVAPORATOR	1	
	113-3467	•SEAL-O-RING	1	
	113-3468	•SEAL-O-RING	1	
35	363-9458	HOSE	1	632-8695
36	363-9457	MOTOR AS-BLOWER (WITH FAN)	1	632-8606
37	363-9472	LEVER	1	
38	363-9469	LEVER	1	
39	363-9475	ROD	3	
40	363-9468	LEVER	1	
41	363-9467	LEVER	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-50 FOOTREST GP

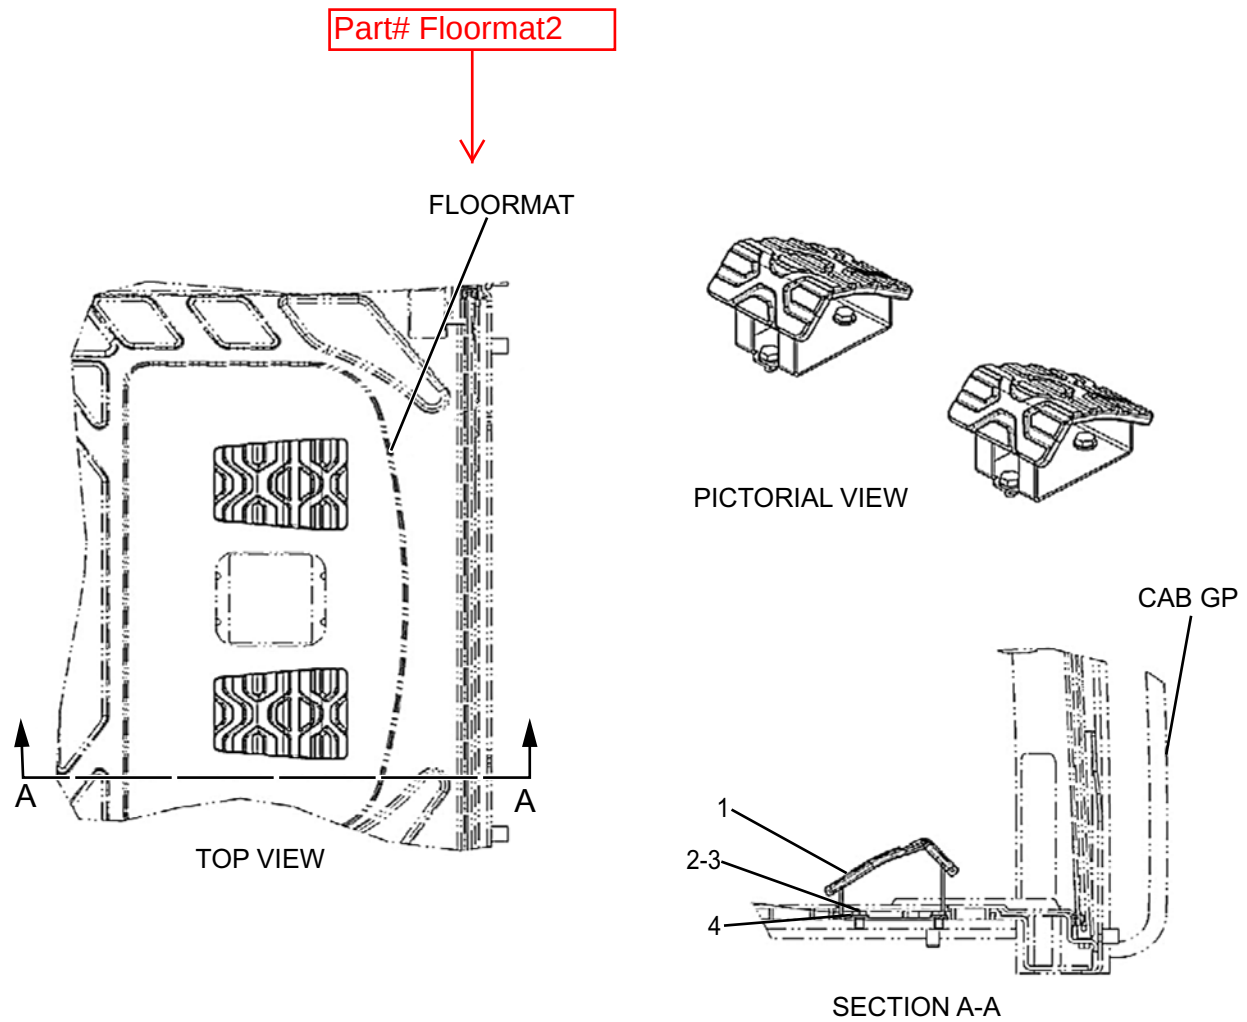

03-50

TABLE FOR FIGURE 03-50:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	122-9610	STEP-RUBBER	2	
2	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	4	
3	8T-4191	BOLT (M10X1.5X16-MM)	4	
4	117-6356	STEP AS	2	

FIGURE 03-51 CONSOLE GP - OPR


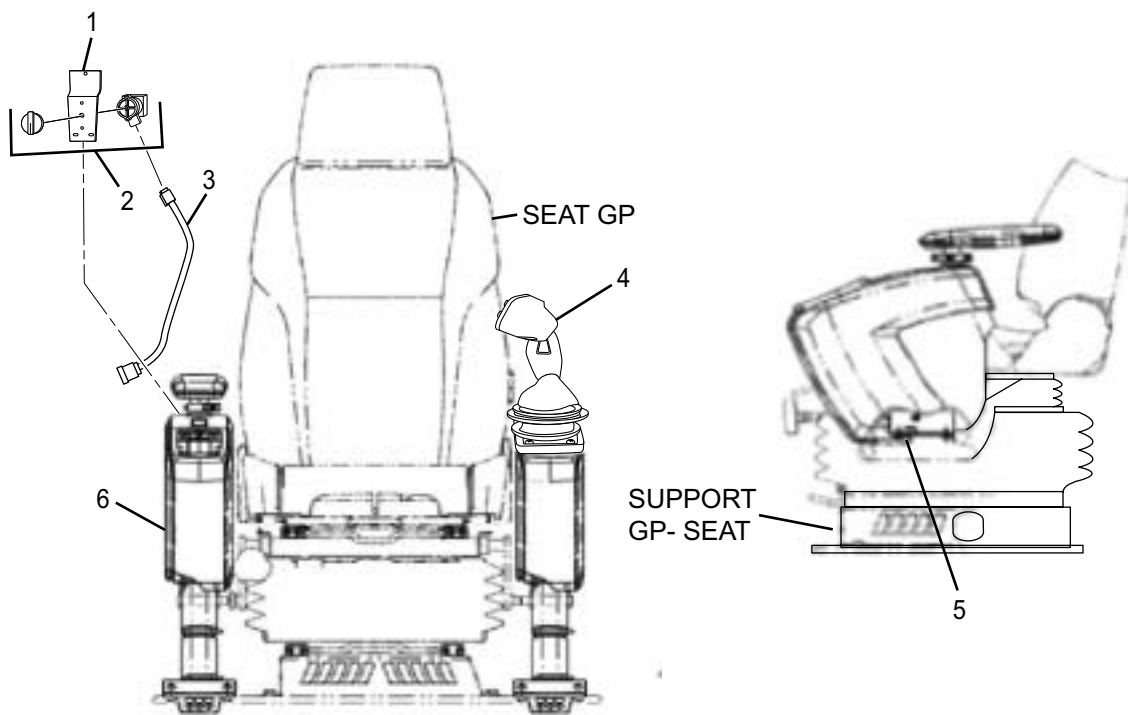


TABLE FOR FIGURE 03-51:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04253-202	PLATE, THROTTLE SWITCH	1	
2	A-08025-700	SWITCH, THROTTLE 134-0670	1	
3	A-08025-701	HARNESS, THROTTLE CUMMINS	1	
4	A-04225-705	JOYSTICK, LEFT HAND	1	
5	9X-2043	SCREW-TRUSS HEAD	8	
6	316-8821	CONSOLE GP	2	

FIGURE 03-52 CONSOLE GP-OPERATOR-RH

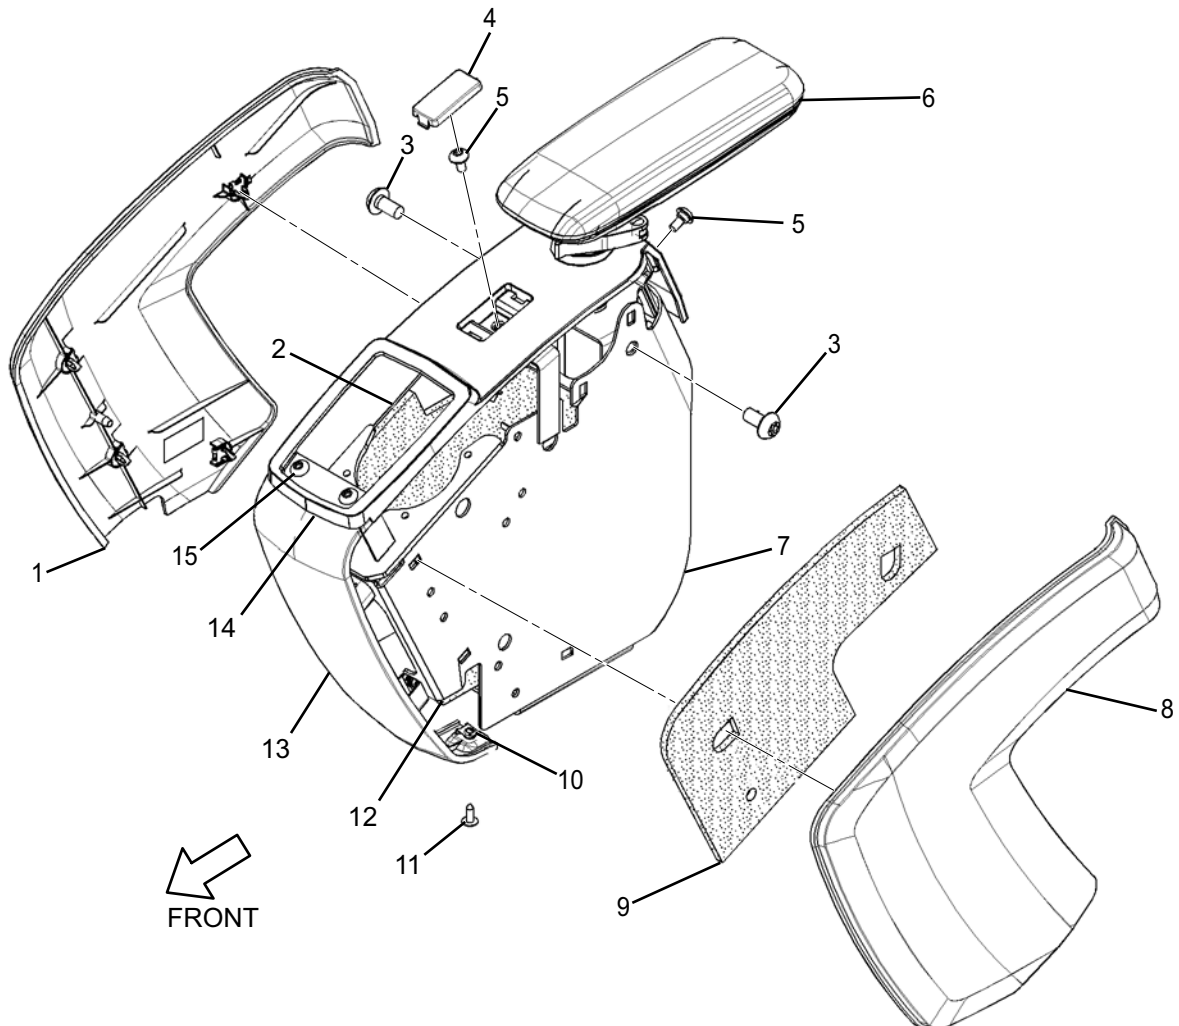


03-52

TABLE FOR FIGURE 03-52:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	357-3848	COVER AS	1	
	170-9724	•CLIP	4	
2	363-9597	INSULATOR	1	
3	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	3	
4	334-6451	COVER	1	
5	346-8025	ARMREST GP (RH)	1	
6	334-6466	SUPPORT AS	1	
7	357-3847	COVER AS	1	
	170-9724	•CLIP	4	
8	363-9594	INSULATOR	1	
9	234-6579	NUT-SPEED	1	
10	245-7790	SCREW-TAPPING	1	
11	363-9598	INSULATOR	1	
12	357-3845	COVER AS	1	
	170-9724	•CLIP	4	
13	334-6462	COVER	1	
14	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	2	
15	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	3	

FIGURE 03-53 ARMREST GP-RH

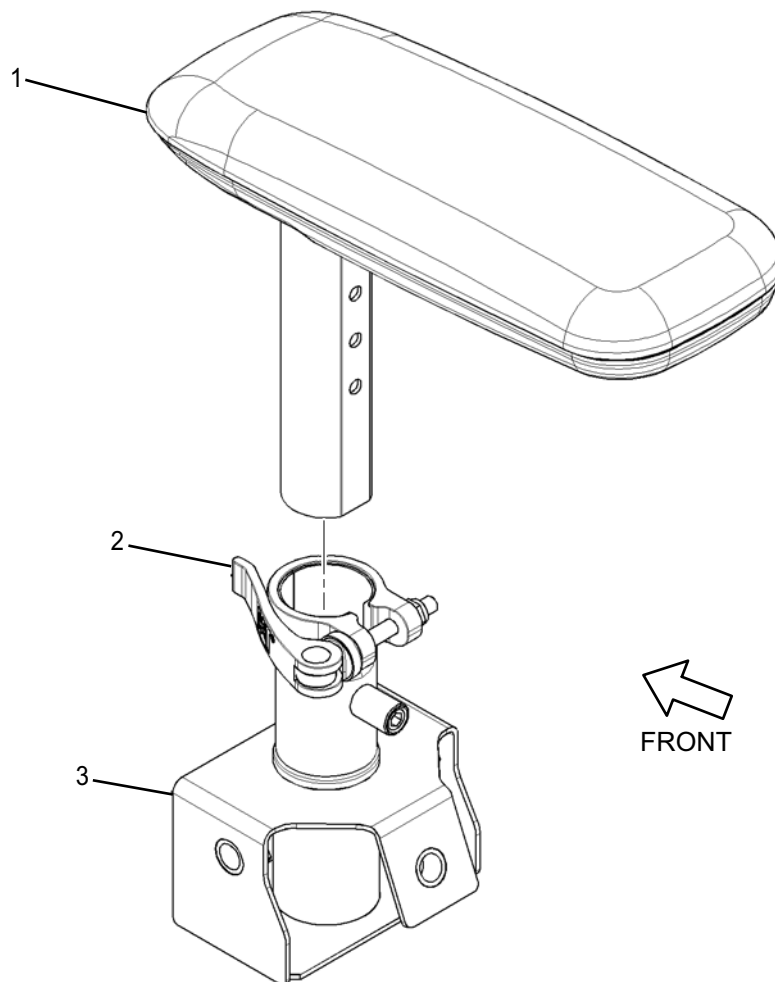


03-53

TABLE FOR FIGURE 03-53:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	340-6714	ARMREST GP	1	
2	340-6720	BRACKET AS	1	
3	340-6725	CLAMP		

FIGURE 03-54 ARMREST GP

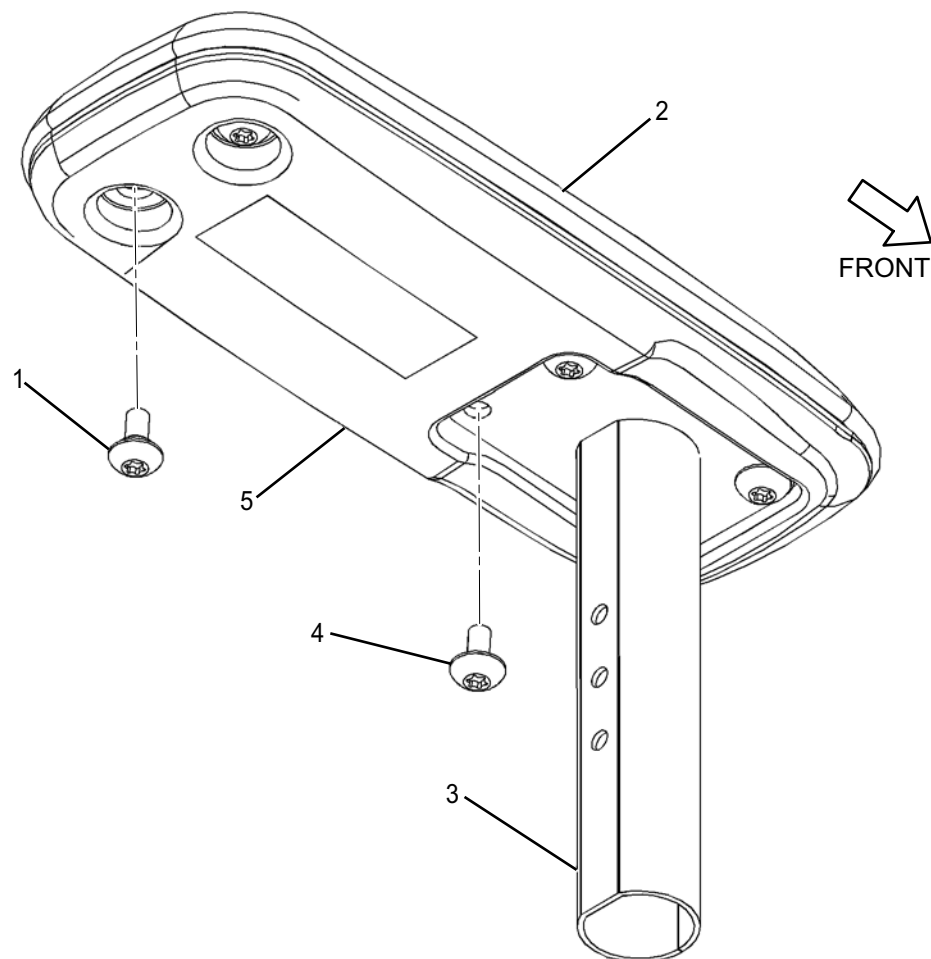


03-54

TABLE FOR FIGURE 03-54:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	2	
2	340-6718	PAD AS	1	
3	340-6715	PIPE AS	1	
4	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	4	
5	340-6719	COVER	1	

FIGURE 03-55 WIRE COVER AND WASHER TANK, CAB

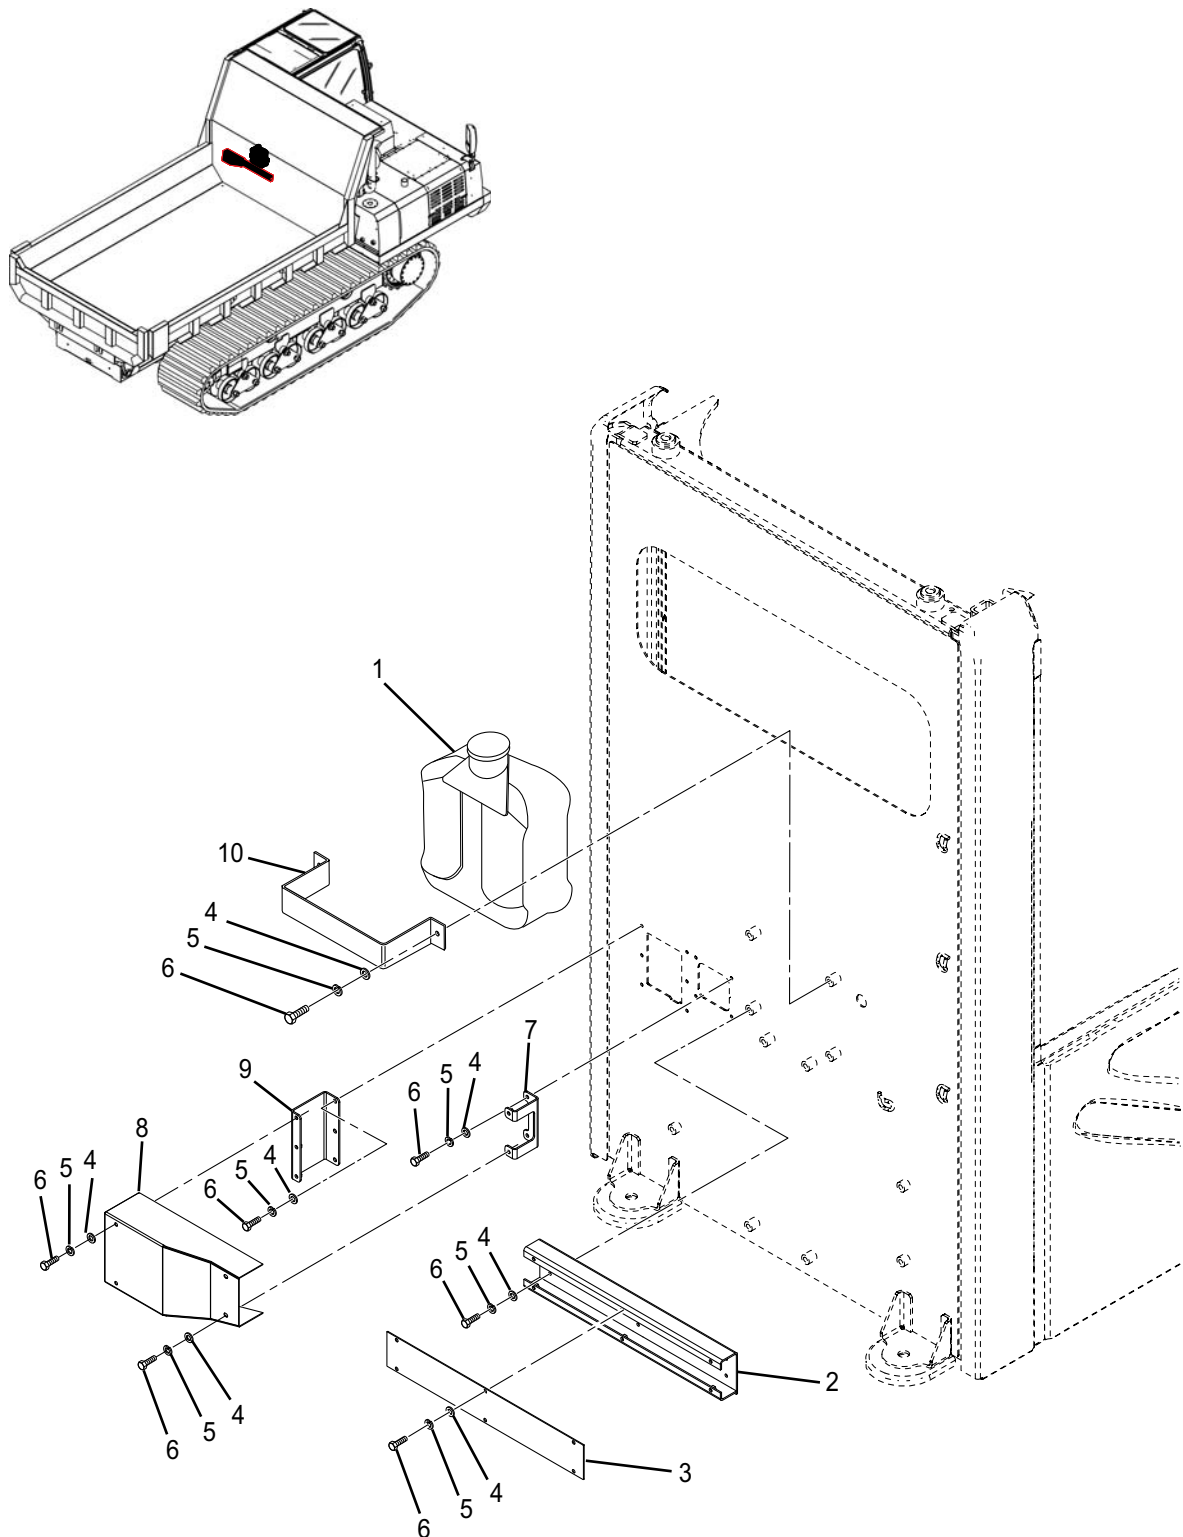

03-55


TABLE FOR FIGURE 03-55:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	176-1931	TANK, WASHER FLUID	1	
2	A-04253-129	WIRE COVER, BASE	1	
3	A-04253-224	WIRE COVER 4 (COVER PLATE)	1	
4	0-1120-00616	M6 WASHER	42	
5	0-1100-00615	M6 LOCK WASHER	21	
6	0-1000-00610	M6 X 1.0 HEX BOLT	21	
7	A-04253-226	PLUG COVER 3 (BOLT PLATE 2)	1	
8	A-04253-221	WIRE COVER (WIDE)	1	
9	A-04253-225	PLUG COVER 2 (BOLT PLATE 1)	1	
10	A-04253-701	BRACKET, WASHER TANK	1	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 04-01 A/C SYSTEM

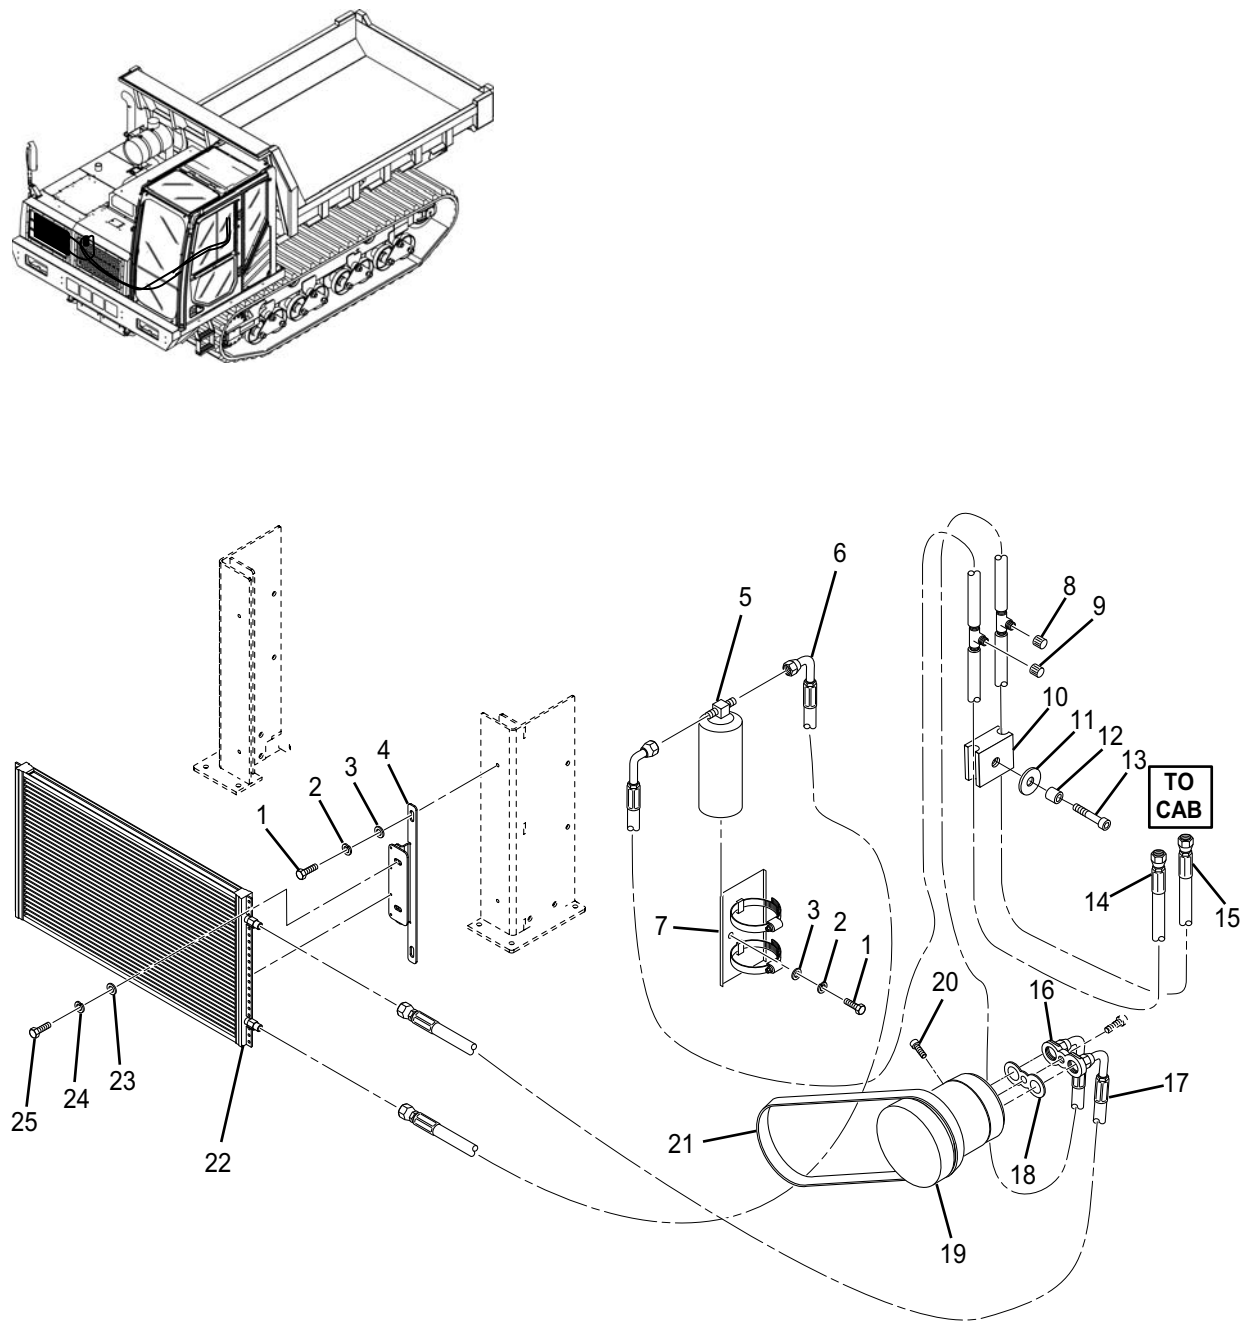

04-01


TABLE FOR FIGURE 04-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	0-1000-00820	M8 X 20 HEX BOLT	6	
2	0-1100-00820	M8 LOCK WASHER	6	
3	0-1120-00816	M8 WASHER	6	
4	A-04292-138	AC CONDENSER MOUNT PLATE	2	
5	A-04292-714	FILTER/DRIER	1	
6	A-04292-717	HOSE	1	
7	A-04292-715	FILTER/DRIER, MOUNT KIT	1	
8	10-2-0004	LOW SIDE, CAP	1	
9	10-2-0006	HIGH SIDE, CAP	1	
10	6G-2256	CLAMP BLOCK	1	
11	2G-8767	WASHER	1	
12	6G-2263	SPACER	1	
13	8T-4182	BOLT	1	
14	A-04292-718	HOSE	1	
15	A-08092-709	HOSE	1	
16	A-08092-702	MANIFOLD	1	
17	A-08092-706	HOSE	1	
18	10-2-0023	O-RING, MANIFOLD	1	
19	A-08092-701	70-1-0002 COMPRESSOR, R-134A, 24V	1	
20	0-1000-01030	M10 X 30 HEX BOLT, HIGH TENSION	1	
21	25-9490	V-BELT AC BELT	1	
22	A-04292-713	CONDENSER	1	
23	0-1120-00616	M6 WASHER	4	
24	0-1100-00615	M6 LOCK WASHER	4	
25	0-1000-00620	M6 X 20 HEX BOLT	4	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 05-01 TENSIONER ASSEMBLY

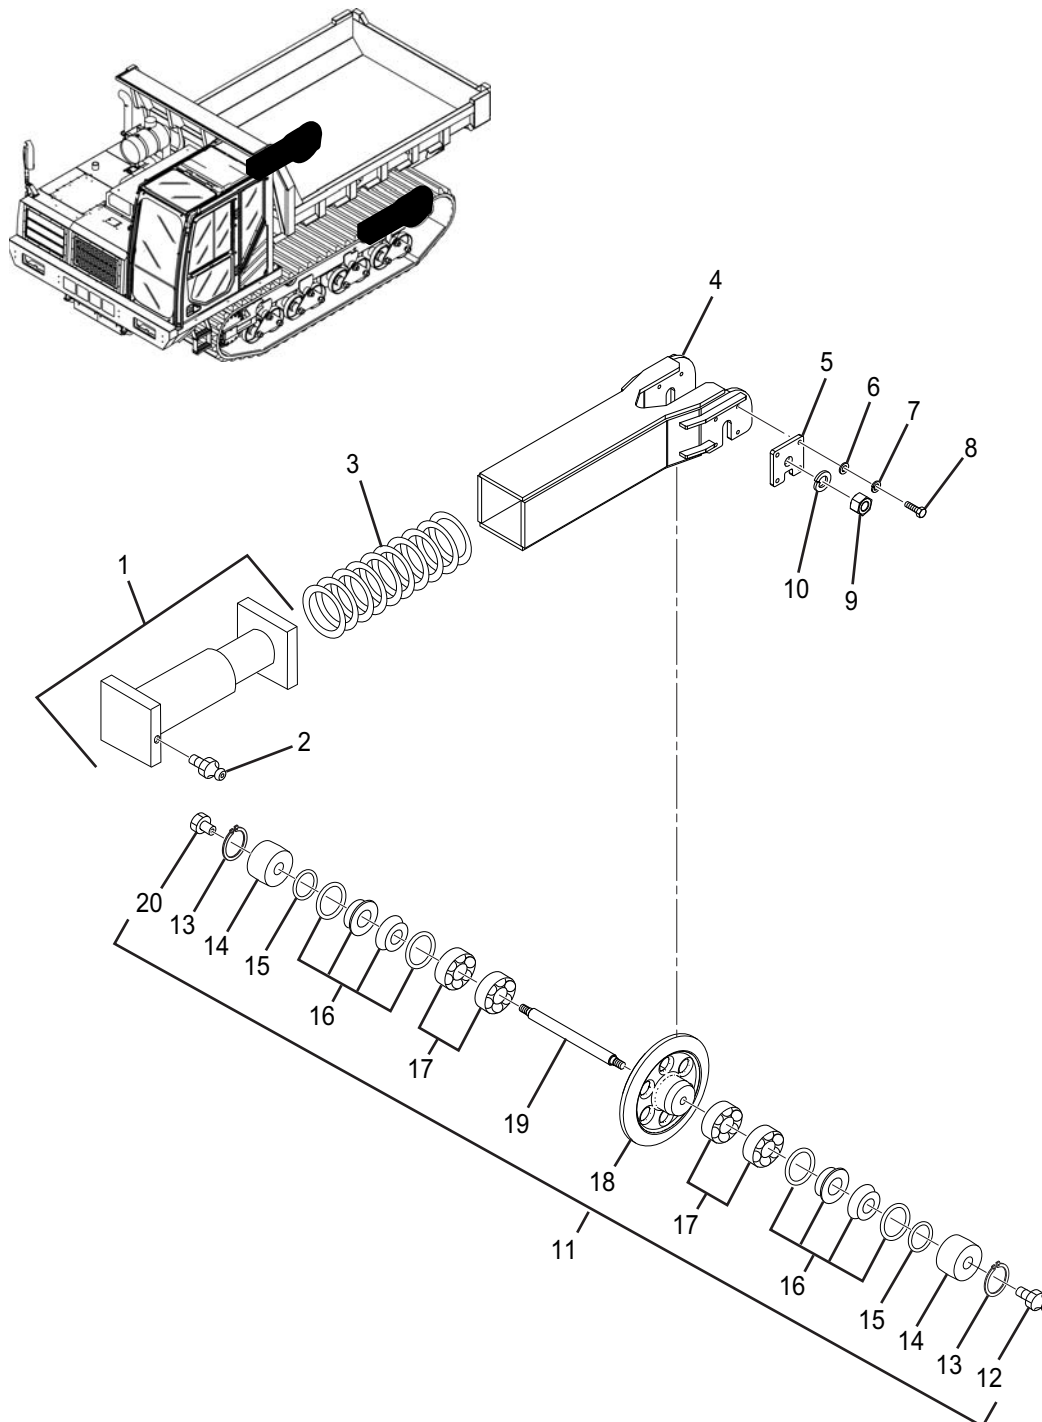


05-01

TABLE FOR FIGURE 05-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	1-17330-1221	CYLINDER ADJUSTER	2	
2	1-11330-1230	•TRACK ADJUSTMENT VALVE	2	
3	1-17330-1210	RECOIL SPRING	2	
4	A-08033-100	SLIDE HOLDER	2	
5	A-04233-200	LOCK PLATE, IDLER	4	
6	0-1140-31232	M12 WASHER	16	
7	0-1100-01230	M12 LOCK WASHER	16	
8	0-1000-31225	M12 X 25 HEX BOLT	16	
9	0-1210-33629	M36 NUT	4	
10	0-1100-03690	M36 LOCK WASHER	8	
11	1-18330-0012	IDLER ASSEMBLY	2	
12	0-3400-00100	•GREASE NIPPLE	2	
13	0-3300-02565	•SNAP RING	4	
14	1-18330-1151	•CAP	4	
15	0-2000-03170	•O-RING	4	
16	1-19330-0020	•FLOATING SEAL KIT	4	
17	0-6003-00214	•ROLLER BEARING	8	
18	1-18320-1111	•IDLER	2	
19	1-18320-1121	•SHAFT	2	
20	1-18330-1170	•RELIEF FITTING	2	

FIGURE 05-02 ROLLERS AND PLANETARY GEAR

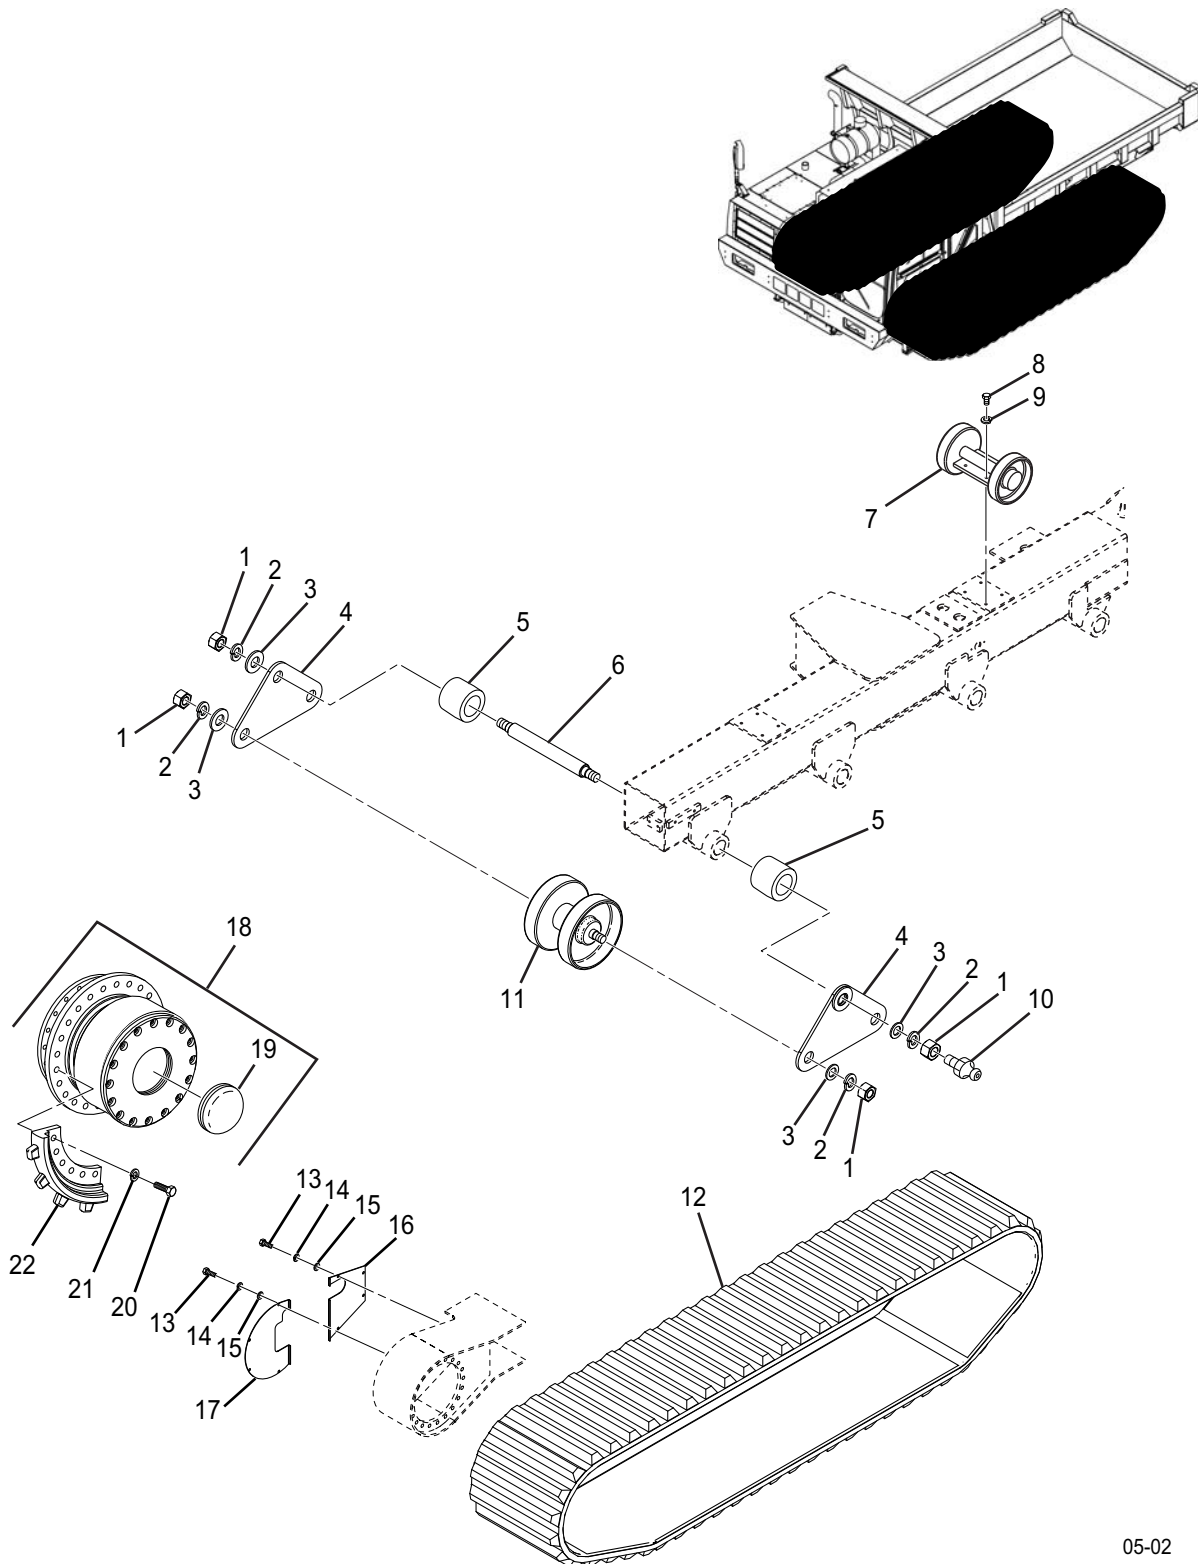


05-02

TABLE FOR FIGURE 05-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	0-1210-33629	M36 NUT	48	
2	0-1100-03690	M36 LOCK WASHER	48	
3	1-19350-1180	M36 WASHER	48	
4	A-04235-100	PLATE	16	
5	1-18350-1230	BUSHING	16	
6	1-18350-1213	PIVOT SHAFT	8	
7	1-24340-0011	TOP ROLLER 1-17340-0011	4	
8	0-1000-31225	M12 X 25 HEX BOLT	16	
9	0-1100-01230	M12 LOCK WASHER	16	
10	0-3400-00100	GREASE NIPPLE	8	
11	1-46350-0010	TRACK ROLLER	32	
12	1-41310-1110	RUBBER TRACK 800 X 150 X 66	2	
13	0-1000-01020	M10 X 20 HEX BOLT	16	
14	0-1100-01025	M10 LOCK WASHER	16	
15	0-1120-01020	M10 WASHER	16	
16	A-04252-273	MOTOR COVER, LEFT HAND REAR SIDE	1	
	A-04352-272	MOTOR COVER, RIGHT HAND REAR SIDE	1	
17	A-04252-271	MOTOR COVER, LEFT HAND FRONT SIDE	1	
	A-04252-270	MOTOR COVER, RIGHT HAND FRONT SIDE	1	
18	A-08063-701	PLANETARY HUB ASSEMBLY	2	
19	M85900401	•AXLE CAP	2	
20	0-1000-32060	M20 X 60 HEX BOLT 40780 - Fastenal	48	
21	1-28320-1140	3/4 EXTRA THICK WASHER (M20 HARD WASHER) 11506997 - Fastenal	48	
22	A-04232-200	SPROCKET SEGMENT	8	

FIGURE 05-03 SKID PLATE

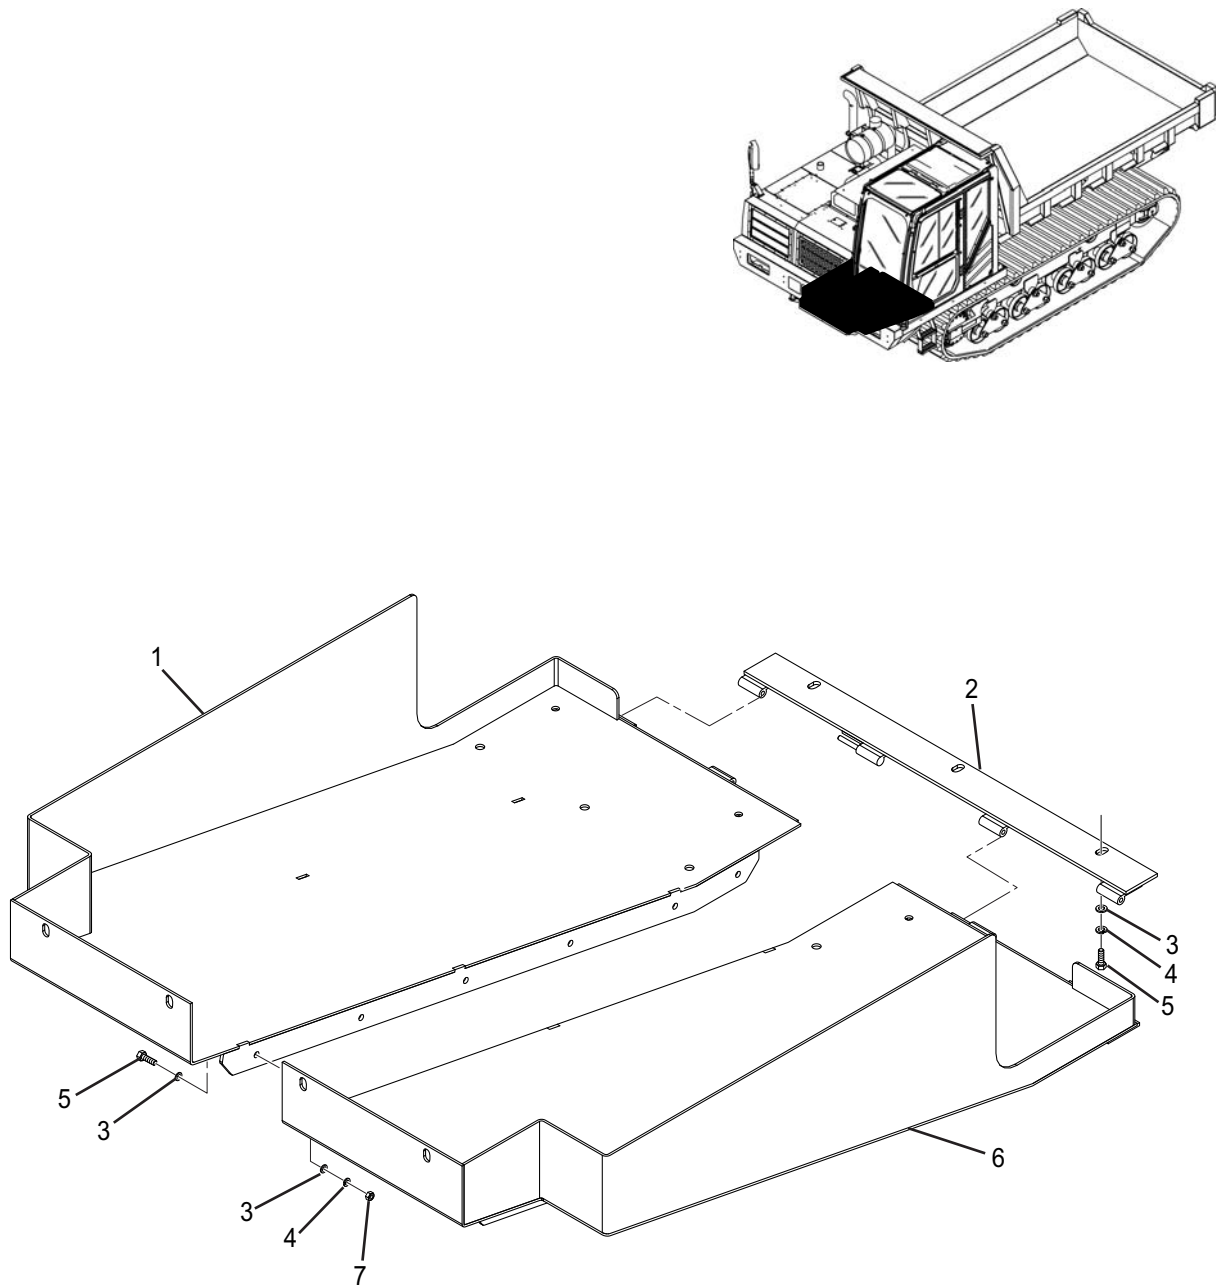


05-03

TABLE FOR FIGURE 05-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08052-152	SKID PLATE RIGHT	1	
2	A-08052-192	SKID PLATE HINGE	1	
3	0-1000-31030	M10 WASHER	13	
4	0-1100-01025	M10 LOCK WASHER	13	
5	0-1000-01030	M10 X 30 HEX BOLT, HIGH TENSION	19	
6	A-08052-153	SKID PLATE LEFT	1	
7	0-1200-31008	M10 NUT	6	

FIGURE 05-04 CHASSIS STEP

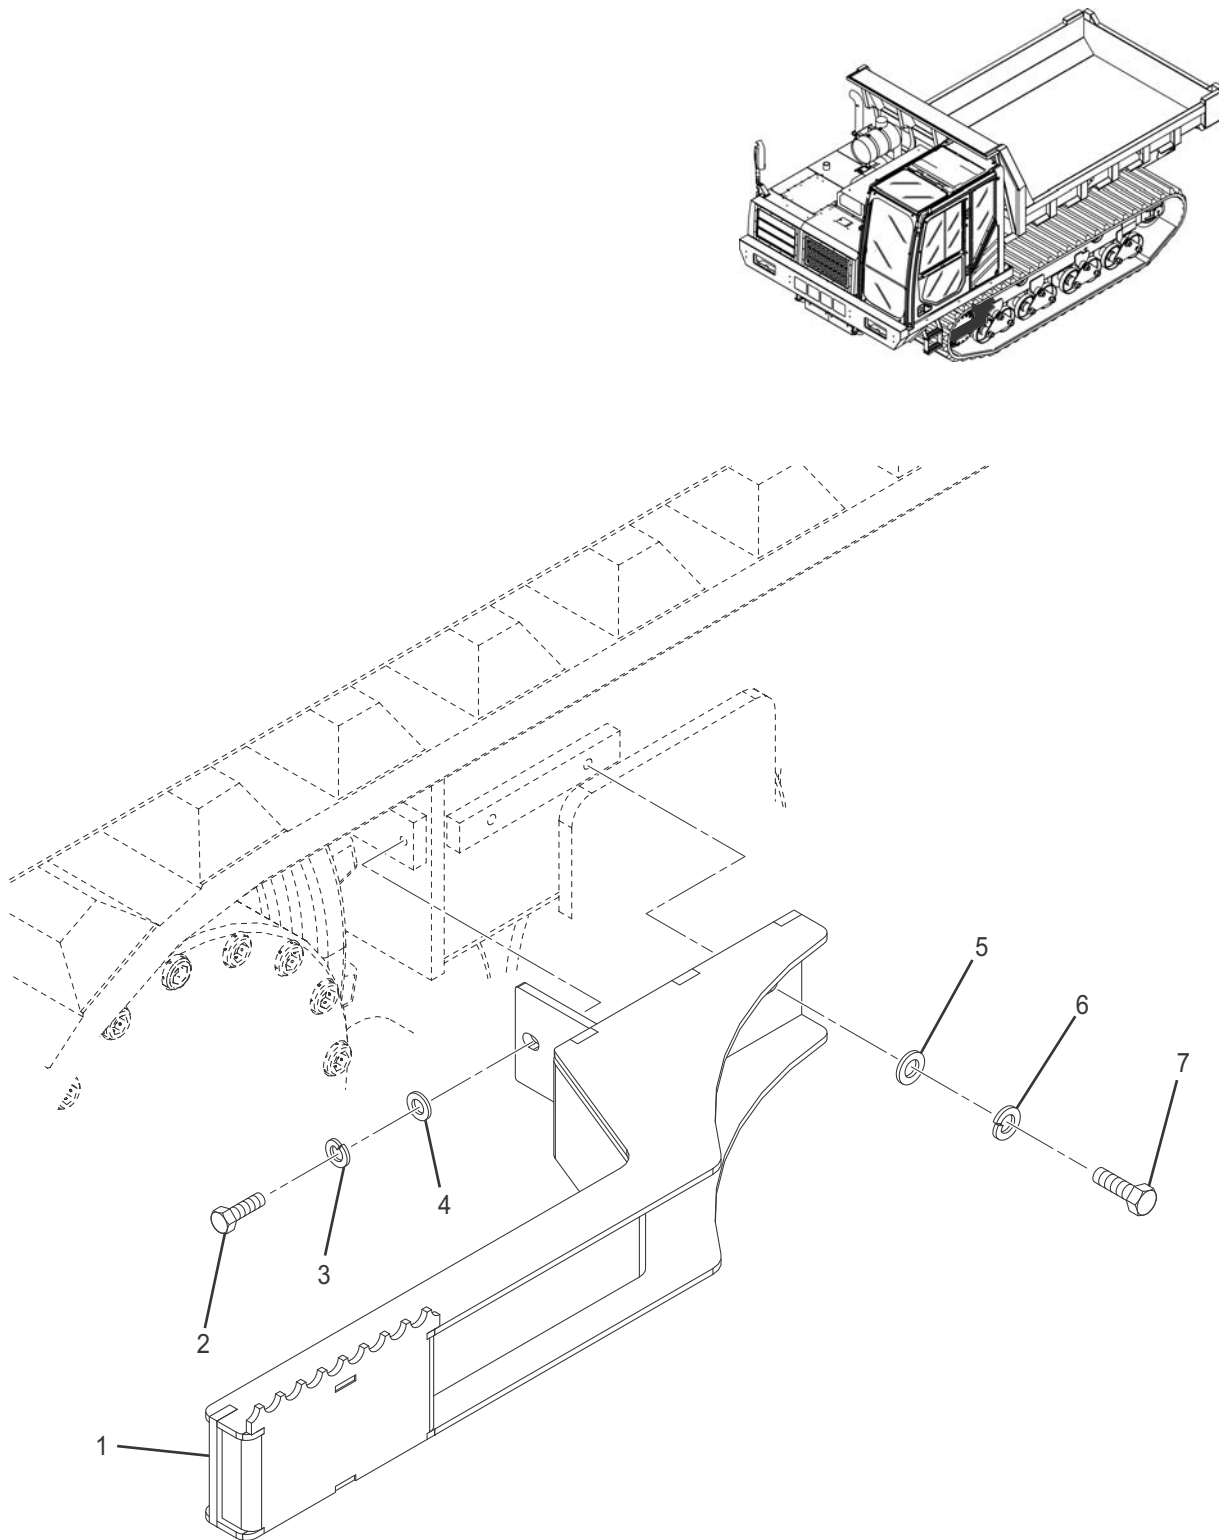

05-04


TABLE FOR FIGURE 05-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04252-141	STEP, CHASSIS	1	
2	0-1000-31230	M12 X 30 HEX BOLT, HIGH TENSION	2	
3	0-1100-01230	M12 LOCK WASHER	2	
4	0-1120-01223	M12 WASHER	2	
5	0-1140-31445	M14 FLAT WASHER	2	
6	0-1100-31435	M14 LOCK WASHER	2	
7	0-1000-31425	M14 X 25 HEX BOLT	2	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 06-01 PUMP, HYDRAULIC

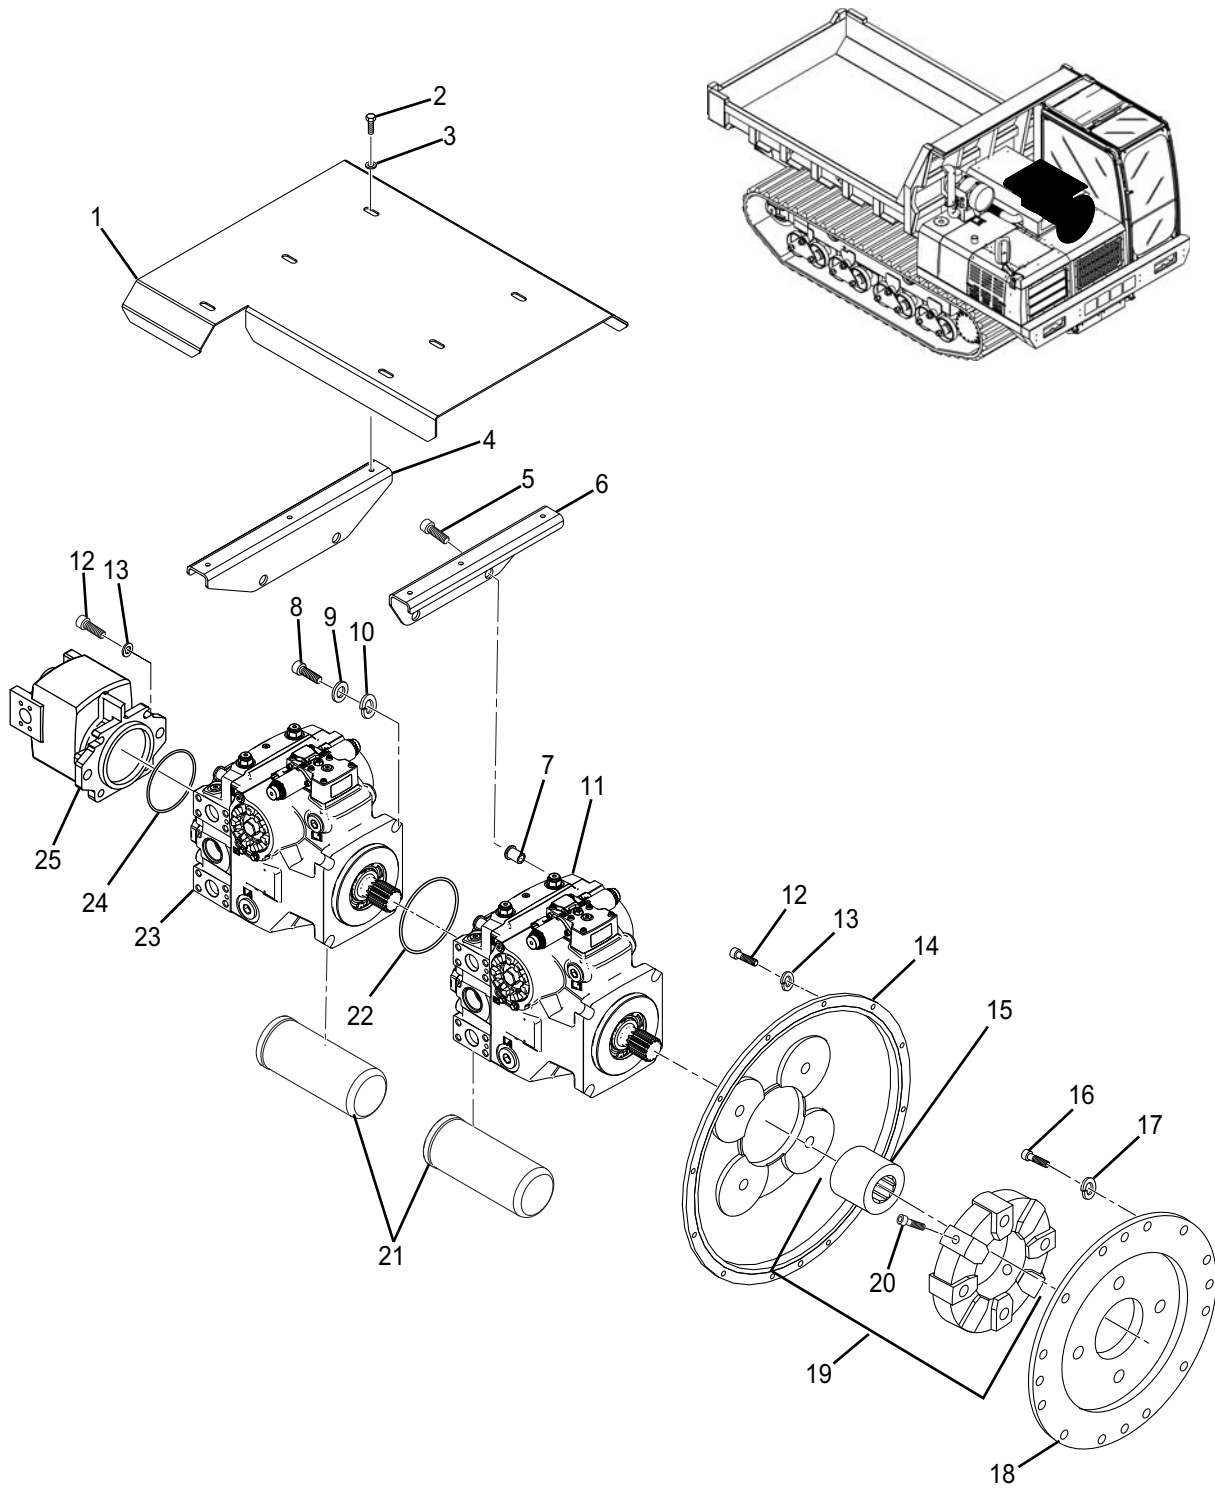


06-01

TABLE FOR FIGURE 06-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08061-201	PUMP COVER	1	
2	0-1000-01025	M10 X 25 HEX BOLT	6	
3	0-1120-01020	M10 WASHER	6	
4	A-08061-203	PUMP COVER BRACKET REAR	1	
5	0-1020-31275	M12 X 75 SOCKET HEAD BOLT	4	
6	A-08061-202	PUMP COVER BRACKET FRONT	1	
7	A-08061-204	SPACER	4	
8	0-1000-32050	M20 X 50 HEX BOLT	4	
9	1-1120-02030	M20 WASHER	4	
10	0-1100-02051	M20 LOCK WASHER	4	
11	A-08061-701	FRONT PUMP	1	
12	0-1000-31235	M12 X 35 HEX BOLT	12	
13	0-1100-01230	M12 LOCK WASHER	12	
14	A-08016-800	COVER	1	
15	1-54160-1130	BOSS	1	
16	0-1500-00730	UNC7/16 X 30 HEX BOLT	8	
17	0-1100-01230	M12 LOCK WASHER	8	
18	A-08016-700	CENTER PLATE	1	
19	A-04216-700	COUPLING	1	
20	A-04216-701	•M20 X 65 HEX BOLT	8	
21	11004919	PUMP FILTER P164378	2	
22	A-04261-703	LARGE O-RING	1	
23	A-08061-702	REAR PUMP	1	
24	A-04261-704	MEDIUM O-RING	1	
25	A-04261-705	GEAR PUMP	1	

FIGURE 06-02 TRAVEL MOTOR AND HYDRAULIC LINES

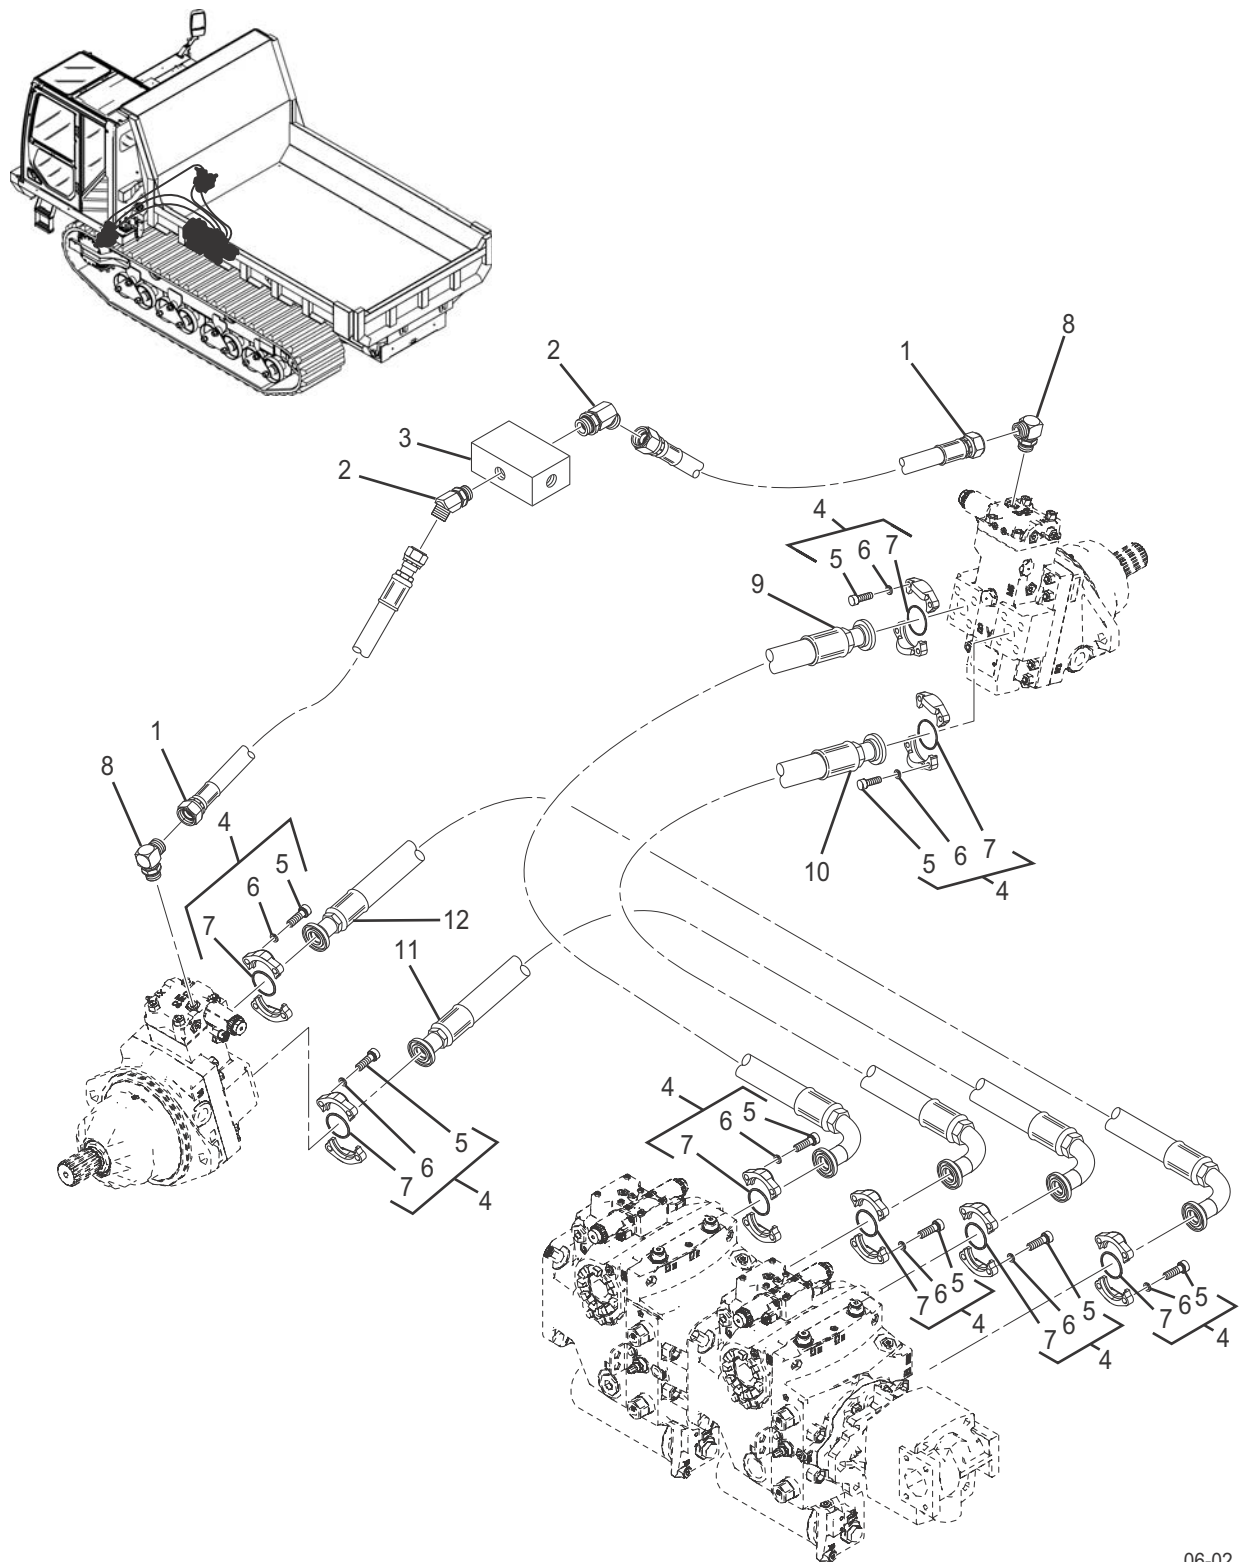


06-02

TABLE FOR FIGURE 06-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08067-711	HOSE	2	
2	6802-12-16-NWO	FITTING, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	2	
3	A-08067-825	CROSS BLOCK	1	
4	A-04267-900	SPLIT FLANGE #20 CODE 62 ASSEMBLY	8	
5	A-04267-902	•M12 X 45 ALLEN HEAD BOLT	32	
6	A-04267-903	•M12 HI-COLLAR LOCK WASHER	32	
7	A-04267-914	•O-RING	8	
8	6801-LL-12-12-NWO	FITTING, ELBOW, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	2	
9	A-08067-724	HOSE	1	
10	A-08067-723	HOSE	1	
11	A-08067-722	HOSE	1	
12	A-08067-721	HOSE	1	

FIGURE 06-03 FILTERED HYDRAULIC LINES

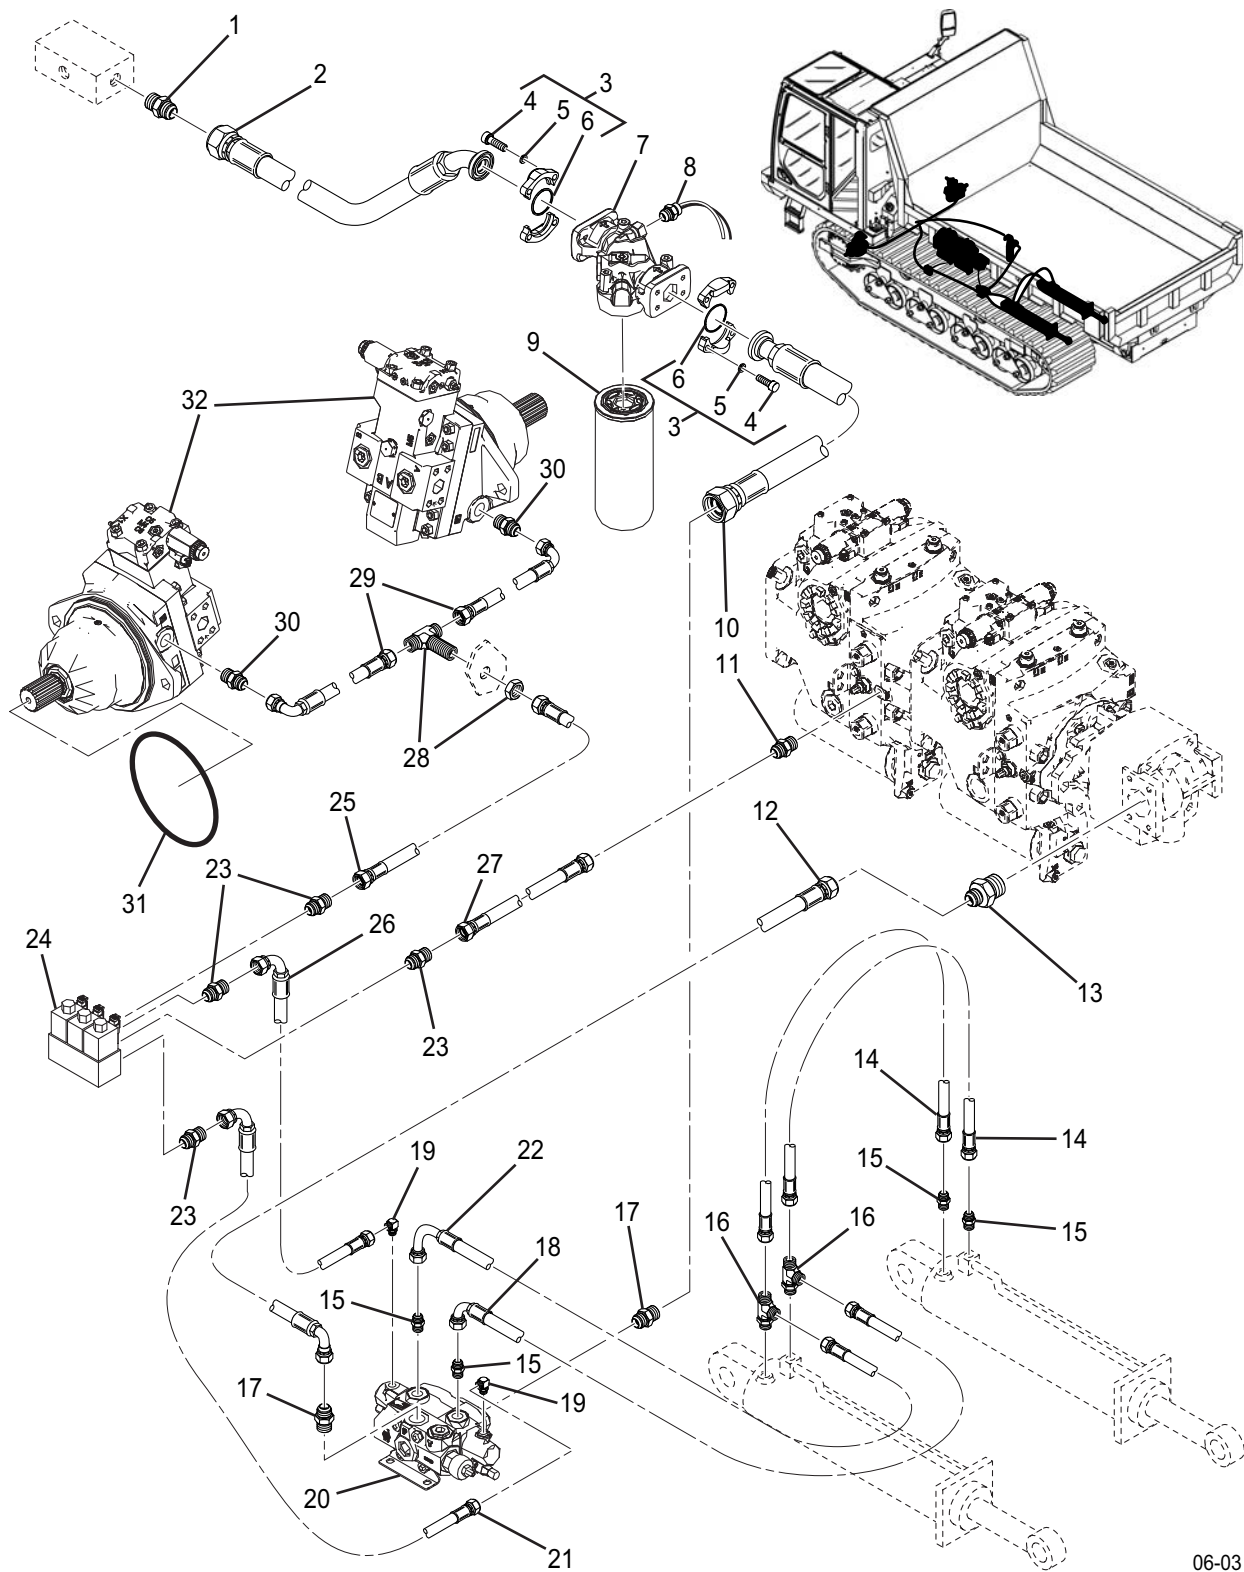

06-03

TABLE FOR FIGURE 06-03:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	6400-16-16-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	1	
2	A-08067-708	HOSE	1	
3	A-04267-910	SPLIT FLANGE ASSEMBLY	4	
4	A-04267-912	•7/16 X 14 X 1.5 ALLEN HEAD BOLT	8	
5	A-04267-913	•7/16 HIGH COLLAR LOCK WASHER	8	
6	A-04267-914	•O-RING	2	
7	A-04265-700	DUAL FILTER HEAD	1	
8	A-04265-702	FILTER INDICATOR SWITCH	1	
9	A-04265-701	FILTER ELEMENT P164384	2	
10	A-08067-707	HOSE	1	
11	6400-04-06-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	1	
12	A-08067-706	HOSE	1	
13	6400-12-20-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	1	
14	A-08067-705	HOSE	2	
15	6400-08-10-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	4	
16	6804-08-10-08-NWO	TEE, MALE JIC, MALE ADJUSTABLE O-RING BOSS, MALE JIC	2	
17	6400-12-12-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	2	
18	A-08067-704	HOSE	1	
19	6801-04-06-NWO	FITTING, ELBOW, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	2	
20	A-04262-701	DUMP CONTROL VALVE	1	
21	A-08067-728	HOSE	1	
22	A-08067-703	HOSE	1	

TABLE FOR FIGURE 06-03: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
23	6400-04-06-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	4	
24	A-04262-700	MANIFOLD PILOT VALVE	1	
25	A-08067-729	HOSE	1	
26	A-08067-727	HOSE	1	
27	A-08067-725	HOSE	1	
28	2703-LN-04-04-04	TEE, MALE JIC, MALE JIC, MALE JIC	1	
29	A-08067-730	HOSE	2	
30	7005-04-12	FITTING, STRAIGHT, MALE JIC TO METRIC	2	
31	A-04263-702	O-RING, TRAVEL MOTOR	2	
32	A-08063-700	TRAVEL MOTOR	2	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 06-04 OIL COOLER AND HYDRAULIC LINES

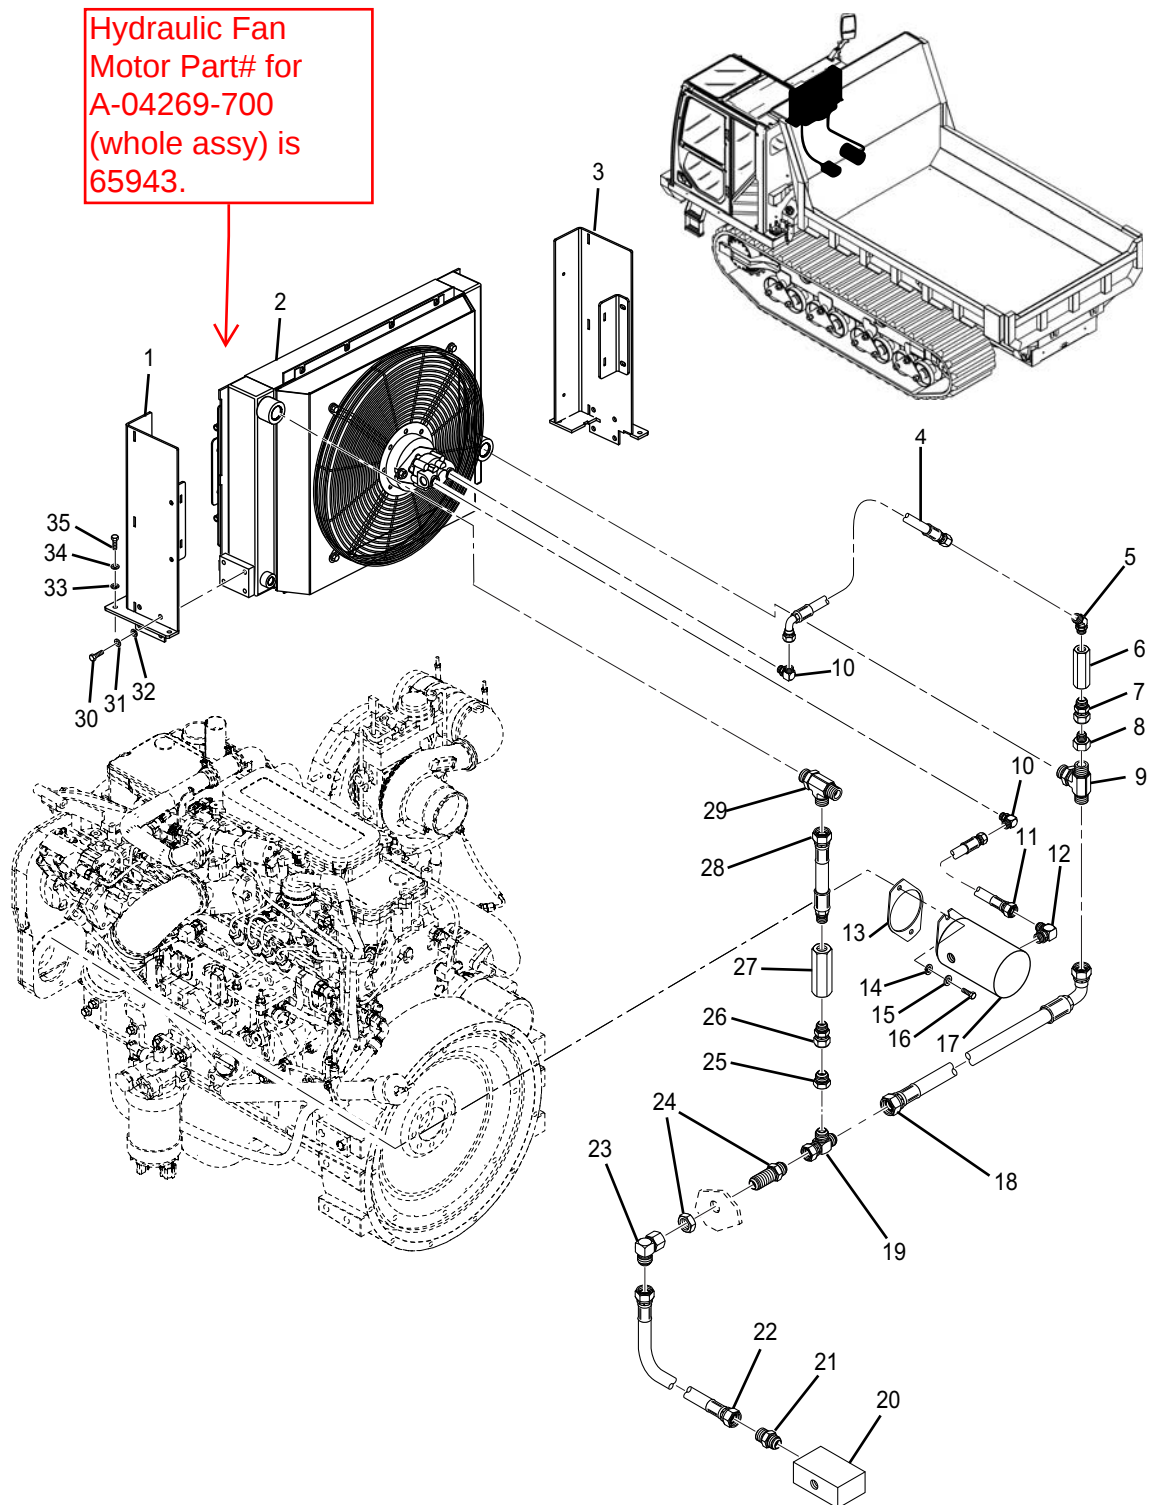

06-04

TABLE FOR FIGURE 06-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04269-101	OIL COOLER BRACKET LEFT SIDE	1	
2	A-04269-700	OIL COOLER	1	
3	A-04269-100	OIL COOLER BRACKET RIGHT SIDE	1	
4	A-08067-719	HOSE	1	
5	6802-08-08-NWO	FITTING, ELBOW, MALE JIC TO MALE JIC	1	
6	A-04262-702	CHECK VALVE B	1	
7	6505-08-08	FITTING, STRAIGHT, MALE TO FEMALE SWIVEL	1	
8	2406-20-08	FITTING, STRAIGHT, FEMALE JIC TO MALE JIC	1	
9	6803-20-20-20-NWO	TEE, MALE JIC, MALE JIC, MALE ADJUSTABLE O-RING BOSS	1	
10	6801-08-08-NWO	FITTING, ELBOW, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	2	
11	A-08067-718	HOSE	1	
12	6801-08-10-NWO	FITTING, ELBOW, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	1	
13	A-04261-707	GASKET	1	
14	0-1120-01020	M10 WASHER	2	
15	0-1100-01025	M10 LOCK WASHER	2	
16	0-1020-31030	M10 X 30 SOCKET HEAD BOLT	2	
17	A-04261-706	AUXILIARY OIL PUMP	1	
18	A-08067-714	HOSE	1	
19	6602-20-20-20	TEE, MALE JIC, FEMALE JIC SWIVEL, MALE JIC	1	
20	A-08067-825	CROSS BLOCK	1	
21	6400-20-24-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	1	
22	A-08067-716	HOSE	1	

TABLE FOR FIGURE 06-04: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
23	6500-20-20	FITTING, ELBOW, 90, MALE JIC TO FEMALE JIC SWIVEL	1	
24	2700-LN-20-20	FITTING, BULKHEAD #20MJ- #20MJ	1	
25	2406-20-16	FITTING, STRAIGHT, FEMALE JIC TO MALE JIC	1	
26	6505-16-16	FITTING, STRAIGHT, MALE PIPE TO FEMALE JIC	1	
27	8-12670-1210	CHECK VALVE A	1	
28	A-08067-713	HOSE	1	
29	6804-20-20-20-NWO	TEE, MALE JIC, MALE ADJUSTABLE O-RING BOSS, MALE JIC	1	
30	0-1000-01025	M12 X 25 HEX BOLT	8	
31	0-1100-01230	M12 LOCK WASHER	8	
32	0-1120-01223	M12 WASHER	8	
33	0-1120-00816	M8 WASHER	6	
34	0-1100-00820	M8 LOCK WASHER	6	
35	0-1000-00825	M8 X 25 HEX BOLT	6	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 06-05 OIL TANK AND HYDRAULIC LINES

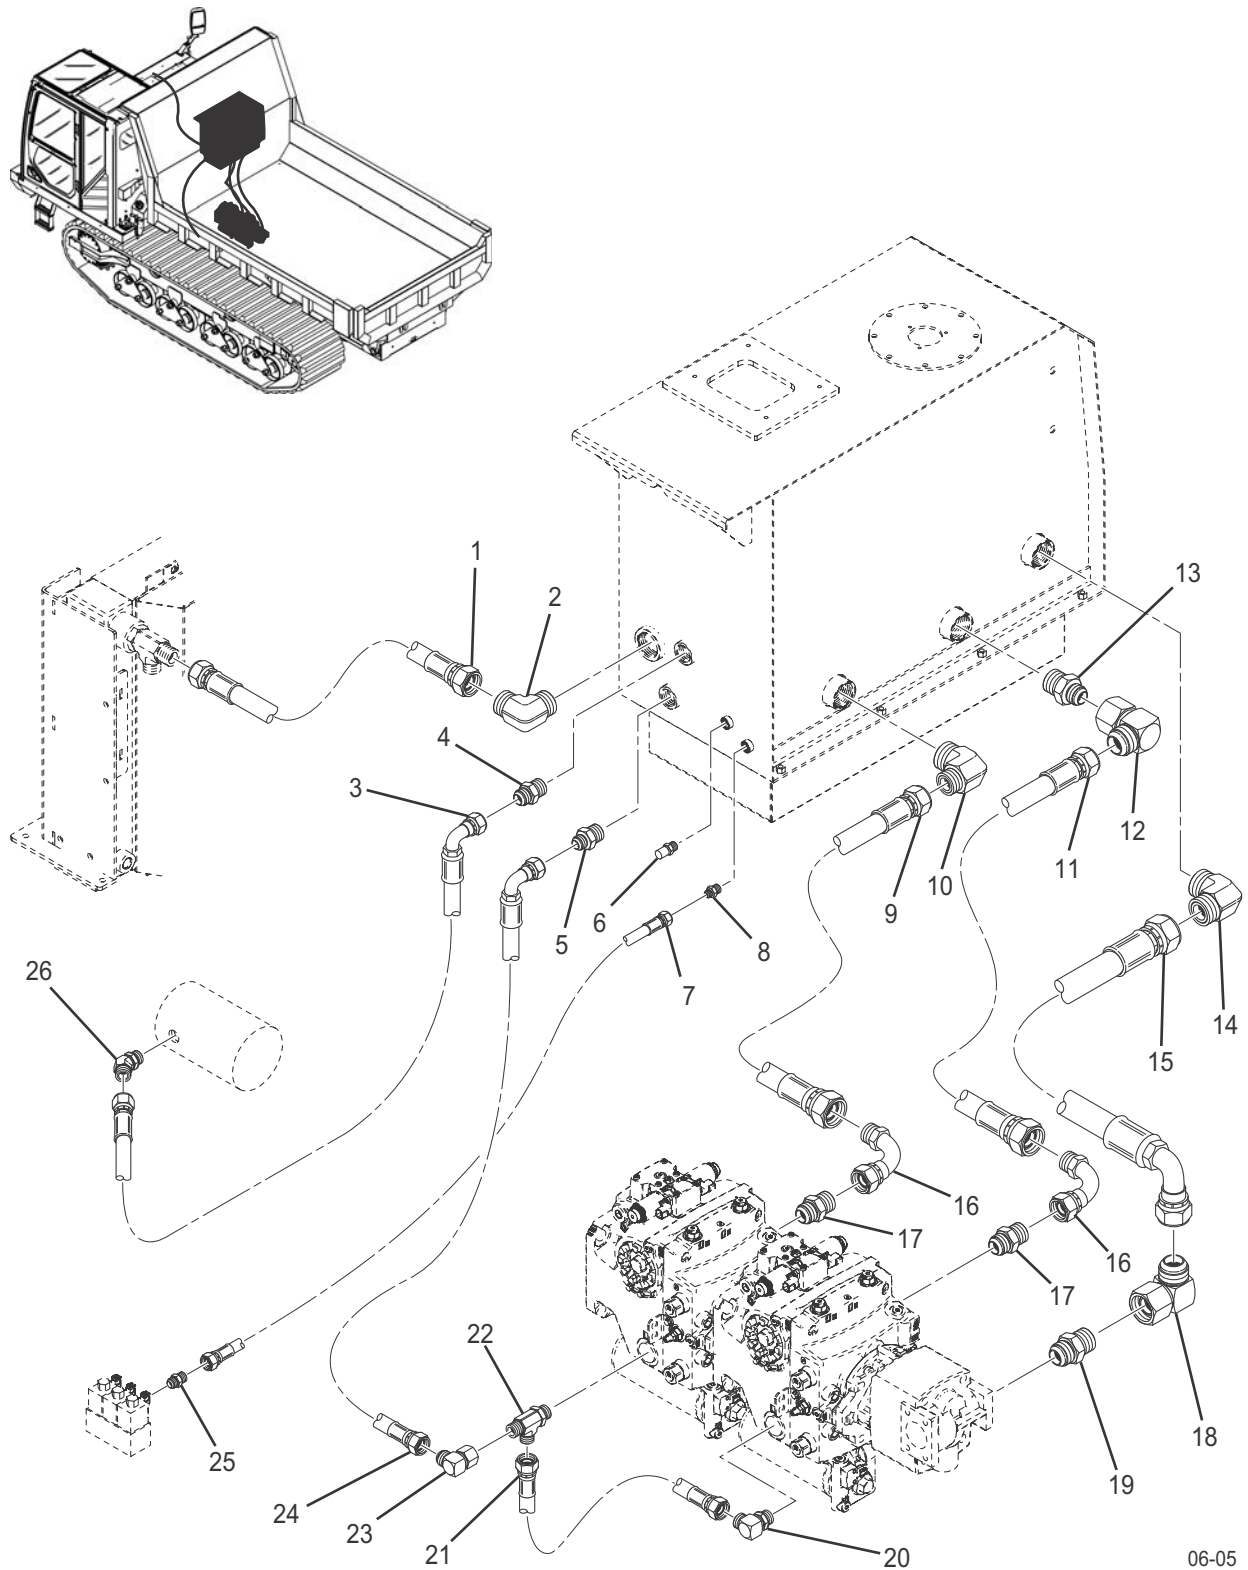


TABLE FOR FIGURE 06-05:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08067-715	HOSE	1	
2	2501-20-24	FITTING, ELBOW, 90, MALE JIC TO MALE PIPE	1	
3	A-08067-717	HOSE	1	
4	2404-12-16	FITTING, STRAIGHT MALE JIC PIPE	1	
5	2404-16-16	FITTING, STRAIGHT, MALE JIC TO MALE PIPE	1	
6	A-04225-708	HYDRAULIC OIL TEMP SENSOR	1	
7	A-08067-726	HOSE	1	
8	2404-04-06	FITTING, STRAIGHT, MALE JIC TO MALE PIPE	1	
9	A-08067-702	HOSE	1	
10	2501-20-24	FITTING, ELBOW, 90, MALE JIC TO MALE PIPE	1	
11	A-08067-742	HOSE	1	
12	6500-20-20	FITTING, ELBOW, 90, MALE JIC TO FEMALE JIC SWIVEL	1	
13	2404-20-24	FITTING, STRAIGHT, MALE JIC TO MALE PIPE	1	
14	2501-24-24	FITTING, ELBOW, MALE, JIC, TO MALE PIPE	1	
15	A-08067-701	HOSE	1	
16	6701-L-20-20	FITTING, ELBOW, MALE JIC TO FEMALE JIC SWIVEL	2	
17	6400-20-20-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	2	
18	6500-24-24	FITTING, ELBOW, 90, MALE JIC TO FEMALE JIC SWIVEL	1	
19	6400-24-24-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	1	
20	6801-16-16-NWO	FITTING, ELBOW, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	1	

TABLE FOR FIGURE 06-05: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
21	A-08067-709	HOSE	1	
22	6804-16-16-16-NWO	TEE, MALE JIC, MALE ADJUSTABLE O-RING BOSS, MALE JIC	1	
23	6500-16-16	FITTING, ELBOW, MALE JIC TO FEMALE JIC SWIVEL	1	
24	A-08067-710	HOSE	1	
25	6400-04-06-O	FITTING, STRAIGHT, MALE JIC TO MALE O-RING BOSS	1	
26	6802-12-12-NWO	FITTING, ELBOW, MALE JIC TO MALE ADJUSTABLE O-RING BOSS	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 07-01 DUMP BED

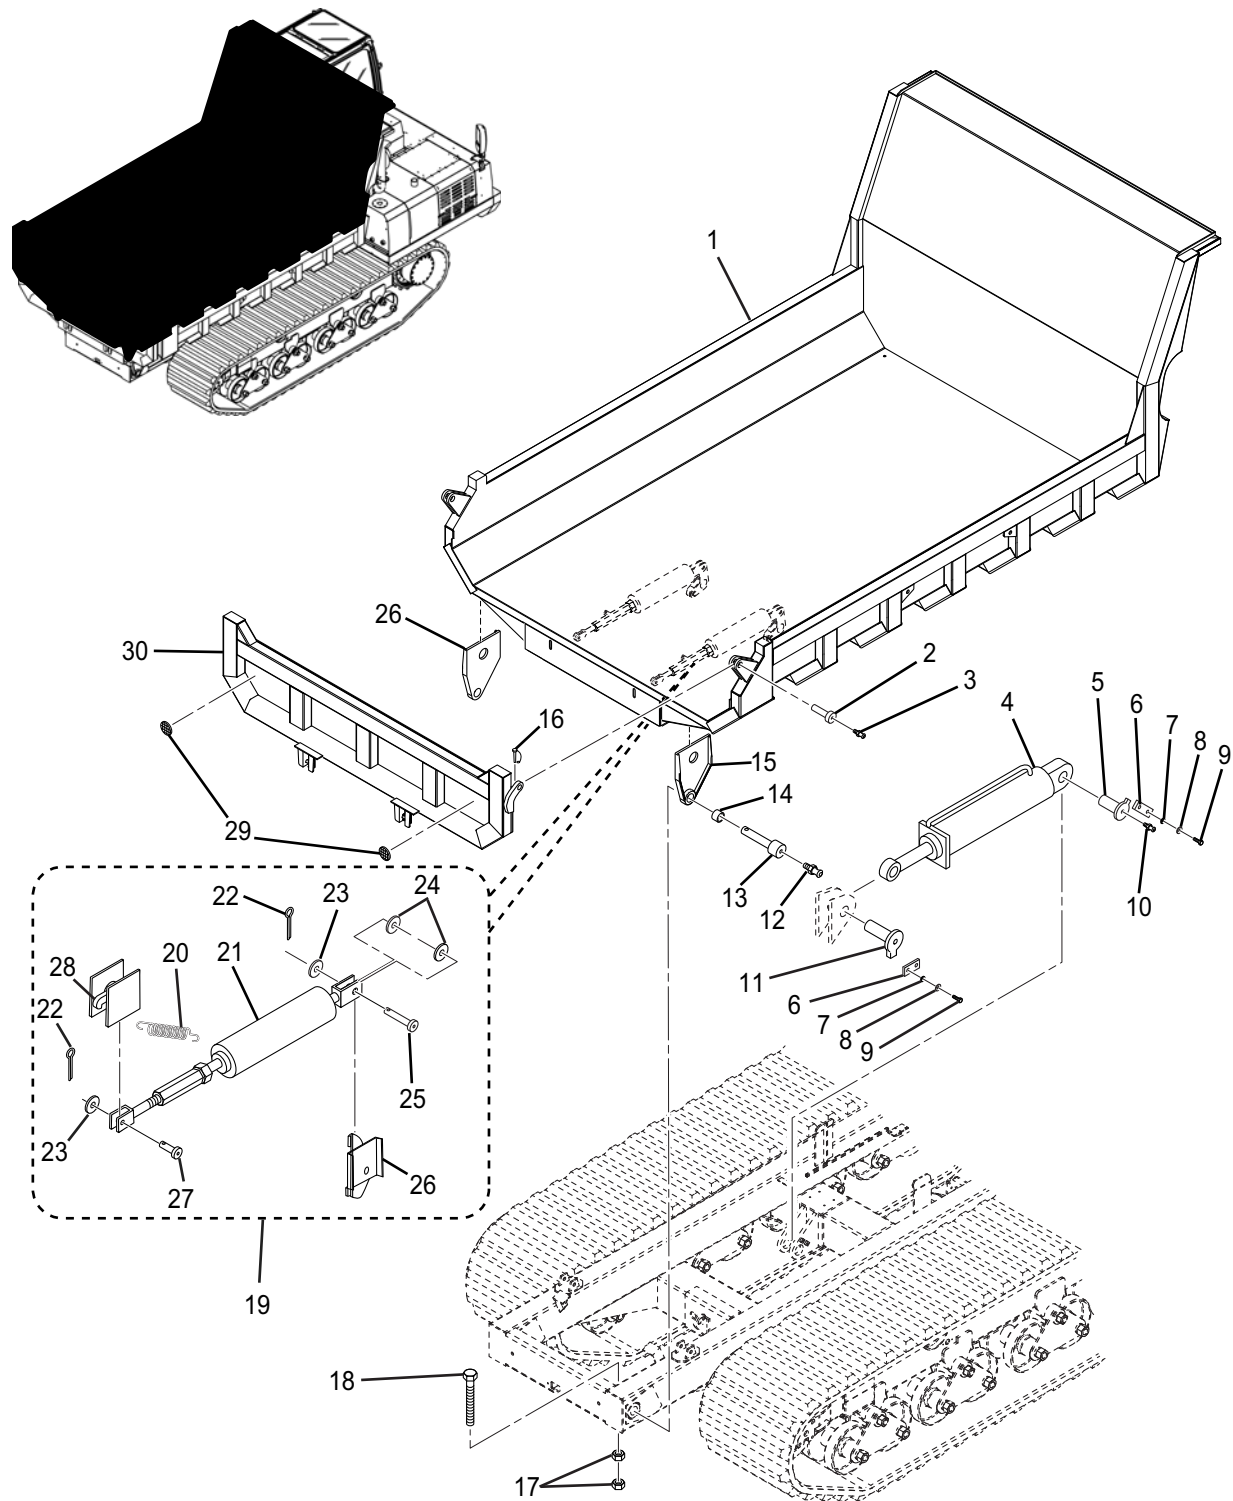

07-01

TABLE FOR FIGURE 07-01:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08071-108	DUMP BODY	1	
2	A-04271-250	TAILGATE HINGE PIN	2	
3	0-3400-00100	GREASE NIPPLE	2	
4	1-46640-0010	DUMP CYLINDER	2	
5	1-41710-1320	CYLINDER PIN (LOWER)	2	
6	A-04271-200	LOCK PLATE M13 CYLINDER PIN	4	
7	0-1120-01223	M12 WASHER	8	
8	0-1100-01230	M12 LOCK WASHER	4	
9	0-1000-31225	M12 X 25 HEX BOLT	4	
10	0-3400-00170	GREASE NIPPLE	2	
11	1-41710-1380	CYLINDER PIN (UPPER)	2	
12	0-3400-00100	GREASE NIPPLE	2	
13	1-18710-1312	HINGE PIN	2	
14	1-41710-1360	BUSHING	2	
15	1-18710-1243	RH HINGE PIN BRACKET	1	
	1-18710-1233	LH HINGE PIN BRACKET	1	
16	0-3230-00640	LYNCH PIN	2	
17	0-1200-31210	M12 NUT	4	
18	0-1001-31230	M12 X 130 HEX BOLT	2	
19	1-28710-1400	LEFT SIDE CUSHION	1	
	1-28710-1500	RIGHT SIDE CUSHION	1	
20	1-17710-1430	SPRING	1	
21	1-17710-1440V	SPRING CASE	1	
22	0-3220-02122	COTTER PIN	2	
23	0-1110-01020	M10 WASHER	4	
24	0-1140-01032	M10 HARD WASHER	2	
25	0-3200-01033	PIN	2	

TABLE FOR FIGURE 07-01: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
26	1-17710-1460V	LEFT ARM	1	
	1-17710-1480V	RIGHT ARM	1	
27	0-3200-01025	PIN	2	
28	1-17710-1410VL	LEFT SIDE HOOK	1	
	1-17710-1410VR	RIGHT SIDE HOOK	1	
29	1-11710-1150	REFLECTOR	2	
30	A-08071-109	REAR DOOR	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 08-01 ELECTRICAL 01

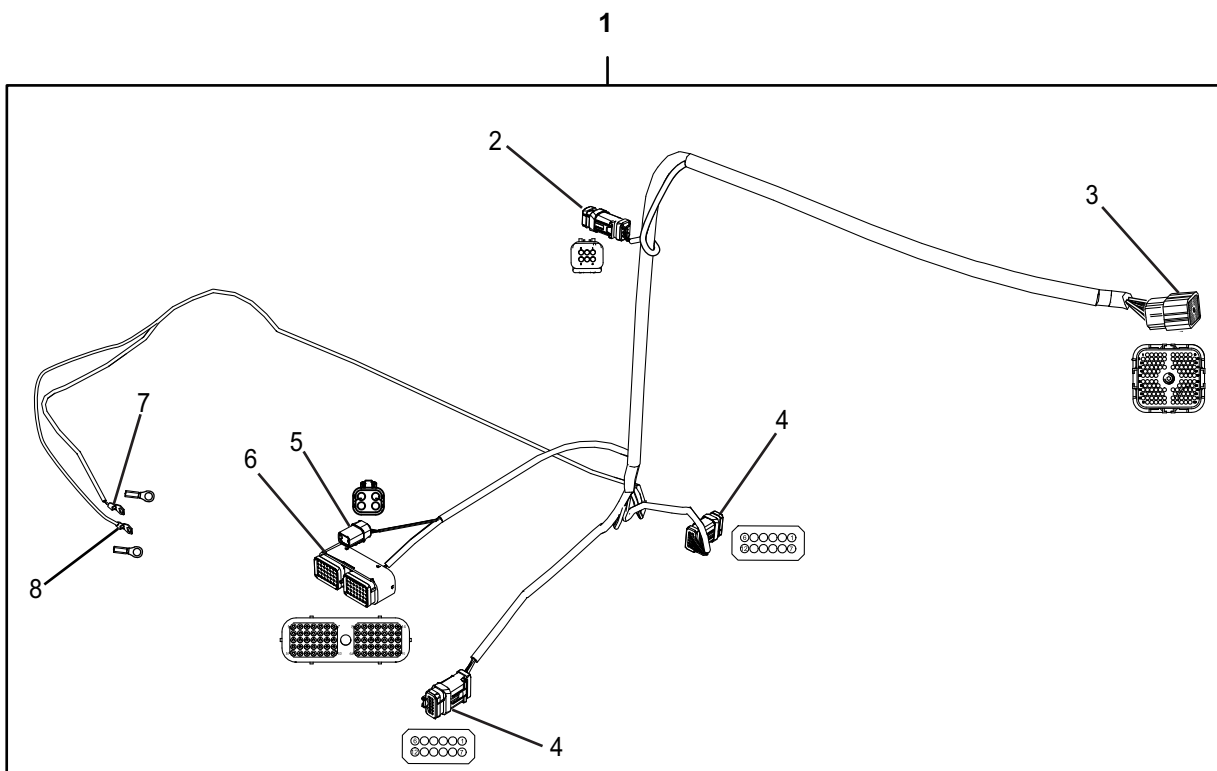


08-01

TABLE FOR FIGURE 08-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04225-800	HARNESS ECM	1	
2	776434-1	•CONNECTOR, C12, MALE	1	
3	264-5732	•CONNECTOR, CATERPILLAR ENGINE	1	
4	776438-1	•CONNECTOR, C10/C11, MALE	2	
5	DTP06-4S	•CONNECTOR, POWER TO DEF	1	
6	DRC16-70SA	•CONNECTOR, ECM	1	
7	19073-0086	•RING TERMINAL, STARTER RELAY	1	
8	33467	•RING TERMINAL, STARTER GROUND	1	

FIGURE 08-02 ELECTRICAL 02

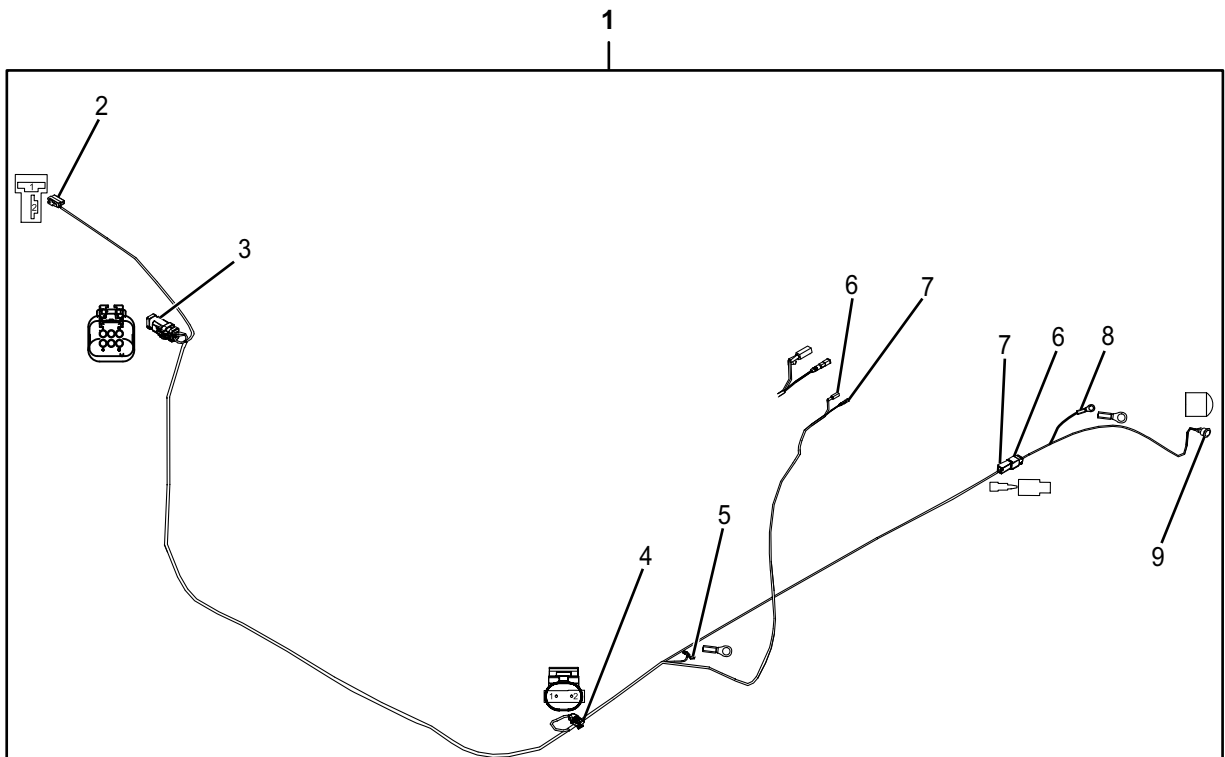


08-02

TABLE FOR FIGURE 08-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04225-803	HARNESS BRANCH	1	
2	7123-2128	•CONNECTOR, WASHER FLUID RESERVOIR	1	
3	776433-1	•CONNECTOR, C12, FEMALE	1	
4	12162197-B	•CONNECTOR, HYDRAULIC TEMP	1	
5	19070-0076	•RING TERMINAL, GROUND	1	
6	BAR-2156	•CONNECTOR, FUEL LEVEL 1	2	
7	A-269X	•CONNECTOR, FUEL LEVEL 2	2	
8	19073-0026	•CONNECTOR, WARNING LIGHT GROUND	1	
9	M177A	•WARNING LIGHT	1	

FIGURE 08-03 ELECTRICAL 03

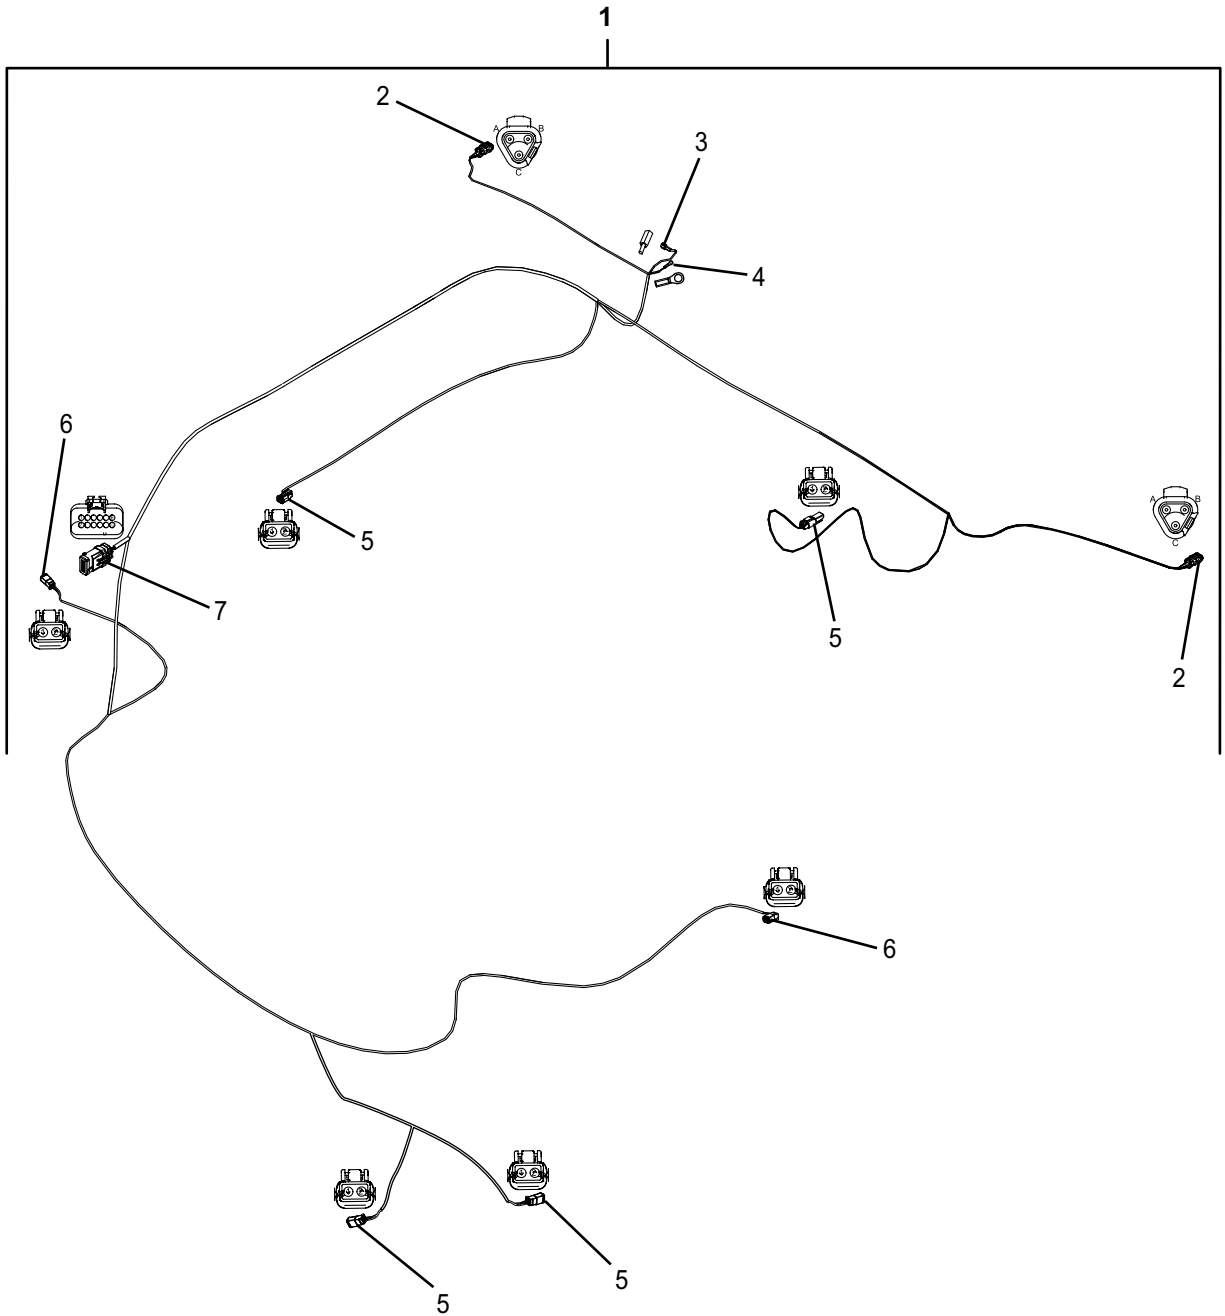


08-03

TABLE FOR FIGURE 08-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04225-802	HARNESS FWD	1	
2	DT06-3S	•CONNECTOR, LEFT HEADLIGHT, RIGHT HEADLIGHT	2	
3	19005-0004	•CONNECTOR, HORN	1	
4	19073-0190	•RING TERMINAL, HORN GROUND	1	
5	DT06-2S	•CONNECTOR, AC COMPRESSOR, LEFT BRAKE DEFEAT, RIGHT BRAKE DEFEAT, HEAT PLATE	4	
6	BRA-2156	•CONNECTOR, RIGHT TURN, LEFT TURN	2	
7	776437-1	•CONNECTOR, C10 FEMALE	1	

FIGURE 08-04 ELECTRICAL 04

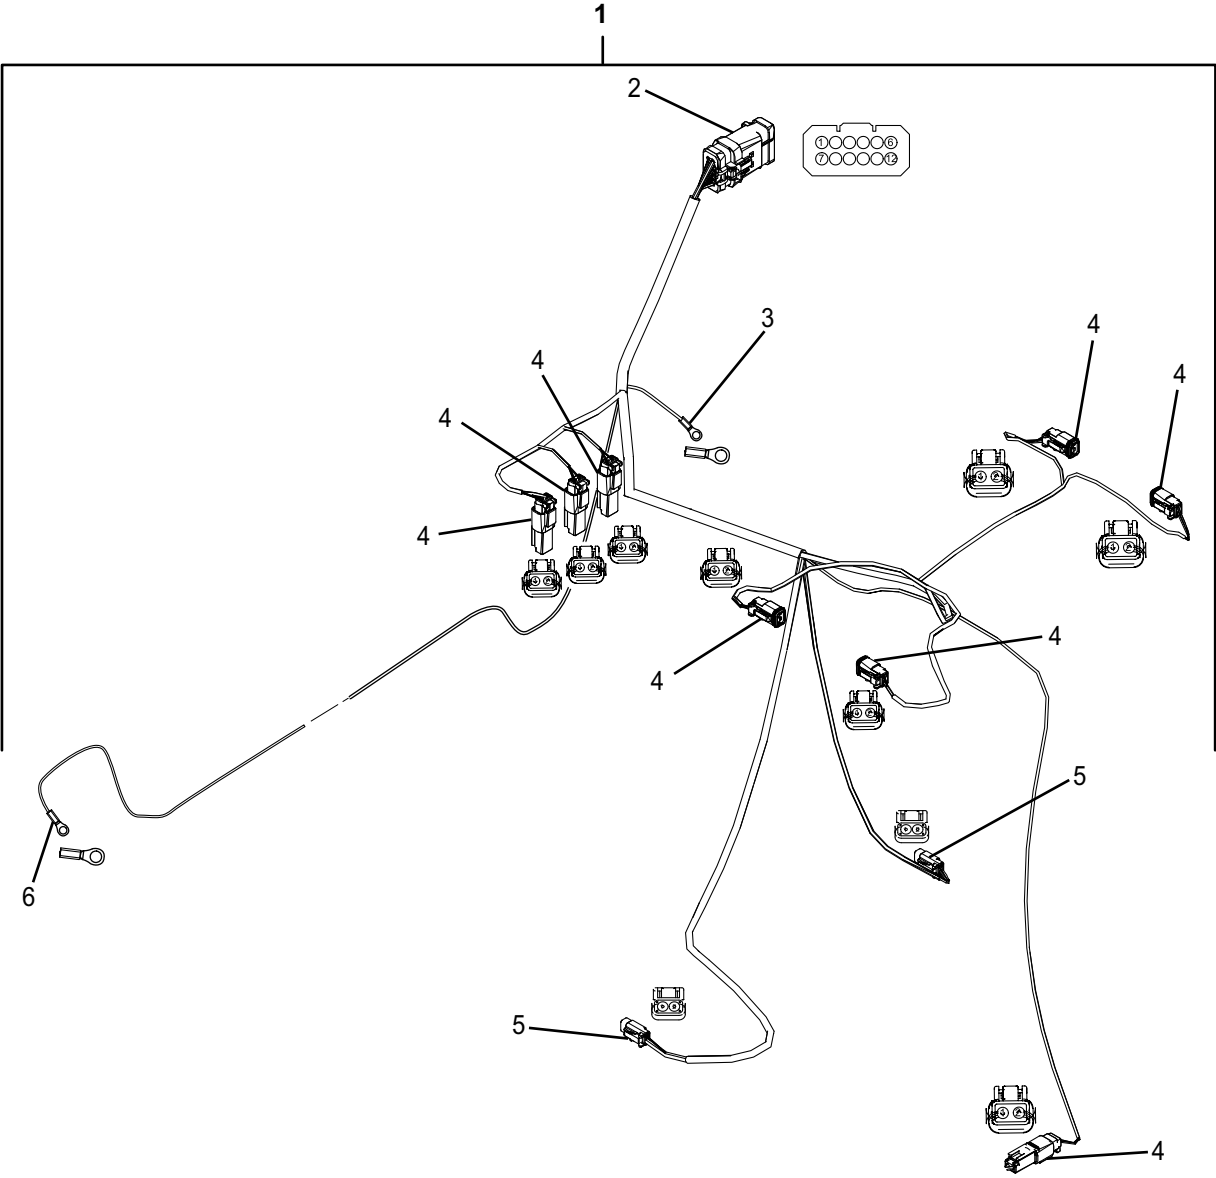


08-04

TABLE FOR FIGURE 08-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04225-801	HARNESS HYD	1	
2	776437-1	•CONNECTOR, C11 FEMALE	1	
3	33463	•RING TERMINAL, GROUND	1	
4	DT06-2S	•CONNECTOR, LEFT FORWARD, RIGHT FORWARD, LEFT REVERSE, RIGHT REVERSE, HYDRAULIC PRESS, FORWARD FILTER, HYDRAULIC PRESS, REAR FILTER, PARKING BRAKE, DUMP UP, DUMP DOWN	8	
5	DTM06-2S	•CONNECTOR	2	
6	2-31886-2	•RING TERMINAL, BACK UP ALARM	1	

FIGURE 08-05 BATTERY AND BATTERY CABLES

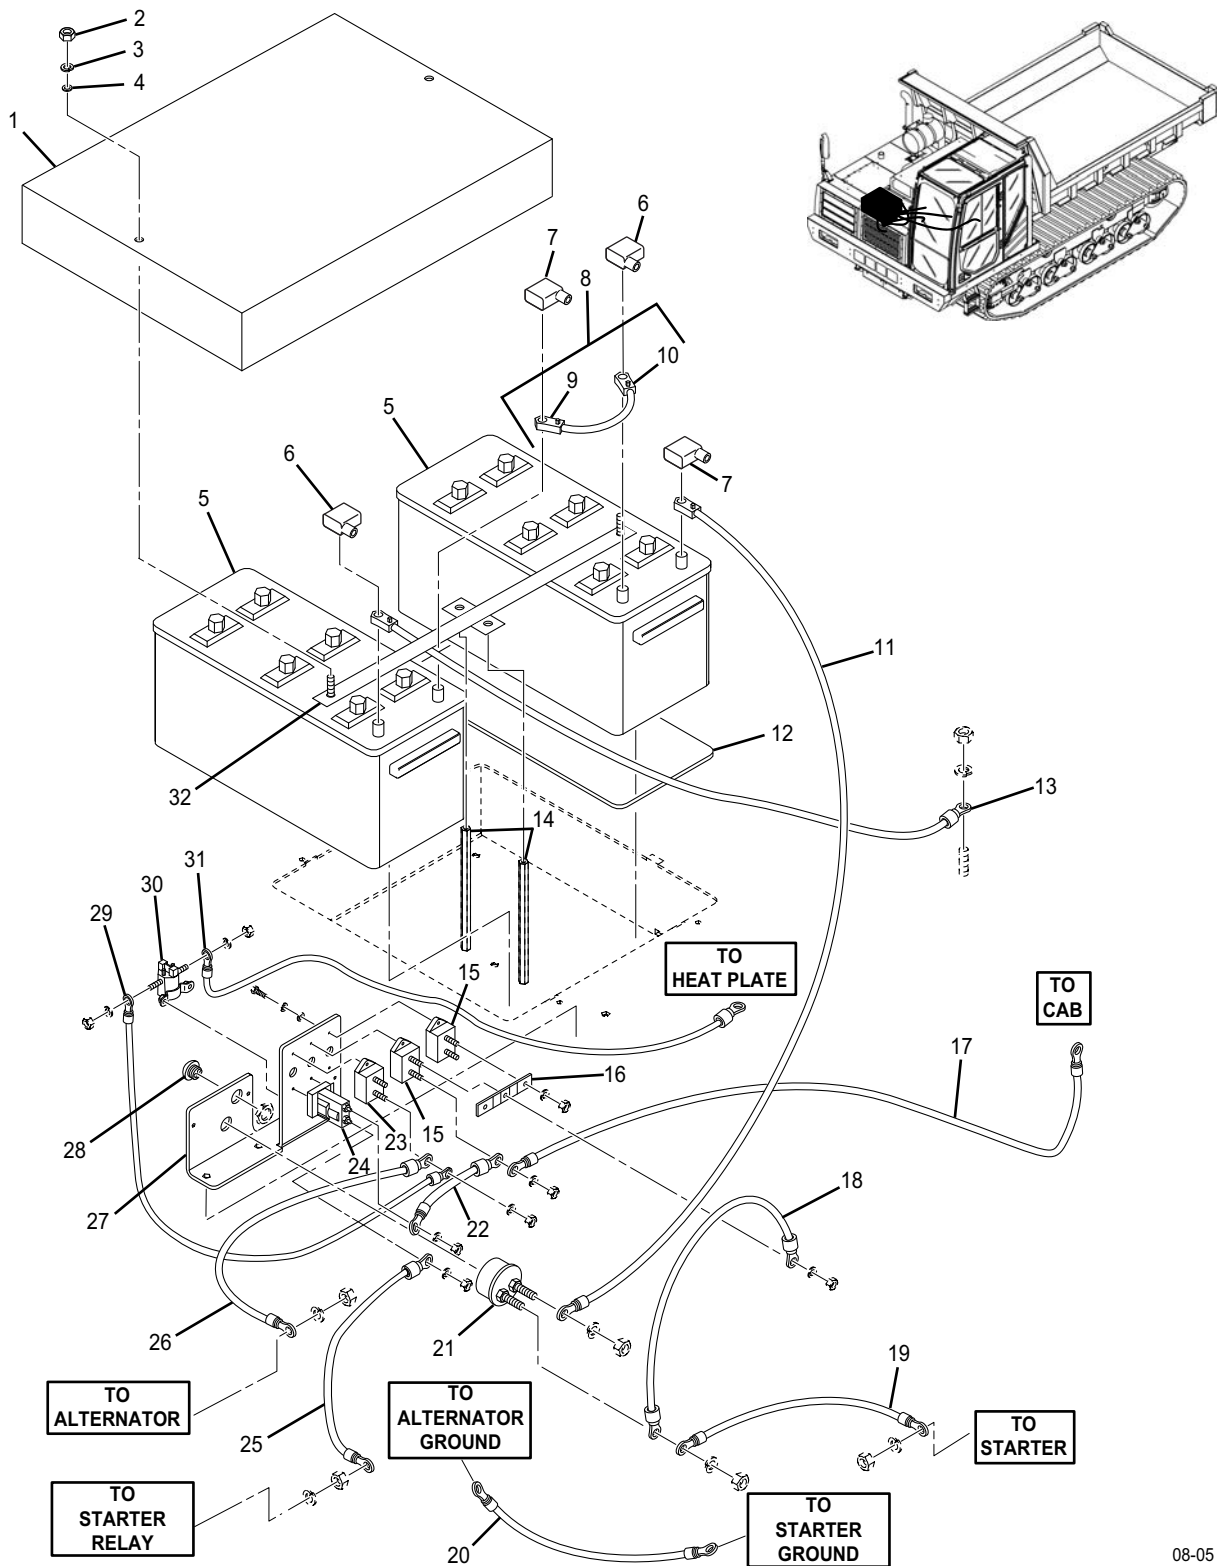

08-05

TABLE FOR FIGURE 08-05:


INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04252-220	COVER, BATTERY	1	
2	0-1200-31008	M10 NUT	2	
3	0-1100-01025	M10 LOCK WASHER	2	
4	0-1120-01020	M10 WASHER	2	
5	A-04225-850	BATTERY 4D	2	
6	A-04225-720	COVER, NEGATIVE POST	2	
7	A-04225-721	COVER, POSTIVE POST	2	
8	A-08025-730	CABLE ASSEMBLY	1	
9	0-5010-0000	•BATTERY TERMINAL, POSITIVE	2	
10	0-5011-0000	•BATTERY TERMINAL, NEGATIVE	2	
11	A-08025-732	CABLE	1	
12	A-04225-990	BATTERY MAT	1	
13	A-08025-733	CABLE	1	
14	A-04252-704	HEX BAR	2	
15	171-2210	BREAKER, 80	2	
16	A-04225-851	BUS BAR	1	
17	A-08025-736	CABLE	1	
18	90000787	CABLE	1	
19	A-08025-734	CABLE	1	
20	90000953	GROUND WIRE	1	
21	7N-0719	SWITCH, BATTERY MAIN W/ KEY	1	
22	90000198	CABLE	1	
23	171-2212	BREAKER, 105	1	
24	391-6302	COIL SWITCH 24V 100A #10000449	1	
25	90000954	CABLE	1	
26	90000952	CABLE	1	
27	A-04252-249	BRACKET, BATTERY MAIN SWITCH	1	

TABLE FOR FIGURE 08-05: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
28	M177A	LIGHT	1	
29	A-08025-735	CABLE	1	
30	10001215	RELAY, HEATER	1	
31	90000777	CABLE	1	
32	A-04252-103	BRACKET, HOLD DOWN	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 08-06 BACK-UP ALARM, HORN, AND HEADLIGHTS

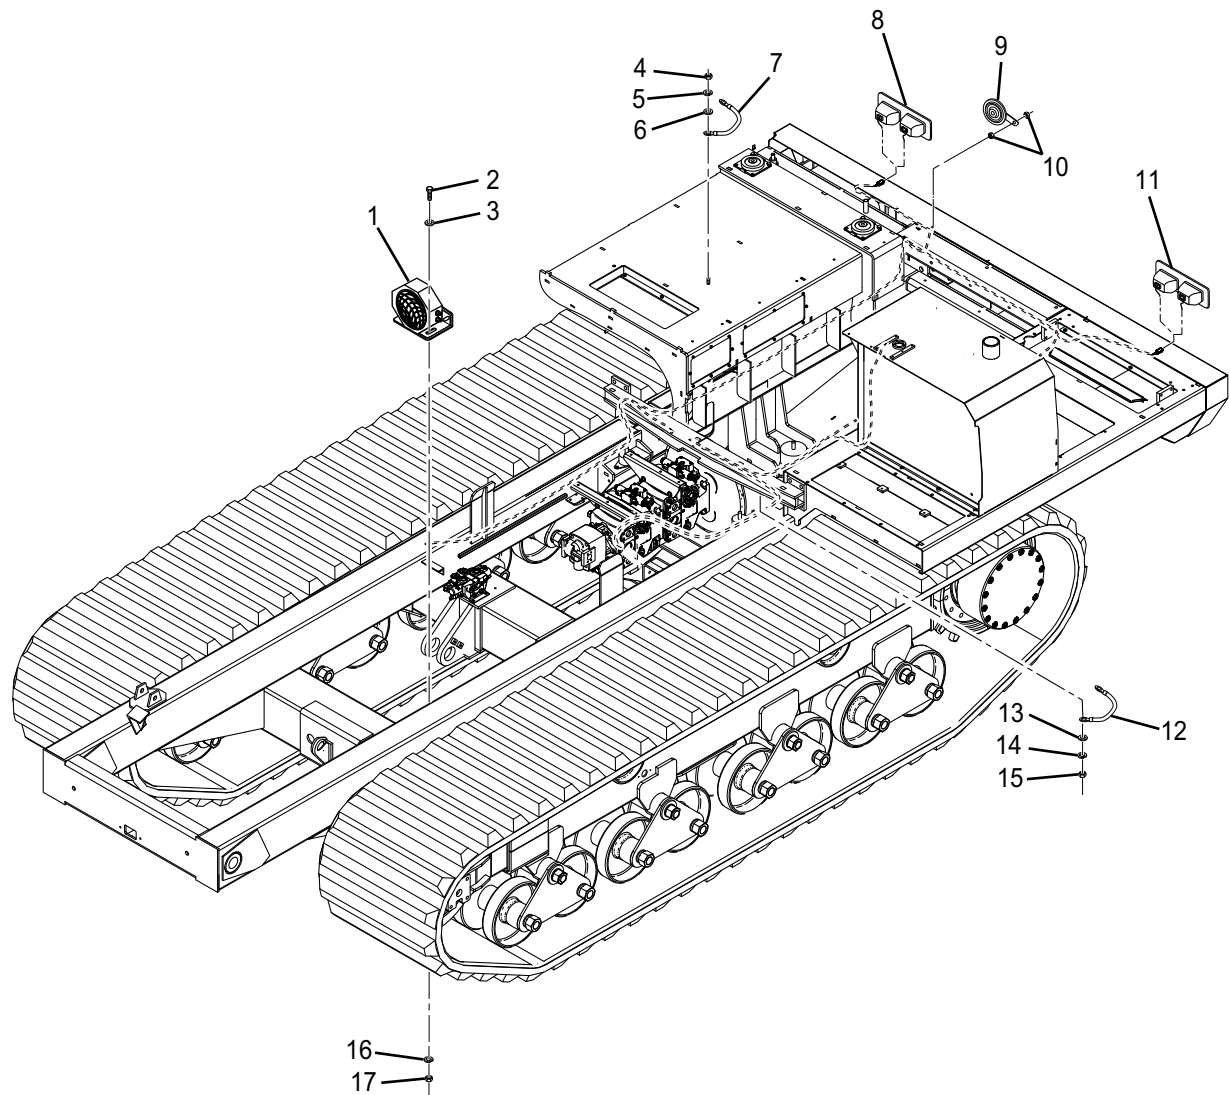

08-06

TABLE FOR FIGURE 08-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	1-46210-1510	BACK-UP ALARM	1	
2	0-1000-00620	M6 X 20 HEX BOLT	2	
3	0-1120-00616	M6 WASHER	2	
4	0-1200-00806	M8 NUT	1	
5	0-1100-00820	M8 LOCK WASHER	1	
6	0-1120-00816	M8 WASHER	1	
7	A-04225-703	CAB GROUND STRAP	1	
8	1-46210-1000	LHS HALOGEN LAMP	1	
9	0-5600-02401	HORN	1	
10	0-1260-00808	FLANGE NUT	2	
11	1-46210-1100	RHS HALOGEN LAMP	1	
12	A-08025-731	GROUND WIRE	1	
13	0-1120-01020	M10 WASHER	1	
14	0-1100-01025	M10 LOCK WASHER	1	
15	0-1200-01008	M10 NUT	1	
16	0-1100-00615	M6 LOCK WASHER	2	
17	0-1200-00605	M6 NUT	2	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 09-01 DECALS

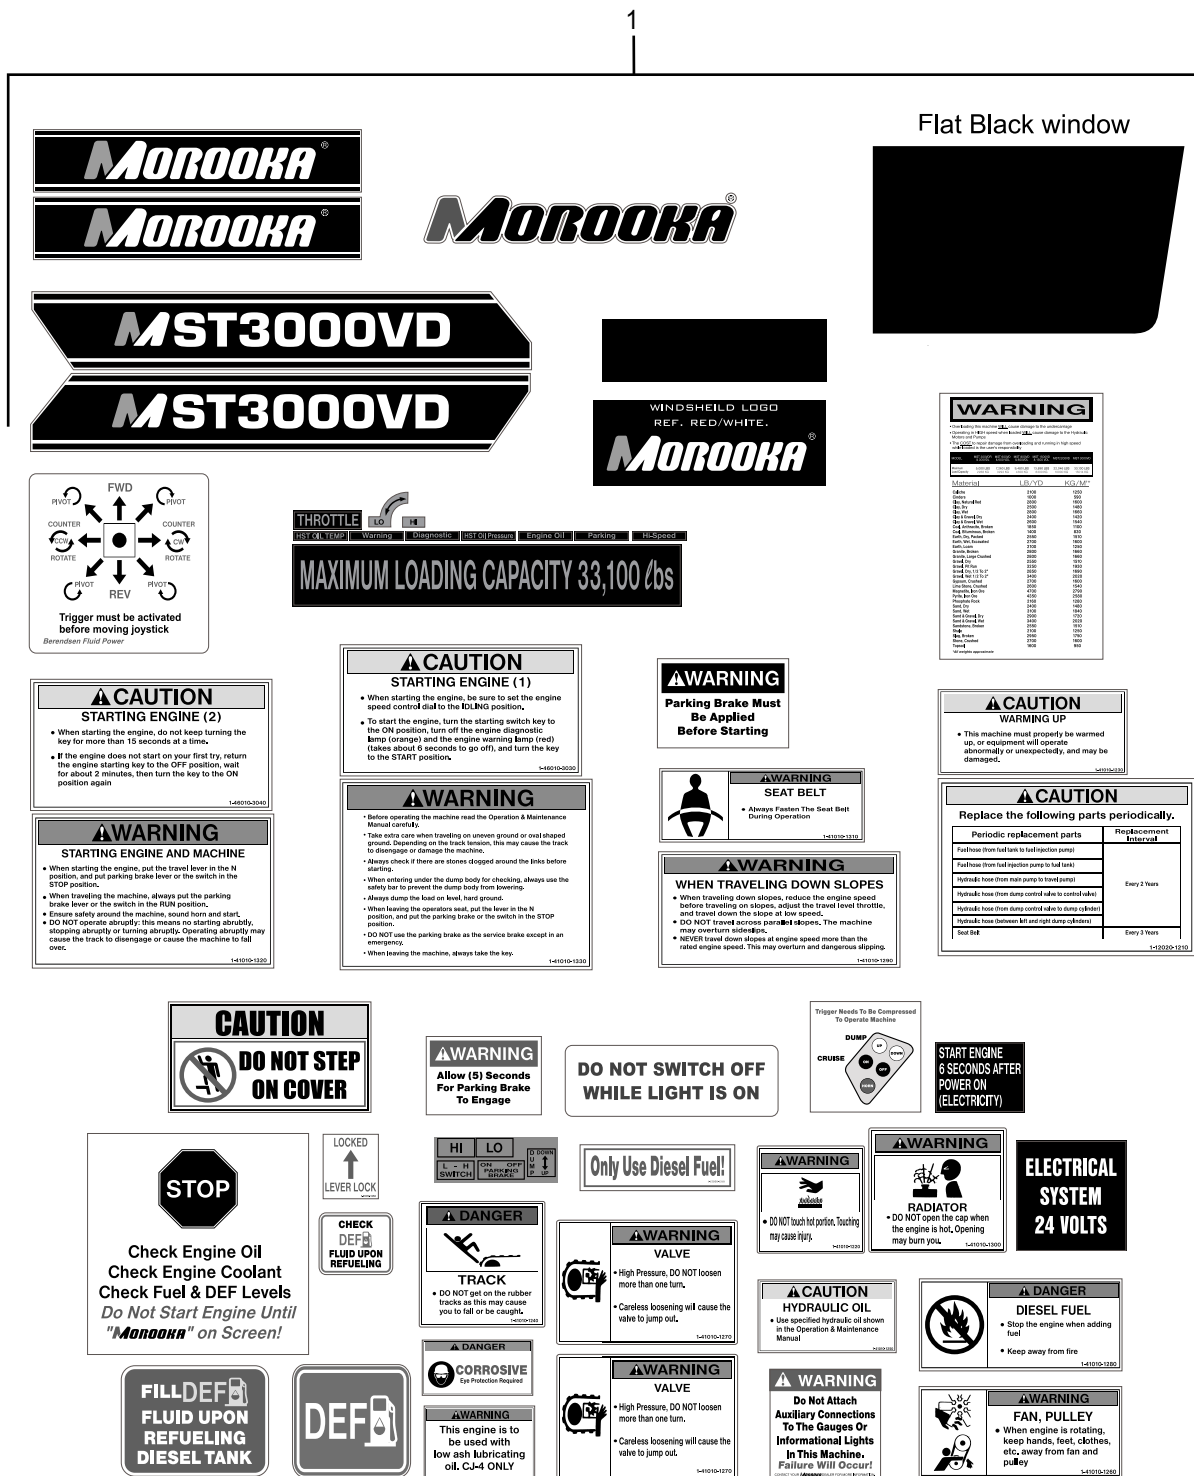


TABLE FOR FIGURE 09-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-08003-700	DECAL KIT	1	

THIS PAGE INTENTIONALLY LEFT BLANK

NUMERICAL INDEX

THIS PAGE INTENTIONALLY LEFT BLANK

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1000-00408	03-11	11	0-1000-01020	02-02	24
0-1000-00512	02-05	5	0-1000-01020	02-05	16
0-1000-00610	03-55	6	0-1000-01020	05-02	13
0-1000-00610	02-04	6	0-1000-01025	02-01	37
0-1000-00610	02-05	4	0-1000-01025	02-05	14
0-1000-00616	02-01	46	0-1000-01025	02-07	2
0-1000-00616	02-02	5	0-1000-01025	06-01	2
0-1000-00620	02-01	20	0-1000-01025	06-04	30
0-1000-00620	02-02	19	0-1000-01030	01-03	13
0-1000-00620	04-01	25	0-1000-01030	01-06	16
0-1000-00620	08-06	2	0-1000-01030	02-06	16
0-1000-00816	02-01	13	0-1000-01030	04-01	20
0-1000-00816	02-06	11	0-1000-01030	05-03	5
0-1000-00820	01-03	5	0-1000-01065	01-06	11
0-1000-00820	02-01	25	0-1000-01230	02-01	32
0-1000-00820	02-02	16	0-1000-01640	02-01	5
0-1000-00820	02-03	16	0-1000-31030	05-03	3
0-1000-00820	02-03	7	0-1000-31225	02-08	2
0-1000-00820	02-06	30	0-1000-31225	05-01	8
0-1000-00820	04-01	1	0-1000-31225	05-02	8
0-1000-00825	02-01	29	0-1000-31225	07-01	9
0-1000-00825	02-02	9	0-1000-31230	05-04	2
0-1000-00825	02-03	11	0-1000-31235	06-01	12
0-1000-00825	02-04	2	0-1000-31240	01-01	6
0-1000-00825	02-06	6	0-1000-31425	05-04	7
0-1000-00825	06-04	35	0-1000-32050	06-01	8
0-1000-00830	02-04	15	0-1000-32060	05-02	20
0-1000-00835	01-03	7	0-1001-31230	07-01	18

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1020-31030	06-04	16	0-1100-01025	02-07	3
0-1020-31275	06-01	5	0-1100-01025	05-02	14
0-1050-01640	01-01	11	0-1100-01025	05-03	4
0-1100-00513	02-05	6	0-1100-01025	06-04	15
0-1100-00615	03-55	5	0-1100-01025	08-05	3
0-1100-00615	02-01	21	0-1100-01025	08-06	14
0-1100-00615	02-02	6	0-1100-01230	02-01	31
0-1100-00615	02-04	9	0-1100-01230	02-08	3
0-1100-00615	02-05	3	0-1100-01230	05-01	7
0-1100-00615	04-01	24	0-1100-01230	05-02	9
0-1100-00615	08-06	16	0-1100-01230	05-04	3
0-1100-00816	02-03	12	0-1100-01230	06-01	13
0-1100-00820	01-03	9	0-1100-01230	06-01	17
0-1100-00820	02-01	14	0-1100-01230	06-04	31
0-1100-00820	02-02	17	0-1100-01230	07-01	8
0-1100-00820	02-03	8	0-1100-01640	02-01	6
0-1100-00820	02-04	3	0-1100-02051	06-01	10
0-1100-00820	02-06	7	0-1100-03690	05-01	10
0-1100-00820	04-01	2	0-1100-03690	05-02	2
0-1100-00820	06-04	34	0-1100-31230	01-01	9
0-1100-00820	08-06	5	0-1100-31435	05-04	6
0-1100-01025	01-03	12	0-1100-31640	01-01	3
0-1100-01025	01-06	15	0-1100-31640	02-03	5
0-1100-01025	02-01	36	0-1110-01020	07-01	23
0-1100-01025	02-02	23	0-1120-00510	02-05	7
0-1100-01025	02-05	13	0-1120-00616	03-55	4
0-1100-01025	02-06	15	0-1120-00616	02-01	22
0-1100-01025	02-06	4	0-1120-00616	02-01	42

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1120-00616	02-02	20	0-1120-01020	06-04	14
0-1120-00616	02-02	7	0-1120-01020	08-05	4
0-1120-00616	02-04	7	0-1120-01020	08-06	13
0-1120-00616	02-05	2	0-1120-01223	02-01	30
0-1120-00616	04-01	23	0-1120-01223	02-08	4
0-1120-00616	08-06	3	0-1120-01223	05-04	4
0-1120-00816	01-03	6	0-1120-01223	06-04	32
0-1120-00816	02-01	15	0-1120-01223	07-01	7
0-1120-00816	02-02	10	0-1120-02032	02-01	1
0-1120-00816	02-02	18	0-1120-31645	02-01	7
0-1120-00816	02-03	9	0-1130-00408	03-11	10
0-1120-00816	02-04	13	0-1140-01032	07-01	24
0-1120-00816	02-04	4	0-1140-31232	01-01	7
0-1120-00816	02-06	29	0-1140-31232	05-01	6
0-1120-00816	02-06	8	0-1140-31445	05-04	5
0-1120-00816	04-01	3	0-1140-31645	01-01	2
0-1120-00816	06-04	33	0-1140-31645	02-03	4
0-1120-00816	08-06	6	0-1200-00504	02-04	18
0-1120-00820	02-03	13	0-1200-00605	02-01	41
0-1120-01020	01-03	11	0-1200-00605	02-02	8
0-1120-01020	01-06	14	0-1200-00605	02-04	10
0-1120-01020	02-01	35	0-1200-00605	08-06	17
0-1120-01020	02-02	22	0-1200-00806	01-03	10
0-1120-01020	02-05	12	0-1200-00806	02-04	12
0-1120-01020	02-06	14	0-1200-00806	02-06	9
0-1120-01020	02-07	4	0-1200-00806	08-06	4
0-1120-01020	05-02	15	0-1200-01008	08-06	15
0-1120-01020	06-01	3	0-1200-31008	01-06	10

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1200-31008	01-06	13	085-6444	03-32	11
0-1200-31008	05-03	7	085-6445	03-33	5
0-1200-31008	08-05	2	085-6446	03-33	3
0-1200-31210	01-01	10	085-6447	03-33	2
0-1200-31210	07-01	17	085-6448	03-33	1
0-1200-31613	01-01	4	085-6449	03-33	4
0-1200-31613	02-03	6	085-6449	03-19	5
0-1210-33629	05-01	9	095-0736	03-19	7
0-1210-33629	05-02	1	095-0755	03-34	40
0-1260-00808	08-06	10	096-2622	03-41	11
0-1311-01000	02-01	18	096-3884	03-41	6
0-1500-00730	06-01	16	096-6166	03-15	3
0-2000-03170	05-01	15	099-0823	03-34	6
0-3200-01025	07-01	27	099-0823	03-29	11
0-3200-01033	07-01	25	099-2374	03-44	13
0-3220-00532	02-01	3	099-3506	03-18	5
0-3220-02122	07-01	22	099-3607	03-34	38
0-3230-00640	07-01	16	10001215	08-05	30
0-3300-02565	05-01	13	10001734	01-04	1
0-3400-00100	05-01	12	10001736	01-04	3
0-3400-00100	05-02	10	10008B-608	01-05	2
0-3400-00100	07-01	12	10010B-610	01-05	7
0-3400-00100	07-01	3	101-2846	03-15	11
0-3400-00170	07-01	10	101-8899	03-41	9
0-5010-0000	08-05	9	101-8900	03-41	2
0-5011-0000	08-05	10	101-8900	03-31	4
0-5600-02401	08-06	9	10-2-0004	04-01	8
0-6003-00214	05-01	17	10-2-0006	04-01	9

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
10-2-0023	04-01	18	1-17710-1410VR	07-01	28
102-8805	03-13	2	1-17710-1430	07-01	20
105-3487	03-35	1	1-17710-1440V	07-01	21
106-2704	03-10	3	1-17710-1460V	07-01	26
11001397	01-04	17	1-17710-1480V	07-01	26
11004919	06-01	21	1-18110-1110	01-01	12
1-1120-02030	06-01	9	1-18320-1111	05-01	18
1-11330-1230	05-01	2	1-18320-1121	05-01	19
1-11510-1210	02-01	40	1-18330-0012	05-01	11
1-11660-1140	02-06	32	1-18330-1151	05-01	14
1-11660-1150	02-06	31	1-18330-1170	05-01	20
1-11660-1160	02-06	35	1-18350-1213	05-02	6
1-11660-1170	02-06	34	1-18350-1230	05-02	5
1-11660-1220	02-06	33	1-18710-1233	07-01	15
1-11660-1231	02-06	12	1-18710-1243	07-01	15
1-11710-1150	07-01	29	1-18710-1312	07-01	13
113-3467	03-49		1-19330-0020	05-01	16
113-3468	03-48	10	1-19350-1180	05-02	3
113-3468	03-49		119-5026	03-48	17
113-8490	03-42	9	1-19660-1231	02-06	20
113-8491	03-42	5	121-1022	03-16	5
113-8492	03-42	8	12162197-B	08-02	4
113-8493	03-42	6	121-7063	03-48	11
1-17330-1210	05-01	3	122-9610	03-50	1
1-17330-1221	05-01	1	1-24340-0011	05-02	7
117-6306	03-44	6	124-3548	03-42	7
117-6356	03-50	4	124-3952	03-14	6
1-17710-1410VL	07-01	28	124-3953	03-14	7

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
124-4042	03-49	5	1-41710-1360	07-01	14
125-7875	03-15		1-41710-1380	07-01	11
127-0580	03-34	45	142-0485	03-46	2
128-2135	03-34	5	144-0195	03-22	4
128-2135	03-52	15	145-2970	03-20	2
128-2135	03-54	1	1-46210-1000	08-06	8
128-2135	03-08	2	1-46210-1100	08-06	11
128-2135	03-23	2	1-46210-1510	08-06	1
128-2135	03-28	5	1-46350-0010	05-02	11
128-2135	03-29	14	1-46640-0010	07-01	4
128-2135	03-30	3	1-51150-1130	02-05	19
128-2136	03-52	14	1-51150-1140	02-05	9
128-2136	03-23	3	1-51150-1180	02-05	10
128-2136	03-29	15	151-6703	03-41	18
128-2136	03-30	6	151-6704	03-41	8
1-28320-1140	05-02	21	151-6777	03-25	4
1-28710-1400	07-01	19	151-6813	03-45	11
1-28710-1500	07-01	19	151-9461	03-41	29
1-32510-1310	02-01	17	151-9497	03-41	
1-32710-1630	02-01	4	151-9497	03-31	
1-32710-1650	02-01	9	151-9498	03-31	8
1-33130-1180	02-06	10	151-9499	03-31	9
138-8454	03-44	5	151-9500	03-31	10
1-39110-1210	01-01	8	151-9501	03-31	11
139-7119	03-47	11	151-9502	03-31	12
141-2759	03-42	4	151-9503	03-31	13
1-41310-1110	05-02	12	151-9504	03-31	14
1-41710-1320	07-01	5	151-9505	03-31	15

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
151-9506	03-31	16	161-3128	03-42	10
151-9507	03-31	17	161-3128	03-42	11
151-9508	03-31	18	161-3128	03-42	12
151-9509	03-31	19	161-3128	03-42	13
151-9510	03-31	20	161-3128	03-42	14
151-9511	03-31		161-3128	03-42	15
151-9512	03-31	21	161-3128	03-42	2
151-9513	03-31	22	161-3128	03-42	3
151-9514	03-31		161-3639	03-41	12
151-9515	03-31	23	161-3669	03-14	
151-9516	03-31	24	161-3670	03-14	
151-9517	03-31	25	161-3694	03-19	13
151-9518	03-31	26	162-0349	03-17	1
151-9519	03-31	27	163-6795	03-34	31
151-9520	03-31	28	163-6795	03-15	12
151-9521	03-31	29	164-0514	03-41	
151-9522	03-31	30	164-0515	03-34	29
151-9523	03-31	31	164-0515	03-41	20
151-9557	03-44	17	164-0519	03-41	
151-9576	03-45	10	164-0655	03-30	7
1-54160-1130	06-01	15	164-8474	03-23	7
155-7042	03-14	9	164-8474	03-29	1
156-6175	03-15	14	167-3630	03-15	
156-6480	03-34	43	167-3631	03-15	
156-6599	03-34	46	167-7039	03-41	7
156-6631	03-47	10	167-7042	03-34	10
156-6643	03-41	1	170-2986	03-16	4
156-6643	03-31	5	170-6888	03-42	1

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
170-9724	03-52		185-8280	03-36	3
170-9724	03-52		185-8280	03-37	3
170-9724	03-52		185-8281	03-37	2
170-9724	03-28		185-8290	03-14	
171-2210	08-05	15	189-2690	03-41	28
171-2212	08-05	23	189-2690	03-31	3
171-7325	03-34	42	189-2693	03-19	12
171-7325	03-38	2	189-2694	03-19	6
171-7325	03-28	16	189-2864	03-34	18
171-7477	03-19	15	19005-0004	08-03	3
176-1931	03-55	1	19070-0076	08-02	5
176-1941	03-36	4	19073-0026	08-02	8
176-1941	03-37	4	19073-0086	08-01	7
176-1986	03-34	12	19073-0190	08-03	4
178-5570	03-40	3	198-3899	03-07	2
178-5572	03-47	3	1R-5998	03-34	19
178-5573	03-41	14	201-4391	03-41	
178-5573	03-47	7	201-4417	03-34	
178-5574	03-41	24	211280A	01-02	5
178-5574	03-47	2	213-0772	03-16	6
178-5576	03-46	6	229-9028	03-08	12
178-5659	03-06	3	2-31886-2	08-04	6
185-8180	03-41	16	234-6579	03-52	9
185-8182	03-25		234-6579	03-28	1
185-8187	03-25		235-8874	03-48	14
185-8205	03-28	8	235-8929	03-18	7
185-8205	03-29	12	235-8966	03-30	5
185-8221	03-45	1	235-9001	03-23	17

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
238-2210	03-10	2	2BVL2008F	01-05	5
2404-04-06	06-05	8	2G-8767	04-01	11
2404-10-08	01-05	6	2L-8067	03-15	
2404-12-16	06-05	4	2L-8075	03-15	
2404-16-16	06-05	5	2U-2552	03-39	1
2404-20-24	06-05	13	305-0419	03-49	29
2406-20-08	06-04	8	316-8821	03-51	6
2406-20-16	06-04	25	316-8854	03-47	8
243-4510	03-15		316-8882	03-04	1
245-7790	03-52	10	316-8889	03-05	1
245-7790	03-29	4	316-8892	03-06	2
245-7895	03-07	4	316-8894	03-05	4
2501-08-06	01-05	1	316-8897	03-07	1
2501-20-24	06-05	10	316-8922	03-01	1
2501-20-24	06-05	2	316-8930	03-17	4
2501-24-24	06-05	14	316-8931	03-20	1
251-0637	03-40	6	316-8932	03-20	5
251-0637	03-15	7	316-8968	03-02	1
255-2752	03-12	1	316-8987	03-05	2
25-9490	04-01	21	316-8987	03-06	9
259-7354	03-41	19	324-5770	03-16	16
264-5732	08-01	3	324-5771	03-16	1
267-7064	03-38	4	327-6436	03-11	2
2700-LN-20-20	06-04	24	327-6463	03-29	17
2703-LN-04-04-04	06-03	28	327-6464	03-29	9
280-8618	03-34	41	327-6465	03-29	2
281-0791	03-49	12	327-6466	03-29	13
293-1139	03-48	6	327-6467	03-29	16

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
327-6470	03-30	13	327-7538	03-10	1
327-6471	03-30	10	327-9967	03-15	5
327-6472	03-30	1	328-0246	03-11	8
327-6475	03-28		328-0397	03-10	4
327-6476	03-28	3	331-7979	03-23	11
327-6479	03-18	10	331-8008	03-23	1
327-6480	03-28	6	333-4161	03-25	6
327-6484	03-08	5	333-4176	03-26	9
327-6486	03-24	1	333-4179	03-06	5
327-6487	03-24	2	333-4180	03-07	6
327-6533	03-08	4	333-4181	03-07	8
327-6534	03-08	1	333-4344	03-25	7
327-6535	03-08	11	333-4345	03-27	1
327-6536	03-08	9	333-4346	03-27	2
327-6537	03-08	6	333-4347	03-27	3
327-6540	03-03	1	333-4353	03-28	2
327-6550	03-34	23	333-4363	03-29	10
327-6554	03-23	4	333-4364	03-30	12
327-6616	03-23	8	333-4365	03-30	11
327-6618	03-08	3	333-4366	03-30	9
327-6625	03-25	9	33463	08-04	3
327-6640	03-06	4	334-6388	03-44	1
327-6642	03-06	6	334-6389	03-45	2
327-6643	03-06	8	334-6451	03-52	4
327-6645	03-07	9	334-6462	03-52	13
327-6646	03-07	5	334-6466	03-52	6
327-6647	03-07	3	334-6469	03-45	9
327-6648	03-07	7	334-6478	03-45	13

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
334-6479	03-45	3	334-6535	03-41	15
334-6481	03-45	8	334-6536	03-41	17
334-6482	03-45	7	334-6537	03-41	21
334-6484	03-45	14	334-6538	03-41	4
334-6485	03-45	4	334-6538	03-31	6
334-6486	03-45		334-6542	03-34	24
334-6488	03-45		334-6546	03-34	9
334-6489	03-45		334-6549	03-34	7
334-6490	03-45	5	334-6550	03-34	32
334-6492	03-44	8	334-6551	03-34	28
334-6493	03-46	7	334-6552	03-34	25
334-6495	03-46	5	334-6553	03-36	2
334-6497	03-44	10	334-6554	03-36	1
334-6499	03-44	2	334-6557	03-34	30
334-6501	03-44	18	334-6558	03-37	1
334-6504	03-44	19	334-6559	03-37	5
334-6505	03-44	12	334-6562	03-34	16
334-6507	03-44	15	334-6564	03-34	27
334-6508	03-44	11	334-6565	03-34	33
334-6509	03-44	14	334-6566	03-34	3
334-6526	03-41	26	334-6567	03-34	4
334-6526	03-31	1	334-6568	03-34	11
334-6527	03-41	25	33467	08-01	8
334-6528	03-41	3	336-1132	03-06	1
334-6528	03-31	7	336-1206	03-08	10
334-6530	03-41		336-5895	03-16	13
334-6531	03-41	22	340-6484	03-17	3
334-6534	03-41	5	340-6582	03-38	5

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
340-6584	03-38	1	346-7361	03-28	9
340-6585	03-38	3	346-7363	03-28	14
340-6586	03-34	26	346-7366	03-28	13
340-6587	03-34	13	346-7372	03-29	5
340-6592	03-19	2	346-7375	03-34	22
340-6593	03-18	4	346-7427	03-09	2
340-6594	03-18	3	346-7428	03-09	3
340-6595	03-18	9	346-7429	03-09	1
340-6625	03-47	6	346-7906	03-19	1
340-6714	03-53	1	346-7907	03-19	8
340-6715	03-54	3	346-7908	03-19	10
340-6718	03-54	2	346-7922	03-18	1
340-6719	03-54	5	346-7924	03-19	9
340-6720	03-53	2	346-7953	03-25	1
340-6725	03-53	3	346-7957	03-26	5
340-6727	03-47	12	346-7976	03-40	2
340-6742	03-28	12	346-7998	03-26	1
342-3067	03-15	4	346-8025	03-52	5
342-3546	03-14	12	346-8030	03-47	9
342-3548	03-14	2	346-8036	03-45	15
342-3549	03-25	3	346-8052	03-17	9
342-3550	03-47	1	346-8062	03-25	8
342-3551	03-47	5	346-8063	03-41	23
342-3552	03-47	4	350-8461	03-12	2
342-3564	03-26	6	353-1845	03-25	2
342-3601	03-15	8	353-1846	03-17	6
342-3747	03-28	11	353-1887	03-34	44
346-7359	03-30	2	353-1910	03-11	6

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
353-2020	03-38	7	363-9457	03-49	36
353-2024	03-34	47	363-9458	03-49	35
353-2046	03-23	15	363-9459	03-49	7
353-2087	03-20	3	363-9460	03-49	24
356-4944	03-49	4	363-9461	03-49	10
357-3845	03-52	12	363-9462	03-49	30
357-3847	03-52	7	363-9463	03-49	28
357-3848	03-52	1	363-9464	03-49	33
357-3861	03-30	8	363-9465	03-49	18
357-3891	03-25	5	363-9466	03-49	8
357-3898	03-28	4	363-9467	03-49	41
357-3899	03-28	7	363-9468	03-49	40
357-3901	03-28		363-9469	03-49	38
357-3964	03-28	15	363-9470	03-49	23
357-3966	03-29	8	363-9471	03-49	25
357-3975	03-28	10	363-9472	03-49	37
357-3977	03-21	1	363-9473	03-49	26
357-4127	03-40	4	363-9474	03-49	27
363-9373	03-44	16	363-9475	03-49	39
363-9402	03-49	16	363-9476	03-49	21
363-9449	03-49	32	363-9477	03-49	6
363-9450	03-49	17	363-9478	03-49	22
363-9451	03-49	1	363-9480	03-49	11
363-9452	03-49	15	363-9481	03-49	31
363-9453	03-49	34	363-9482	03-49	3
363-9454	03-49	13	363-9482	03-49	9
363-9455	03-49	14	363-9483	03-49	19
363-9456	03-49	20	363-9493	03-48	13

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
363-9494	03-48	18	3946326S	01-06	3
363-9495	03-48	16	3947069S	01-06	9
363-9594	03-52	8	3954490S	01-06	7
363-9597	03-52	2	3E-8020	03-34	15
363-9598	03-52	11	3S-2093	03-48	15
369-0153	03-16	2	3S-2093	03-11	9
372-9285	03-14		3S-2093	03-15	6
372-9334	03-14	1	3S-2093	03-15	
372-9365	03-49	2	3S-2093	03-16	3
383-5545	03-32	6	423-5588	03-48	7
383-5556	03-32	1	430-5703	03-44	4
383-5577	03-32	5	430-9449	01-02	6
383-5578	03-32	7	435-9945	03-48	12
383-5579	03-32	9	4404-10-12	01-04	6
383-5580	03-32	8	447-1711	03-17	10
383-5581	03-32	10	451-2175	03-17	8
383-5582	03-32	4	451-2175	03-20	7
383-5583	03-32	3	451-2178	03-20	4
383-5631	03-14	13	453-1256	03-20	6
383-5632	03-14	11	453-1259	03-17	2
383-5644	03-38	6	453-4794	03-45	16
383-5650	03-41	27	4B-4278	03-34	35
383-5650	03-31	2	4I-1205	03-34	37
383-5651	03-32	2	4I-1260	03-19	4
383-5666	03-34	34	4I-3090	03-40	5
391-6302	08-05	24	4I-3144	03-34	2
3918206S	01-06	4	4I-4270	03-34	14
3918234S	01-06	12	4I-4286	03-41	10

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
4I-4361	03-19	3	6500-16-16	06-05	23
50001930	01-04	2	6500-20-20	06-04	23
50002049	01-05	12	6500-20-20	06-05	12
50002161	01-04	15	6500-24-24	06-05	18
50002162	01-04	18	6505-08-08	06-04	7
50002163	01-04	16	6505-16-16	06-04	26
5406-08-06	01-02	4	6602-20-20-20	06-04	19
5406-P-08	02-06	17	6701-L-20-20	06-05	16
5500-08-08	01-05	4	6801-04-06-NWO	06-03	19
5A-3604	03-05	3	6801-08-08-NWO	06-04	10
5C-2890	03-46	3	6801-08-10-NWO	06-04	12
5C-7793	03-34	39	6801-16-16-NWO	06-05	20
5C-8312	03-44	7	6801-LL-12-12-NWO	06-02	8
5C-9553	03-48	8	6802-08-08-NWO	06-04	5
5C-9553	03-26	8	6802-12-12-NWO	06-05	26
5D-4822	03-18	6	6802-12-16-NWO	06-02	2
5P-3059	03-15		6803-20-20-20-NWO	06-04	9
5P-8500	03-11	7	6804-08-10-08-NWO	06-03	16
6400-04-06-O	06-03	11	6804-16-16-16-NWO	06-05	22
6400-04-06-O	06-03	23	6804-20-20-20-NWO	06-04	29
6400-04-06-O	06-05	25	6G-2256	04-01	10
6400-08-10-O	06-03	15	6G-2263	04-01	12
6400-12-12-O	06-03	17	6I-5342	03-19	11
6400-12-20-O	06-03	13	6V-3265	03-21	2
6400-16-16-O	06-03	1	6V-3265	03-22	3
6400-20-20-O	06-05	17	6V-5683	03-39	2
6400-20-24-O	06-04	21	6V-8202	03-04	2
6400-24-24-O	06-05	19	6V-8231	03-14	4

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
6V-9491	03-15	2	80001496	01-05	15
7005-04-12	06-03	30	80001516	01-04	13
7123-2128	08-02	2	80001751	01-05	8
776433-1	08-02	3	8-12670-1210	06-04	27
776434-1	08-01	2	8C-7581	03-11	4
776437-1	08-03	7	8T-0337	03-15	10
776437-1	08-04	2	8T-4121	03-48	5
776438-1	08-01	4	8T-4121	03-50	2
7I-2673	03-15	1	8T-4121	03-01	2
7K-1181	03-10	5	8T-4121	03-02	3
7N-0719	08-05	21	8T-4121	03-16	12
7T-6799	03-13	1	8T-4121	03-17	5
7X-7729	03-48	2	8T-4121	03-21	3
7X-7729	03-08	7	8T-4121	03-22	2
7Y-3470	03-14	8	8T-4121	03-23	5
7Y-3472	03-14	5	8T-4121	03-26	3
7Y-3474	03-22	5	8T-4133	03-34	36
7Y-3950	03-15		8T-4136	03-48	1
7Y-3951	03-15		8T-4136	03-08	8
7Y-3954	03-15		8T-4137	03-34	1
7Y-3955	03-15		8T-4137	03-16	11
7Y-3962	03-15		8T-4137	03-26	4
7Y-3963	03-15		8T-4171	03-16	15
7Y-3964	03-15		8T-4179	03-23	13
7Y-3965	03-15		8T-4182	04-01	13
7Y-5505	03-15	9	8T-4190	03-23	9
7Y-8561	03-46	1	8T-4191	03-48	4
80001395	01-04	10	8T-4191	03-50	3

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
8T-4191	03-02	2	9X-2041	03-25	
8T-4191	03-17	7	9X-2041	03-26	2
8T-4191	03-21	4	9X-2042	03-34	17
8T-4191	03-22	1	9X-2042	03-40	1
8T-4191	03-23	6	9X-2042	03-41	13
8T-4192	03-23	14	9X-2042	03-44	3
8T-4195	03-01	3	9X-2042	03-45	12
8T-4223	03-23	12	9X-2042	03-45	
8T-4224	03-18	2	9X-2042	03-54	4
8T-4648	03-23	16	9X-2042	03-11	1
8T-4779	03-34	20	9X-2042	03-14	10
8T-8442	03-48	3	9X-2042	03-15	13
8T-8729	03-13	3	9X-2042	03-18	8
8T-8729	03-15		9X-2042	03-29	3
8T-8737	03-13	4	9X-2042	03-30	4
8T-8737	03-15		9X-2043	03-51	5
8Y-6352	03-29	7	9X-2044	03-45	6
90000198	08-05	22	9X-2044	03-14	3
90000777	08-05	31	9X-2045	03-19	14
90000787	08-05	18	9X-2616	03-06	7
90000952	08-05	26	9X-6153	03-39	3
90000953	08-05	20	9X-8256	03-35	2
90000954	08-05	25	9X-8256	03-46	4
9K-0700	03-21	5	9X-8256	03-48	9
9W-0852	03-15		9X-8256	03-16	14
9X-2041	03-34	8	9X-8256	03-26	7
9X-2041	03-44	9	9X-8257	03-34	21
9X-2041	03-52	3	9X-8257	03-23	10

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04215-220	02-05	1	A-04225-850	08-05	5
A-04215-705	02-05	18	A-04225-851	08-05	16
A-04215-706	01-04	7	A-04225-990	08-05	12
A-04215-706	02-05	17	A-04232-200	05-02	22
A-04216-700	06-01	19	A-04233-200	05-01	5
A-04216-701	06-01	20	A-04235-100	05-02	4
A-04225-700	02-03	1	A-04251-114	02-01	28
A-04225-701	02-03	17	A-04251-262	02-01	39
A-04225-702	02-03	18	A-04251-263	02-01	38
A-04225-703	08-06	7	A-04251-264	02-01	19
A-04225-704	03-16	18	A-04251-265	02-01	16
A-04225-705	03-51	4	A-04251-273	02-01	26
A-04225-706	03-11	5	A-04251-274	02-01	23
A-04225-707	03-16	19	A-04251-275	02-01	24
A-04225-708	06-05	6	A-04251-339	02-01	27
A-04225-710	02-01	44	A-04251-346	02-01	34
A-04225-720	08-05	6	A-04252-103	08-05	32
A-04225-721	08-05	7	A-04252-108	02-04	1
A-04225-800	08-01	1	A-04252-115	02-02	15
A-04225-801	08-04	1	A-04252-118	02-03	3
A-04225-802	08-03	1	A-04252-141	05-04	1
A-04225-803	08-02	1	A-04252-142	02-08	1
A-04225-810	03-16	9	A-04252-162	02-03	2
A-04225-811	03-10	6	A-04252-209	02-02	3
A-04225-812	03-16	7	A-04252-212	02-04	8
A-04225-813	03-16	8	A-04252-219	02-01	10
A-04225-814	03-16	10	A-04252-220	08-05	1
A-04225-815	02-01	47	A-04252-223	02-04	11

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04252-224	02-04	20	A-04253-701	03-55	10
A-04252-225	02-04	5	A-04253-703	03-29	6
A-04252-226	02-04	14	A-04261-703	06-01	22
A-04252-227	02-04	16	A-04261-704	06-01	24
A-04252-228	02-04	11	A-04261-705	06-01	25
A-04252-229	02-04	17	A-04261-706	06-04	17
A-04252-234	02-01	45	A-04261-707	06-04	13
A-04252-249	08-05	27	A-04262-700	06-03	24
A-04252-270	05-02	17	A-04262-701	06-03	20
A-04252-271	05-02	17	A-04262-702	06-04	6
A-04252-273	05-02	16	A-04263-702	06-03	31
A-04252-701	02-03	10	A-04265-700	06-03	7
A-04252-702	02-04	22	A-04265-701	06-03	9
A-04252-703	02-02	14	A-04265-702	06-03	8
A-04252-704	08-05	14	A-04266-200	02-06	27
A-04252-705	02-04	21	A-04266-700	02-06	22
A-04252-707	02-01	11	A-04266-705	02-06	18
A-04252-708	02-01	43	A-04266-707	02-06	26
A-04252-710	02-04	19	A-04266-720	02-06	23
A-04252-753	02-02	4	A-04266-721	02-06	24
A-04252-754	02-02	2	A-04266-723	02-06	25
A-04253-129	03-55	2	A-04267-750	02-06	21
A-04253-131	03-11	3	A-04267-751	02-06	13
A-04253-202	03-51	1	A-04267-808	02-05	15
A-04253-221	03-55	8	A-04267-900	06-02	4
A-04253-224	03-55	3	A-04267-902	06-02	5
A-04253-225	03-55	9	A-04267-903	06-02	6
A-04253-226	03-55	7	A-04267-910	06-03	3

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04267-912	06-03	4	A-08012-702	01-06	17
A-04267-913	06-03	5	A-08012-703	01-06	2
A-04267-914	06-02	7	A-08013-121	01-04	5
A-04267-914	06-03	6	A-08013-202	02-06	2
A-04269-100	06-04	3	A-08013-203	02-06	3
A-04269-101	06-04	1	A-08013-701	01-04	4
A-04269-104	02-03	14	A-08013-702	02-06	1
A-04269-116	02-03	15	A-08013-703	02-06	5
A-04269-700	06-04	2	A-08015-107	02-05	11
A-04271-111	02-01	2	A-08015-751	01-05	3
A-04271-200	07-01	6	A-08015-752	01-05	9
A-04271-250	07-01	2	A-08015-850	02-05	8
A-04291-704	01-02	2	A-08016-700	06-01	18
A-04292-138	04-01	4	A-08016-800	06-01	14
A-04292-713	04-01	22	A-08017-112	01-03	8
A-04292-714	04-01	5	A-08017-205	01-03	3
A-04292-715	04-01	7	A-08017-206	01-03	4
A-04292-717	04-01	6	A-08017-208	01-03	2
A-04292-718	04-01	14	A-08017-700	01-03	1
A-04352-272	05-02	16	A-08017-755	01-04	8
A-08003-700	09-01	1	A-08017-756	01-04	9
A-08011-101	01-01	1	A-08017-757	01-04	11
A-08011-102	01-01	1	A-08017-758	01-04	12
A-08011-700	01-01	5	A-08017-759	01-04	14
A-08012-111	02-06	28	A-08025-700	03-51	2
A-08012-125	01-06	19	A-08025-701	03-51	3
A-08012-700	01-06	1	A-08025-705	03-16	17
A-08012-701	01-06	18	A-08025-730	08-05	8

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-08025-731	08-06	12	A-08061-701	06-01	11
A-08025-732	08-05	11	A-08061-702	06-01	23
A-08025-733	08-05	13	A-08063-700	06-03	32
A-08025-734	08-05	19	A-08063-701	05-02	18
A-08025-735	08-05	29	A-08066-106	02-06	19
A-08025-736	08-05	17	A-08067-701	06-05	15
A-08033-100	05-01	4	A-08067-702	06-05	9
A-08051-100	02-01	12	A-08067-703	06-03	22
A-08051-101	02-01	8	A-08067-704	06-03	18
A-08051-113	02-01	33	A-08067-705	06-03	14
A-08052-102	02-02	1	A-08067-706	06-03	12
A-08052-117	02-07	1	A-08067-707	06-03	10
A-08052-152	05-03	1	A-08067-708	06-03	2
A-08052-153	05-03	6	A-08067-709	06-05	21
A-08052-155	02-07	7	A-08067-710	06-05	24
A-08052-156	02-07	9	A-08067-711	06-02	1
A-08052-157	02-07	8	A-08067-713	06-04	28
A-08052-158	02-07	6	A-08067-714	06-04	18
A-08052-159	02-07	5	A-08067-715	06-05	1
A-08052-170	02-02	21	A-08067-716	06-04	22
A-08052-192	05-03	2	A-08067-717	06-05	3
A-08052-211	02-02	13	A-08067-718	06-04	11
A-08052-212	02-02	12	A-08067-719	06-04	4
A-08052-213	02-02	11	A-08067-721	06-02	12
A-08061-201	06-01	1	A-08067-722	06-02	11
A-08061-202	06-01	6	A-08067-723	06-02	10
A-08061-203	06-01	4	A-08067-724	06-02	9
A-08061-204	06-01	7	A-08067-725	06-03	27

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-08067-726	06-05	7	F90388-05	01-05	13
A-08067-727	06-03	26	FF63009	01-05	14
A-08067-728	06-03	21	FS1098	01-05	11
A-08067-729	06-03	25	FS90136-01	01-05	10
A-08067-730	06-03	29	M177A	08-02	9
A-08067-742	06-05	11	M177A	08-05	28
A-08067-825	06-02	3	M85900401	05-02	19
A-08067-825	06-04	20			
A-08071-108	07-01	1			
A-08071-109	07-01	30			
A-08091-760	01-02	1			
A-08091-761	01-02	3			
A-08092-701	04-01	19			
A-08092-702	04-01	16			
A-08092-706	04-01	17			
A-08092-709	04-01	15			
A-269X	08-02	7			
AF1828	01-06	8			
AF1894M	01-06	6			
AH19259	01-06	5			
BAR-2156	08-02	6			
BRA-2156	08-03	6			
DRC16-70SA	08-01	6			
DT06-2S	08-03	5			
DT06-2S	08-04	4			
DT06-3S	08-03	2			
DTM06-2S	08-04	5			
DTP06-4S	08-01	5			

RUBBER CRAWLER CARRIER MST-3000VD PARTS LIST

Document No. MA3000VDT4F-00P

First Edition: November, 2016

Issued by: Morooka America, LLC
10487 Washington Hwy.
Glen Allen, VA 23059
USA

No part of this manual can be reproduced in any form without permission.

